



Prod.nr.	EAN	Voltage	Capacity	Type	Brand	Compatible Camera's
CAE0001	8718503026770	3.7V	950mAh	D30	AEE	SD-18, SD-19, SD-20, SD-21, SD-22, SD-23
CAE0002	8718503026787	3.7V	1500mAh	DS-S50	AEE	S50
CCA0001	8717825940245	3.7V	850mAh	NB-5L	Canon	Digital IXUS 700 IS, Digital IXUS 800 IS, Digital IXUS 850 IS, Digital IXUS 860 IS, Digital IXUS 870 IS, Digital IXUS 90 IS, Digital IXUS 900 Ti, Digital IXUS 950 IS, Digital IXUS 960 IS, Digital IXUS 970 IS, Digital IXUS 980 IS, Digital IXUS 990 IS, IXY 830 IS, IXY Digital 1000, IXY Digital 1000 IS, IXY Digital 2000 IS, IXY Digital 3000 IS, IXY Digital 800, IXY Digital 800 IS, IXY Digital 810 IS, IXY Digital 820 IS, IXY Digital 830 IS, IXY Digital 900, IXY Digital 900 IS, IXY Digital 910 IS, IXY Digital 920 IS, IXY Digital 95 IS, PowerShot SD700, PowerShot SD700 IS, PowerShot SD790 IS, PowerShot SD800 IS, PowerShot SD850 IS, PowerShot SD860 IS, PowerShot SD870 IS, PowerShot SD880 IS, PowerShot SD890 IS, PowerShot SD900, PowerShot SD950 IS, PowerShot SD960 IS, PowerShot SD970 IS, PowerShot SD990 IS, PowerShot S100 (2011), PowerShot S110 (GPS), PowerShot SX200 IS, PowerShot SX210 IS, PowerShot SX220 HS, PowerShot SX230 HS
CCA0002	8717825940207	3.7V	950mAh	NB-1L NB-1LH	Canon	DC-4700, Digital IXUS 200a, Digital IXUS 300, Digital IXUS 300a, Digital IXUS 320, Digital IXUS 330, Digital IXUS 400, Digital IXUS 430, Digital IXUS 500, Digital IXUS V, Digital IXUS V2, Digital IXUS V3, Digital IXUS VII, IXY Digital 200, IXY Digital 200a, IXY Digital 300, IXY Digital 300a, IXY Digital 320, IXY Digital 400, IXY Digital 430, IXY Digital 450, IXY Digital 500, IXY Digital S200, IXY Digital S230, IXY Digital S330, PowerShot S100 (2000), PowerShot S110, PowerShot S110, PowerShot S200, PowerShot S230, PowerShot S300, PowerShot S330, PowerShot S400, PowerShot S410, PowerShot S500
CCA0003	8717825940221	3.7V	900mAh	NB-3L	Canon	Digital IXUS 700, Digital IXUS 750, Digital IXUS i, Digital IXUS i5, Digital IXUS II, Digital IXUS IIs, IXY Digital 30, IXY Digital 30a, IXY Digital 600, IXY Digital 700, IXY Digital D30, IXY Digital L, IXY Digital L2, PowerShot SD10, PowerShot SD100, PowerShot SD110, PowerShot SD20, PowerShot SD500, PowerShot SD550
CCA0004	8717825940238	3.7V	700mAh	NB-4L	Canon	Digital IXUS 100 IS, Digital IXUS 110 IS, Digital IXUS 117 HS, Digital IXUS 120 IS, Digital IXUS 230 HS, Digital IXUS 250 HS, Digital IXUS 30, Digital IXUS 40, Digital IXUS 50, Digital IXUS 55, Digital IXUS 60, Digital IXUS 65, Digital IXUS 70, Digital IXUS 75, Digital IXUS 80 IS, Digital IXUS i Zoom, Digital IXUS i7 Zoom, Digital IXUS WIRELESS, IXY Digital 10, IXY Digital 20 IS, IXY Digital 20IS, IXY Digital 210 IS, IXY Digital 210 IS, IXY Digital 210F, IXY Digital 220 IS, IXY Digital 40, IXY Digital 400F, IXY Digital 410F, IXY Digital 50, IXY Digital 510, IXY Digital 510 IS, IXY Digital 510 IS, IXY Digital 55, IXY Digital 60, IXY Digital 70, IXY Digital 80, IXY Digital 90, IXY Digital L3, IXY Digital L4, IXY Digital Wireless, Legria Mini , PowerShot ELPH 100 HS, PowerShot ELPH 300 HS, PowerShot ELPH 310 HS, PowerShot 1000, PowerShot 40, PowerShot 430, PowerShot 450, PowerShot 600, PowerShot 630, PowerShot 750, PowerShot SD1000, PowerShot SD1100 IS, PowerShot SD1400 IS, PowerShot SD200, PowerShot SD30, PowerShot SD300, PowerShot SD40, PowerShot SD400, PowerShot SD430, PowerShot SD430 WIRELESS, PowerShot SD450, PowerShot SD600, PowerShot SD630, PowerShot SD750, PowerShot SD780 IS, PowerShot SD940 IS, PowerShot SD960 IS, PowerShot TX1, PowerShot TX1IXY 400F
CCA0006	8717825940252	6V	750mAh	NB-5H	Canon	PowerShot A5, PowerShot A5 Zoom, PowerShot A50, PowerShot A520, PowerShot D350, PowerShot 600, PowerShot S10, PowerShot S20, PowerShot S520
CCA0007	8717825940214	7.4V	720mAh	NB-2L NB-2LH	Canon	Digital Rebel XTi, EOS 350D, EOS 400D, EOS Digital Rebel XT, EOS Digital Rebel Xti, EOS Kiss Digital N, EOS Kiss Digital X, EOS Rebel XT, EOS Rebel XT GRIP, EOS Rebel Xti, EOS Rebel Xti SLR, IXUS 850, PowerShot G7, PowerShot G9, PowerShot S30, PowerShot S40, PowerShot S45, PowerShot S50, PowerShot S60, PowerShot S70, PowerShot S80, ELURA 40MC, ELURA 50, ELURA 60, ELURA 65, ELURA 70, ELURA 80, ELURA 85, ELURA 90, iVIS DC300, iVIS HF R10, iVIS HF R11, iVIS HG10, iVIS HV30, IXY DV3, IXY DV5, IXY DVM3, HF R106, HF R16, HF R17, HF R18, Legria HF R106, Legria HF R16, Legria HF R17, Legria HF R18, HG10, HV20, HV30, HV30 HDV, HV40, DC301, DC310, DC320, DC330, DC410, DC411, DC420, MD100, MD101, MD110, MD111, MD120, MD130, MD140, MD150, MD160, MD205, MD215, MD216, MD225, MD235, MD245, MD255, MD265, MV5, MV5i, MV5iMC, MV6, MV6i, MV6iMC, MV790, MV800, MV800i, MV830, MV830i, MV850, MV850i, MV880X, MV880Xi, MV890, MV900, MV901, MV920, MV930, MV940, MV950, MV960, MVX20, MVX200, MVX200i, MVX20i, MVX250, MVX250i, MVX25i, MVX30, MVX300, MVX30i, MVX330, MVX330i, MVX35, MVX350, MVX350i, MVX35i, MVX40, MVX40i, MVX45, MVX45i, FV500, FVM100, FVM20, FVM200, FVM30, FVM500, ZR100, ZR200, ZR300, ZR400, ZR500, ZR600, ZR700, ZR800, ZR830, ZR850, ZR900, ZR930, ZR950, ZR960, Optura 30, Optura 300, Optura 40, Optura 400, Optura 50, Optura 500, Optura 60, VIXIA HF R10, VIXIA HF R100, VIXIA HF R11, VIXIA HG10, VIXIA HV20, VIXIA HV30, VIXIA HV40

CCA0008	8717825940078	7.4V	1400mAh	BP-511 BP-511A BP-512	Canon	EOS 10D, EOS 10DS, EOS 20D, EOS 20Da, EOS 300D, EOS 30D, EOS 40D, EOS 50D, EOS 5D, EOS D10, EOS D30, EOS D60, EOS Digital Rebel, EOS Kiss Digital, Media Storage M30, Media Storage M80, PowerShot G1, PowerShot G2, PowerShot G3, PowerShot G4, PowerShot G5, PowerShot G6, PowerShot Pro 1, PowerShot Pro 90, PowerShot Pro 90 IS, IXY DVM, DM-MV100X, DM-MV100Xi, DM-MV30, DM-MV400, DM-MV430, DM-MV450, DM-MVX1i, MV100X, MV100Xi, MV30, MV300, MV300i, MV30i, MV400, MV400i, MV430, MV430i, MV430iMC, MV450, MV450i, MV500, MV500i, MV520, MV530, MV530i, MV550, MV550i, MV600, MV600i, MV630, MV630i, MV650, MV650i, MV700, MV700i, MV730, MV730i, MV750, MV750i, MVX1, MVX100, MVX100i, MVX150, MVX150i, MVX1i, MVX2i, MVX3i, MVXLi, FV10, FV100, FV2, FV20, FV200, FV30, FV300, FV40, FV400, FV50, FV500, FVM1, FVM10, ZR10, ZR20, ZR25, ZR25mc, ZR30, ZR30mc, ZR40, ZR45, ZR45MC, ZR50, ZR50MC, ZR60, ZR60MC, ZR65MC, ZR70MC, ZR80, ZR85, ZR85MC, ZR90, Optura 10, Optura 100MC, Optura 20, Optura 200MC, Optura 50MC, Optura Pi, Optura Xi, PV130
CCA0013	8717825940634	22.2V	1600mAh	NB-CP2L Selphy Printer	Canon	Selphy CP510, Selphy CP600, Selphy CP710, Selphy CP730, Selphy CP750, Selphy CP770, Selphy CP780, Selphy CP800
CCA0014	8717825942508	7.4V	1080mAh	LP-E5 NB-E5	Canon	EOS 1000D, EOS 450D, EOS 500D, EOS Kiss F, EOS Kiss X2, EOS Kiss X3, EOS Rebel T1i, EOS Rebel XS, EOS Rebel Xsi
CCA0015	8717825944915	3.7V	1000mAh	NB-6L	Canon	Digital IXUS 105, Digital IXUS 105 IS, Digital IXUS 200 IS, Digital IXUS 210, Digital IXUS 300 HS, Digital IXUS 310 HS, Digital IXUS 85 IS, Digital IXUS 95 IS, IXY 10S, IXY 110 IS, IXY 200F, IXY 30S, IXY 31S, IXY 32S, IXY Digital 110 IS, IXY Digital 25 IS, IXY Digital 930 IS, PowerShot D10, PowerShot D20, PowerShot D30, PowerShot ELPH 500 HS, PowerShot SD1200 IS, PowerShot SD1300 IS, PowerShot SD3500 IS, PowerShot SD4000 IS, PowerShot SD770 IS, PowerShot SD980 IS, PowerShot S90, PowerShot S95, PowerShot S120, PowerShot S200, PowerShot SX170 IS, PowerShot SX240 HS, PowerShot SX260 HS, PowerShot SX270 HS, PowerShot SX280 HS GPS, PowerShot SX510 HS, PowerShot SX520 HS, PowerShot SX530 HS, PowerShot SX600 HS, PowerShot SX610 HS, PowerShot SX710 HS
CCA0016	8717825942430	7.4V	1050mAh	NB-7L	Canon	PowerShot G10, PowerShot G11, PowerShot G12, PowerShot SX30 IS
CCA0018	8718226220936	3.6V	740mAh	NB-8L	Canon	PowerShot A2200, PowerShot A3000 IS, PowerShot A3100 IS, PowerShot A3200 IS, PowerShot A3300 IS
CCA0019	8718226220943	7.4V	1120mAh	LP-E8 NB-E8	Canon	EOS 550D, EOS 600D, EOS 650D, EOS 700D, EOS Kiss X4, EOS Rebel T2i, EOS Rebel T3i
CCA0020V2	8718226221360	7.2V	1700mAh	LP-E6 NB-E6 (chip)	Canon	EOS 5D MARK II, EOS 5D MARK III, EOS 6D, EOS 60D, EOS 7D, EOS 7D Mark II, EOS 70D
CCA0021	8718226221698	11.1V	2400mAh	LP-E4	Canon	EOS 1Ds Mark IV, EOS-1D Mark III, EOS-1D Mark IV, EOS-1Ds Mark III
CCA0022	8718226221896	3.5V	600mAh	NB-9L	Canon	Digital IXUS 1000 HS, Digital IXUS 1000 IS, Digital IXUS 1100 HS, Digital IXUS 500 HS, Digital IXUS 510 HS, IXY 50S, PowerShot ELPH 510 HS, PowerShot SD4500 IS, PowerShot N
CCA0023	8718226222350	7.4V	1020mAh	LP-E10 NB-E10	Canon	EOS 1100D, EOS 1200D, EOS Kiss X50, EOS Rebel T3
CCA0024	8718226229342	7.4V	920mAh	NB-10L	Canon	PowerShot G1 X, PowerShot G3 X, PowerShot G15, PowerShot G16, PowerShot SX40HS, PowerShot SX50HS, PowerShot SX40 HS, PowerShot SX50 HS, PowerShot SX60 HS
CCA0025	8718226229700	3.7V	680mAh	NB-11L	Canon	Digital IXUS 125 HS, Digital IXUS 127 HS, Digital IXUS 132 , Digital IXUS 135 , Digital IXUS 140, Digital IXUS 145, Digital IXUS 155, Digital IXUS 160, Digital IXUS 165, Digital IXUS 240 HS, Digital IXUS 170, Digital IXUS 240 HS, Digital IXUS 265 HS, Digital IXUS 275 HS, PowerShot A2300, PowerShot A2400 IS, PowerShot A2500 IS, PowerShot A2600 IS, PowerShot A3400 IS, PowerShot A3500 IS, PowerShot A4000 IS, PowerShot SX400 IS, PowerShot SX410 IS
CCA0026	8718226229939	7.2V	875mAh	LP-E12	Canon	EOS 100D, EOS M
CCA0027	8718503023168	3.7V	1100mAh	NB-6LH	Canon	Digital IXUS 105 IS, Digital IXUS 200 IS, Digital IXUS 210, Digital IXUS 300 HS, Digital IXUS 310 HS, Digital IXUS 85 IS, Digital IXUS 95 IS, IXY 10S, IXY 110 IS, IXY 200F, IXY 30S, IXY 31S, IXY 32S, IXY Digital 110 IS, IXY Digital 25 IS, IXY Digital 930 IS, PowerShot D10, PowerShot D20, PowerShot D30, PowerShot ELPH 500 HS, PowerShot SD1200 IS, PowerShot SD1300 IS, PowerShot SD3500 IS, PowerShot SD4000 IS, PowerShot SD770 IS, PowerShot SD980 IS, PowerShot S90, PowerShot S95, PowerShot S120, PowerShot S200, PowerShot SX170 IS, PowerShot SX240 HS, PowerShot SX260 HS, PowerShot SX270 HS, PowerShot SX280 HS GPS, PowerShot SX510 HS, PowerShot SX520 HS, PowerShot SX530 HS, PowerShot SX600 HS, PowerShot SX610 HS, PowerShot SX710 HS
CCA0028	8718503025933	7.2V	1700mAh	LP-E6N	Canon	EOS 5D MARK II, EOS 5D MARK III, EOS 5DS R, EOS 6D, EOS 60D, EOS 7D, EOS 7D MARK II, EOS 70D
CCA0029	8718503026749	3.7V	1910mAh	NB-12L	Canon	Legria Mini X, PowerShot G1 X Mark II, PowerShot N100
CCA0030	8718503026756	3.7V	1050mAh	NB-13L	Canon	PowerShot G7 X
CCA0031	8718503027531	12V	1650mAh	NP-E3	Canon	EOS 1D, EOS 1DS, EOS 1D Mark II, EOS 1DS Mark II, EOS 1DS Mark II N
CCA0100	8718503026541	7.4V	2000mAh	LP-E6N *ULTRA*	Canon	EOS 5D MARK II, EOS 5D MARK III, EOS 6D, EOS 60D, EOS 7D, EOS 7D MARK II, EOS 70D, XC10
CCA0101	8718503026961	7.2V	2000mAh	LP-E6 *ULTRA*	Canon	EOS 5D MARK II, EOS 5D MARK III, EOS 6D, EOS 60D, EOS 7D, EOS 7D MARK II, EOS 70D
CCI0001	8718226222190	3.7V	1300mAh	ABT2W Flip	Cisco	LPE6, LP-E6, ABT2W, Flip UltraHD 8GB (3de Generatie)
CCO0001	8718226229847	3.7V	1100mAh	CT-3650	Contour	Contour , Contour +2, Contour GPS, Contour GPS+, Contour HD, Contour Roam 2, Contour Roam

CCS0001	8717825940269	3.7V	700mAh	NP-20	Casio	CT3650, CT-3650, HD Series, Exilim Card EX-M1, Exilim Card EX-M2, Exilim Card EX-M20, Exilim Card EX-M20U, Exilim Card EX-S1, Exilim Card EX-S100, Exilim Card EX-S100WE, Exilim Card EX-S1PM, Exilim Card EX-S2, Exilim Card EX-S20, Exilim Card EX-S20U, Exilim Card EX-S3, Exilim Card EX-S500, Exilim Card EX-S500EO, Exilim Card EX-S500GY, Exilim Card EX-S500WE, Exilim Card EX-S600, Exilim Card EX-S600BE, Exilim Card EX-S600D, Exilim Card EX-S600EO, Exilim Card EX-S600GD, Exilim Card EX-S600SR, Exilim Card EX-S770, Exilim Card EX-S770BE, Exilim Card EX-S770BU, Exilim Card EX-S770D, Exilim Card EX-S770RD, Exilim Card EX-S770SR, Exilim Card EX-S880, Exilim Card EX-S880BK, Exilim Card EX-S880RD, Exilim Zoom EX-Z11, Exilim Zoom EX-Z12, Exilim Zoom EX-Z3, Exilim Zoom EX-Z4, Exilim Zoom EX-Z4U, Exilim Zoom EX-Z5, Exilim Zoom EX-Z6, Exilim Zoom EX-Z60, Exilim Zoom EX-Z60BK, Exilim Zoom EX-Z60SR, Exilim Zoom EX-Z65, Exilim Zoom EX-Z7, Exilim Zoom EX-Z70, Exilim Zoom EX-Z70BK, Exilim Zoom EX-Z70SR, Exilim Zoom EX-Z75, Exilim Zoom EX-Z75BE, Exilim Zoom EX-Z75BK, Exilim Zoom EX-Z75PK, Exilim Zoom EX-Z75SR, Exilim Zoom EX-Z77, Exilim Zoom EX-Z77BE, Exilim Zoom EX-Z77BK, Exilim Zoom EX-Z77PK, Exilim Zoom EX-Z77SR, Exilim Zoom EX-Z8, Exilim QV-S20U
CCS0002	8717825940276	3.7V	1000mAh	NP-30	Casio	SV-AV10 +, SV-AV100 +, SV-AV10A +, SV-AV10D +, SV-AV10S +, SV-AV20 +, SV-AV20A +, SV-AV25 +, SV-AV30 +, SV-AV35 +, SV-AS3, SV-AS3A, SV-AV10, SV-AV100, SV-AV100EG-S, SV-AV10-A, SV-AV10-R, SV-AV10-S, SV-AV10-U, SV-AV20, SV-AV25, SV-AV25EG-S, SV-AV30, SV-AV35, SV-PT1, Photosmart M307, Photosmart M407, Photosmart R507, Photosmart R607, Photosmart R607 BMW, Photosmart R607 Gwen, Photosmart R607xi, Photosmart R707, Photosmart R707v, Photosmart R707xi, Photosmart R717, Photosmart R725, Photosmart R727, Photosmart R817, Photosmart R817v, Photosmart R817xi, Photosmart R818, Photosmart R827, Photosmart R837, Photosmart R847, Photosmart R927, Photosmart R937, Photosmart R967, Photosmart R507, Photosmart R607, Photosmart R707, Photosmart R717, Photosmart R725, Photosmart R727, Photosmart R817, Photosmart R818, Photosmart R827, Photosmart R837, Photosmart R847, Photosmart R927, Photosmart R937, Photosmart R967, Optio 330, Optio 330RS, Optio 430, Optio 430RS, Movieline DV5, Movieline P3, Movieline P5, Movieline SD-5, Prego DP5300, RCP-8325X, RCP-10325X, Life P47005, MD 41856, MD 85146, MD 85908, MD-6360, Ferrari 2004, Ferrari Digital, Ferrari Digital Model 2004, AZ-1, AZ-2, AZ-2 Zoom, EasyShare DX6490, EasyShare DX7440, EasyShare DX7590, EasyShare DX7590 Zoom, EasyShare DX7630, EasyShare LS420, EasyShare LS-420, EasyShare LS433, EasyShare LS-433, EasyShare LS443, EasyShare LS-443, EasyShare LS633, EasyShare LS-633, EasyShare LS743, EasyShare LS-743, EasyShare LS753, EasyShare LS-753, EasyShare one, EasyShare One Series, EasyShare One Zoom, EasyShare P712, EasyShare P850, EasyShare P880, EasyShare Z730, EasyShare Z7440, EasyShare Z7590, EasyShare Z760, DiVi CAM 428, Digimax U-CA3, Digimax U-CA4, Digimax U-CA401, Digimax U-CA5, Digimax U-CA501, Digimax U-CA505, Digimax V10, Digimax V600, Digimax V700, Digimax V800, DC-5300, DC-5390, DC-6300, FinePix F401, FinePix F401 Zoom, FinePix F410, FinePix F410 Zoom, FinePix F601, FinePix F601 Zoom, FinePix M603, FinePix M603 Zoom, FinePix 50i, FinePix 601, Casio NP-30, NP30, NP-30, Pocket DV 6800 LE, C50, Exilim Card EX-S10, Exilim Card EX-S10BE, Exilim Card EX-S10BK, Exilim Card EX-S10RD, Exilim Card EX-S10SR, Exilim QV-R3, Exilim QV-R4, Caplio G3, Caplio G4, Caplio G4 wide, Caplio 300G, Caplio 400G wide, Caplio RR10, Caplio RR30, Camileo H10, Camileo H20, Camileo P10, Camileo P30, Camileo S10, Camileo S10 DUCATI EDITION, Allegretto 5300, PDR-5300, PDR-T20, PDR-T30, Camileo H10, Camileo H20, Camileo P10, Camileo P30, Camileo S10, Camileo S10 DUCATI EDITION, Caplio G3, Caplio G4, Caplio G4 wide, Caplio 300G, Caplio 400G wide, Caplio RR10, Caplio RR30, Casio NP-30, NP30, NP-30, Pocket DV 6800 LE, C50, Exilim Card EX-S10, Exilim Card EX-S10BE, Exilim Card EX-S10BK, Exilim Card EX-S10RD, Exilim Card EX-S10SR, Exilim QV-R3, Exilim QV-R4, DC-5300, DC-5390, DC-6300, FinePix F401, FinePix F401 Zoom, FinePix F410, FinePix F410 Zoom, FinePix F601, FinePix F601 Zoom, FinePix M603, FinePix M603 Zoom, FinePix 50i, FinePix 601, Digimax U-CA3, Digimax U-CA4, Digimax U-CA401, Digimax U-CA5, Digimax U-CA501, Digimax U-CA505, Digimax V10, Digimax V600, Digimax V700, Digimax V800, DiVi CAM 428, EasyShare DX6490, EasyShare DX7440, EasyShare DX7590, EasyShare DX7590 Zoom, EasyShare DX7630, EasyShare LS420, EasyShare LS-420, EasyShare LS433, EasyShare LS-433, EasyShare LS443, EasyShare LS-443, EasyShare LS633, EasyShare LS-633, EasyShare LS743, EasyShare LS-743, EasyShare LS753, EasyShare LS-753, EasyShare one, EasyShare One Series, EasyShare One Zoom, EasyShare P712, EasyShare P850, EasyShare P880, EasyShare Z730, EasyShare Z7440, EasyShare Z7590, EasyShare Z760, Ferrari 2004, Ferrari Digital, Ferrari Digital Model 2004, AZ-1, AZ-2, AZ-2 Zoom, Life P47005, MD 41856, MD 85146, MD 85908, ND-6360, Movieline DV5, Movieline P3, Movieline P5, Movieline SD-5, Prego DP5300, RCP-8325X, RCP-10325X, Optio 330, Optio 330RS, Optio 430, Optio 430RS, Photosmart M307, Photosmart M407, Photosmart R507, Photosmart R607, Photosmart R607 BMW, Photosmart R607 Gwen, Photosmart R607xi, Photosmart R707, Photosmart R707v, Photosmart R707xi, Photosmart R717, Photosmart R725, Photosmart R727, Photosmart R817, Photosmart R817v, Photosmart R817xi, Photosmart R818, Photosmart R827, Photosmart R837, Photosmart R847, Photosmart R927, Photosmart R937, Photosmart R967, Photosmart R507, Photosmart R607, Photosmart R707, Photosmart R717, Photosmart R725, Photosmart R727, Photosmart R817, Photosmart R818, Photosmart R827, Photosmart R837, Photosmart R847, Photosmart R927, Photosmart R937, Photosmart R967, SV-AS3, SV-AS3A, SV-AV10, SV-AV100, SV-AV100EG-S, SV-AV10-A, SV-AV10-R, SV-AV10-S, SV-AV10-U, SV-AV20, SV-AV25, SV-AV25EG-S, SV-AV30, SV-AV35, SV-PT1, SV-AV10 +, SV-AV100 +, SV-AV10A +, SV-AV10D +, SV-AV10S +, SV-AV20 +, SV-AV20A +, SV-AV25 +, SV-AV30 +, SV-AV35 +, T700, T800, T850, X720, X725, X735, X800, X835, AHD300

CCS0003	8717825940283	3.7V	1100mAh	NP-40	Casio	Exilim High Speed EX-FC100, Exilim High Speed EX-FC100WE, Exilim High Speed EX-FC150, Exilim High Speed EX-FC150BK, Exilim High Speed EX-FC150RD, Exilim High Speed EX-FC160S, Exilim Pro EX-P50S, Exilim Pro EX-P600, Exilim Pro EX-P700, Exilim Zoom EX-Z100, Exilim Zoom EX-Z1000, Exilim Zoom EX-Z1000BK, Exilim Zoom EX-Z100BE, Exilim Zoom EX-Z100BN, Exilim Zoom EX-Z100MR, Exilim Zoom EX-Z100PK, Exilim Zoom EX-Z100SR, Exilim Zoom EX-Z1050, Exilim Zoom EX-Z1050BE, Exilim Zoom EX-Z1050BK, Exilim Zoom EX-Z1050PK, Exilim Zoom EX-Z1050SR, Exilim Zoom EX-Z1080, Exilim Zoom EX-Z1080BE, Exilim Zoom EX-Z1080BK, Exilim Zoom EX-Z1080GY, Exilim Zoom EX-Z1080PK, Exilim Zoom EX-Z1200, Exilim Zoom EX-Z1200BK, Exilim Zoom EX-Z1200SR, Exilim Zoom EX-Z200, Exilim Zoom EX-Z200BK, Exilim Zoom EX-Z200RD, Exilim Zoom EX-Z200SR, Exilim Zoom EX-Z30, Exilim Zoom EX-Z300, Exilim Zoom EX-Z300BK, Exilim Zoom EX-Z300PK, Exilim Zoom EX-Z300SR, Exilim Zoom EX-Z40, Exilim Zoom EX-Z400, Exilim Zoom EX-Z450, Exilim Zoom EX-Z450BN, Exilim Zoom EX-Z450GD, Exilim Zoom EX-Z450PK, Exilim Zoom EX-Z450RD, Exilim Zoom EX-Z450SR, Exilim Zoom EX-Z50, Exilim Zoom EX-Z500, Exilim Zoom EX-Z55, Exilim Zoom EX-Z57, Exilim Zoom EX-Z600, Exilim Zoom EX-Z600BE, Exilim Zoom EX-Z600BK, Exilim Zoom EX-Z600SR, Exilim Zoom EX-Z700, Exilim Zoom EX-Z700GY, Exilim Zoom EX-Z700SR, Exilim Zoom EX-Z750, Exilim Zoom EX-Z850, DVS-550HD, DC P500, E520, E520+, E610, DV-S21, DVS-550HD, Exilim High Speed EX-FC100, Exilim High Speed EX-FC100WE, Exilim High Speed EX-FC150, Exilim High Speed EX-FC150BK, Exilim High Speed EX-FC150RD, Exilim High Speed EX-FC160S, Exilim Pro EX-P50S, Exilim Pro EX-P600, Exilim Pro EX-P700, Exilim Zoom EX-Z100, Exilim Zoom EX-Z1000, Exilim Zoom EX-Z1000BK, Exilim Zoom EX-Z100BE, Exilim Zoom EX-Z100BN, Exilim Zoom EX-Z100MR, Exilim Zoom EX-Z100PK, Exilim Zoom EX-Z100SR, Exilim Zoom EX-Z1050, Exilim Zoom EX-Z1050BE, Exilim Zoom EX-Z1050BK, Exilim Zoom EX-Z1050PK, Exilim Zoom EX-Z1080, Exilim Zoom EX-Z1080BE, Exilim Zoom EX-Z1080BK, Exilim Zoom EX-Z1080GY, Exilim Zoom EX-Z1080PK, Exilim Zoom EX-Z1200, Exilim Zoom EX-Z1200BK, Exilim Zoom EX-Z1200SR, Exilim Zoom EX-Z200, Exilim Zoom EX-Z200BK, Exilim Zoom EX-Z200RD, Exilim Zoom EX-Z200SR, Exilim Zoom EX-Z30, Exilim Zoom EX-Z300, Exilim Zoom EX-Z300BK, Exilim Zoom EX-Z300PK, Exilim Zoom EX-Z300SR, Exilim Zoom EX-Z40, Exilim Zoom EX-Z400, Exilim Zoom EX-Z450, Exilim Zoom EX-Z450BN, Exilim Zoom EX-Z450GD, Exilim Zoom EX-Z450PK, Exilim Zoom EX-Z450RD, Exilim Zoom EX-Z450SR, Exilim Zoom EX-Z50, Exilim Zoom EX-Z500, Exilim Zoom EX-Z55, Exilim Zoom EX-Z57, Exilim Zoom EX-Z600, Exilim Zoom EX-Z600BE, Exilim Zoom EX-Z600BK, Exilim Zoom EX-Z600SR, Exilim Zoom EX-Z700, Exilim Zoom EX-Z700GY, Exilim Zoom EX-Z700SR, Exilim Zoom EX-Z750, Exilim Zoom EX-Z850, XG1, XG-1
CCS0006	8717825942188	3.7V	900mAh	NP-50	Casio	Exilim Hi-Zoom EX-V7, Exilim Hi-Zoom EX-V7SR, Exilim Hi-Zoom EX-V8, Exilim Hi-Zoom EX-V8SR
CCS0007	8717825940627	3.7V	650mAh	NP-60	Casio	Exilim Card-S10, Exilim Card-S10BE, Exilim Card-S10BK, Exilim Card-S10RD, Exilim Card-S10SR, Exilim High Speed EX-FS10, Exilim High Speed EX-FS10S, Exilim Card EX-S12, Exilim Card EX-S12GN, Exilim Card EX-S12SR, Exilim Zoom EX-Z25, Exilim Zoom EX-Z29, Exilim Zoom EX-Z29PE, Exilim Zoom EX-Z20, Exilim Zoom EX-Z19, Exilim Zoom EX-Z19BK, Exilim Zoom EX-Z19GN, Exilim Zoom EX-Z19LP, Exilim Zoom EX-Z19PK, Exilim Zoom EX-Z19SR, Exilim Zoom EX-Z21, Exilim Zoom EX-Z80, Exilim Zoom EX-Z80BE, Exilim Zoom EX-Z80BK, Exilim Zoom EX-Z80GN, Exilim Zoom EX-Z80PK, Exilim Zoom EX-Z80SR, Exilim Zoom EX-Z80VP, Exilim Zoom EX-Z85, Exilim Zoom EX-Z85BE, Exilim Zoom EX-Z85BK, Exilim Zoom EX-Z85BN, Exilim Zoom EX-Z85EO, Exilim Zoom EX-Z85GN, Exilim Zoom EX-Z85PK, Exilim Zoom EX-Z85SR, Exilim Zoom EX-Z85VP, Exilim Zoom EX-Z9, Exilim Zoom EX-Z90, Exilim Zoom EX-Z90BE, Exilim Zoom EX-Z90BK, Exilim Zoom EX-Z90GD, Exilim Zoom EX-Z90PK, Exilim Zoom EX-Z90SR, Exilim Zoom EX-Z9BK, Exilim Zoom EX-Z9EO, Exilim Zoom EX-Z9PK, Exilim Zoom EX-Z9SR
CCS0008	8717825942683	7.4V	1800mAh	NP-100	Casio	Exilim Pro EX-F1
CCS0009	8717825942317	3.7V	1050mAh	NP-70	Casio	NP100, NP-100, VP8360, Exilim Zoom EX-Z150, Exilim Zoom EX-Z250, Exilim Zoom EX-Z250BE, Exilim Zoom EX-Z250GD, Exilim Zoom EX-Z250PK, Exilim Zoom EX-Z250RD, Exilim Zoom EX-Z250SR
CCS0010	8717825945547	3.7V	1800mAh	NP-90	Casio	Exilim High Speed EX-FH100, Exilim High Speed EX-FH100BK, Exilim Hi-Zoom EX-H10, Exilim Hi-Zoom EX-H15, Exilim Hi-Zoom EX-H20G
CCS0011	8718226220950	3.7V	1200mAh	NP-110	Casio	Exilim EX-ZR10, Exilim EX-ZR15, Exilim EX-ZR20, Exilim Zoom EX-Z3000, Exilim Zoom EX-Z2000, Exilim Zoom EX-Z2000BK, Exilim Zoom EX-Z2000PK, Exilim Zoom EX-Z2000RD, Exilim Zoom EX-Z2000SR, Exilim Zoom EX-Z2000VT, Exilim Zoom EX-Z2300, Exilim Zoom EX-Z2300BE, Exilim Zoom EX-Z2300BK, Exilim Zoom EX-Z2300GD, Exilim Zoom EX-Z2300PE, Exilim Zoom EX-Z2300PK
CCS0012	8717825946483	3.6V	600mAh	NP-120	Casio	Exilim Card EX-S200, Exilim Card EX-S200BE, Exilim Card EX-S200BK, Exilim Card EX-S200EO, Exilim Card EX-S200PK, Exilim Card EX-S200SR, Exilim Zoom EX-ZS10, Exilim Zoom EX-ZS10BE, Exilim Zoom EX-ZS10BK, Exilim Zoom EX-ZS10PK, Exilim Zoom EX-ZS10RD, Exilim Zoom EX-ZS10SR, Exilim Zoom EX-ZS15, Exilim Zoom EX-Z790, Exilim Zoom EX-ZS20, Exilim Zoom EX-ZS30
CCS0013	8718226222329	3.7V	1800mAh	NP-130	Casio	Exilim Hi-Zoom EX-H30, Exilim Hi-Zoom EX-H30BK, Exilim EX-ZR100, Exilim EX-ZR200, Exilim EX-ZR300, Exilim EX-ZR400, Exilim EX-ZR700, Exilim EX-ZR1000
CDR0003	8718503022208	3.7V	1850mAh	FXDC02	Drift	HD, HD 1080p, HD 720p, HD170, HD170 STEALTH, HD170 STEALTH, HD Ghost
CEP0001	8717825940306	3.7V	1100mAh	SMT-EU-94	Epson	FXDC02, 72-011-00, B31B173003CU, B32B818242, EPALB2, EU94, EU-94, EU-94 (EPALB2), L-500V, Digimax L55, Digimax L55W, Digimax L85
CEP0002	8717825940313	3.7V	2300mAh	SMT-EU-97	Epson	DP1, DP1s, DP1x, DP2, DP2s, DP2X, P-2000, P-4000

CFU0001	8717825940351	3.7V	750mAh	NP-40	Fujifilm	NP40, NP-40, X600, Photosmart R742, FinePix F402, FinePix F455, FinePix F455 Zoom, FinePix F460, FinePix F460 Zoom, FinePix F470, FinePix F470, FinePix F470 Zoom, FinePix F480, FinePix F610, FinePix F610 Zoom, FinePix F650, FinePix F650 Zoom, FinePix F700, FinePix F700 Zoom, FinePix F710, FinePix F810, FinePix F810 Zoom, FinePix F811, FinePix F818, FinePix J50, FinePix 455, FinePix V10, FinePix V10 Zoom, FinePix Z1, FinePix Z1 Zoom, FinePix Z2, FinePix Z3 Zoom, FinePix Z5fd, FinePix Z5FD Zoom, Life P42010, Life P43010, Life P43012, Life P47350, Life X42005, Life X47002, Life X47006 3D, MD 85766, MD 85863, MD 85905, MD 85919, MD 86072, MD 86232, MD 86288, MD 86390, EasyShare C763, E510, E520, DiMAGE X1, Digimax #1, i5, i50 MP3, i6 PMP, i60, L50, L60, i70, i70S, L700, L700S, L73, L80, NV3, NV5, NV7, NV7 OPS, DC X600, DC-X600, Caplio 10G, DC X600, DC-X600, Digimax #1, i5, i50 MP3, i6 PMP, i60, L50, L60, i70, i70S, L700, L700S, L73, L80, NV3, NV5, NV7, NV7 OPS, DiMAGE X1, E510, E520, EasyShare C763, FinePix F402, FinePix F455, FinePix F455 Zoom, FinePix F460, FinePix F460 Zoom, FinePix F470, FinePix F470, FinePix F470 Zoom, FinePix F480, FinePix F610, FinePix F610 Zoom, FinePix F650, FinePix F650 Zoom, FinePix F700, FinePix F700 Zoom, FinePix F710, FinePix F810, FinePix F810 Zoom, FinePix F811, FinePix F818, FinePix J50, FinePix 455, FinePix V10, FinePix V10 Zoom, FinePix Z1, FinePix Z1 Zoom, FinePix Z2, FinePix Z3 Zoom, FinePix Z5fd, FinePix Z5FD Zoom, Life P42010, Life P43010, Life P43012, Life P47350, Life X42005, Life X47002, Life X47006 3D, MD 85766, MD 85863, MD 85905, MD 85919, MD 86072, MD 86232, MD 86288, MD 86390, NP40, NP-40, X600, Photosmart R742, Optio A10, Optio A20, Optio A30, Optio A36, Optio A40, Optio E65, Optio E75, Optio E85, Optio L20, Optio M85, Optio S, Optio S4, Optio S4i, Optio S5i, Optio S5N, Optio S5z, Optio S6, Optio S7, Optio SV, Optio Svi, Optio T10, Optio T20, Optio WP, Optio Wpi, Optio W10, Optio W20, Optio X
CFU0002	8717825940344	3.7V	600mAh	NP-30	Fujifilm	FinePix F440, FinePix F440 Zoom, FinePix F450, FinePix F450 Zoom
CFU0004	8717825940375	3.7V	1400mAh	NP-80	Fujifilm	MICROELITE 3300, U4R, FinePix 1300, FinePix 1400, FinePix 1700, FinePix 1700z, FinePix 2600, FinePix 2700, FinePix 2900, FinePix 2900z, FinePix 4800, FinePix 4800 Zoom, FinePix 4900, FinePix 4900 Zoom, FinePix 6800, FinePix 6800 Zoom, FinePix 6900, FinePix 6900 Zoom, MX-1700, MX-1700Z, MX-2700, MX-2900, MX-2900Z, MX-4800, MX-4900, MX-6800, MX-6900, Digilux Zoom, DIGLUX ZOOM, Caplio PR1, Caplio RDC-6000, Caplio RDC-7, Caplio RDC-i500, Caplio RR1, RDC-6000, RDC-7, RDC-7S, Allegretto M70, PDR-M1, PDR-M4, PDR-M5, PDR-M60, PDR-M70, Caplio PR1, Caplio RDC-6000, Caplio RDC-7, Caplio RDC-i500, Caplio RR1, RDC-6000, RDC-7, RDC-7S, Digilux Zoom, DIGLUX ZOOM, FinePix 1300, FinePix 1400, FinePix 1700, FinePix 1700z, FinePix 2600, FinePix 2700, FinePix 2900, FinePix 2900z, FinePix 4800, FinePix 4800 Zoom, FinePix 4900, FinePix 4900 Zoom, FinePix 6800, FinePix 6800 Zoom, FinePix 6900, FinePix 6900 Zoom, MX-1700, MX-1700Z, MX-2700, MX-2900, MX-2900Z, MX-4800, MX-4900, MX-6800, MX-6900, MICROELITE 3300, U4R, R-D1, R-D1s, R-D1xG, DC4800, DC4800 EZ, DC4800 Zoom
CFU0005	8717825940337	3.7V	1900mAh	NP-120	Fujifilm	Optio Mx, Optio Mx4, Optio 450, Optio 550, Optio 555, Optio 750Z, Movieline DS-10, HDDV 8300, FinePix F10, FinePix F10 Zoom, FinePix F11, FinePix F11 Zoom, FinePix M603, FinePix M603 Zoom, FinePix M603, Caplio G3, Caplio G3 M, Caplio G3s, Caplio G4, Caplio GX, Caplio GX8, Caplio 300G, Caplio 400G Wide, Caplio 500G, Caplio 500SE, Caplio RX, FinePix F10, FinePix F10 Zoom, FinePix F11, FinePix F11 Zoom, FinePix M603, FinePix M603 Zoom, FinePix M603, HDDV 8300, Movieline DS-10, Optio Mx, Optio Mx4, Optio 450, Optio 550, Optio 555, Optio 750Z, Tvs Digital
CFU0006	8717825940320	3.6V	2000mAh	NP-100	Fujifilm	GC-S5, DS260, DS-260, MX-500, MX-600, MX-600X, MX-600Z, MX-700, MX-700Z, DIGLUX, Caplio RDC-i700, DIGLUX, DS260, DS-260, MX-500, MX-600, MX-600X, MX-600Z, MX-700, MX-700Z, GC-S5, PDR-M3

CFU0008	8717825940726	3.7V	1250mAh	NP-70	Fujifilm	HMX-R10, HMX-R10BP, FinePix F20, FinePix F40FD, FinePix F45FD, FinePix F47FD, FinePix S5700, C-LUX1, D-LUX 4, D-LUX2, D-LUX3, Caplio GR Digital, Caplio GR Digital II, Caplio GX100, Caplio R3, Caplio R30, Caplio R4, Caplio R40, Caplio R5, GR Digital III, GR Digital IV, G600, G700, G700SE, GX200, C-LUX1, D-LUX 4, D-LUX2, D-LUX3, FinePix F20, FinePix F40FD, FinePix F45FD, FinePix F47FD, FinePix S5700, HMX-R10, HMX-R10BP, Lumix DMC-FS1, Lumix DMC-FS2, Lumix DMC-FX01, Lumix DMC-FX01-A, Lumix DMC-FX01BB, Lumix DMC-FX01BS, Lumix DMC-FX01EB-K, Lumix DMC-FX01EB-S, Lumix DMC-FX01EB-W, Lumix DMC-FX01EF-A, Lumix DMC-FX01EF-K, Lumix DMC-FX01EF-S, Lumix DMC-FX01EF-W, Lumix DMC-FX01EG, Lumix DMC-FX01EG-A, Lumix DMC-FX01EG-K, Lumix DMC-FX01EG-S, Lumix DMC-FX01GK, Lumix DMC-FX01-K, Lumix DMC-FX01-P, Lumix DMC-FX01-S, Lumix DMC-FX01-W, Lumix DMC-FX07, Lumix DMC-FX07EF, Lumix DMC-FX07EF-S, Lumix DMC-FX07EG, Lumix DMC-FX07EGM, Lumix DMC-FX07K, Lumix DMC-FX10, Lumix DMC-FX100EF-K, Lumix DMC-FX100EF-N, Lumix DMC-FX100EF-S, Lumix DMC-FX100EG, Lumix DMC-FX100EG-K, Lumix DMC-FX100EG-S, Lumix DMC-FX100GK, Lumix DMC-FX10A, Lumix DMC-FX10EB-K, Lumix DMC-FX10EB-S, Lumix DMC-FX10EF-S, Lumix DMC-FX10EG, Lumix DMC-FX10EG-A, Lumix DMC-FX10EG-S, Lumix DMC-FX10P, Lumix DMC-FX10S, Lumix DMC-FX12, Lumix DMC-FX12EB-K, Lumix DMC-FX12EB-S, Lumix DMC-FX12EF-S, Lumix DMC-FX12EG, Lumix DMC-FX12EG-K, Lumix DMC-FX12EG-S, Lumix DMC-FX12GK, Lumix DMC-FX12K, Lumix DMC-FX12S, Lumix DMC-FX150, Lumix DMC-FX150EFK, Lumix DMC-FX150K, Lumix DMC-FX150S, Lumix DMC-FX180, Lumix DMC-FX180GK, Lumix DMC-FX180K, Lumix DMC-FX180N, Lumix DMC-FX180S, Lumix DMC-FX3, Lumix DMC-FX3EF, Lumix DMC-FX3EF-S, Lumix DMC-FX3EG, Lumix DMC-FX3EGM, Lumix DMC-FX3EG-S, Lumix DMC-FX3K, Lumix DMC-FX3S, Lumix DMC-FX50, Lumix DMC-FX50EF, Lumix DMC-FX50EG, Lumix DMC-FX50EGM, Lumix DMC-FX50K, Lumix DMC-FX8, Lumix DMC-FX8-A, Lumix DMC-FX8BS, Lumix DMC-FX8EBB, Lumix DMC-FX8EG-A, Lumix DMC-FX8EG-K, Lumix DMC-FX8EG-P, Lumix DMC-FX8EG-S, Lumix DMC-FX8GK, Lumix DMC-FX8GN, Lumix DMC-FX8-K, Lumix DMC-FX8-P, Lumix DMC-FX8-S, Lumix DMC-FX9, Lumix DMC-FX9BB, Lumix DMC-FX9BS, Lumix DMC-FX9EB-K, Lumix DMC-FX9EB-S, Lumix DMC-FX9EF-K, Lumix DMC-FX9EF-S, Lumix DMC-FX9EG, Lumix DMC-FX9EG-K, Lumix DMC-FX9EG-R, Lumix DMC-FX9EG-S, Lumix DMC-FX9GK, Lumix DMC-FX9GN, Lumix DMC-FX9-H, Lumix DMC-FX9-K, Lumix DMC-FX9-R, Lumix DMC-FX9-S, Lumix DMC-LX1, Lumix DMC-LX1B, Lumix DMC-LX1EG-K, Lumix DMC-LX1EG-S, Lumix DMC-LX1GK, Lumix DMC-LX1GN, Lumix DMC-LX1K, Lumix DMC-LX1K-B, Lumix DMC-LX1-S, Lumix DMC-LX1S-B, Lumix DMC-LX2, Lumix DMC-LX2EF, Lumix DMC-LX2EF-S, Lumix DMC-LX2EG, Lumix DMC-LX2EG-K, Lumix DMC-LX2EGM, Lumix DMC-LX2EG-S, Lumix DMC-LX2K, Lumix DMC-LX2S, Lumix DMC-LX3, Lumix DMC-LX3EF-K, Lumix DMC-LX3GK, Lumix DMC-LX3K, Lumix DMC-LX3S
CFU0009	8717825942034	3.7V	1750mAh	NP-95	Fujifilm	FinePix F30, FinePix F31FD, FinePix X100, FinePix X100S, FinePix Real 3D W1, GXR, GXR A12, GXR Mount A12, GXR P10, GXR S10
CFU0010	8717825942089	7.4V	1400mAh	NP-150	Fujifilm	FinePix X100S, FinePix IS Pro, FinePix S5 Pro, IS Pro
CFU0011	8717825940443	3.7V	800mAh	NP-50	Fujifilm	FinePix F100FD, FinePix F200EXR, FinePix F200FD, FinePix F300EXR, FinePix F305EXR, FinePix F500EXR, FinePix F505EXR, FinePix F50FD, FinePix F550EXR, FinePix F550EXR (GPS), FinePix F600EXR, FinePix F600EXR (GPS), FinePix F60FD, FinePix F660EXR, FinePix F70EXR, FinePix F750EXR, FinePix F75EXR, FinePix F770EXR, FinePix F80EXR, FinePix F85EXR, FinePix F850EXR, FinePix F900EXR, FinePix A920, FinePix X10, FinePix X20, FinePix XP200, FinePix REAL 3D W1, FinePix Real 3D W3, EasyShare M1033, EasyShare M1093 IS, EasyShare V1073, EasyShare V1233, EasyShare V1253, EasyShare V1273, PLAYTOUCH, Zi8, Zx3, FinePix F100FD, FinePix F200EXR, FinePix F200FD, FinePix F300EXR, FinePix F305EXR, FinePix F500EXR, FinePix F505EXR, FinePix F50FD, FinePix F550EXR, FinePix F550EXR (GPS), FinePix F600EXR, FinePix F600EXR (GPS), FinePix F60FD, FinePix F660EXR, FinePix F70EXR, FinePix F750EXR, FinePix F75EXR, FinePix F770EXR, FinePix F80EXR, FinePix F85EXR, FinePix F850EXR, FinePix F900EXR, FinePix A920, FinePix X10, FinePix X20, FinePix XP200, FinePix REAL 3D W1, FinePix Real 3D W3, Optio A36, Optio S10, Optio S12, Q, Q10
CFU0012	8717825940788	7.2V	1200mAh	NP-140	Fujifilm	FinePix S100FD, FinePix S100FS, FinePix S200EXR, FinePix S205EXR, S100FS SLR
CFU0013	8718226226501	3.7V	520mAh	NP-45	Fujifilm	FinePix J10, FinePix J100, FinePix J110W, FinePix J12, FinePix J120, Finepix J15, FinePix J150, FinePix J150W, FinePix J15fd, FinePix J20, FinePix J210, FinePix J25, FinePix J250, FinePix J26, FinePix J27, FinePix J30, FinePix J32, FinePix J35, FinePix J37, FinePix J38, FinePix JV100, FinePix JV105, FinePix JV150, FinePix JV160, FinePix JV200, FinePix JV205, FinePix JV250, FinePix JV255, FinePix JX200, FinePix JX205, FinePix JX250, FinePix JX280, FinePix JX300, FinePix JX305, FinePix JX350, FinePix JX355, FinePix JX360, FinePix JX370, FinePix JX375, FinePix JX400, FinePix JX405, FinePix JX420, FinePix JX500, FinePix JX520, FinePix JX530, FinePix JX550, FinePix JX600, FinePix JX700, FinePix JZ100, FinePix JZ200, FinePix JZ300, FinePix JZ305, FinePix JZ310, FinePix JZ500, FinePix JZ505, FinePix L30, FinePix T200, FinePix T205, FinePix T300, FinePix T305, FinePix T350, FinePix T400, FinePix XP10, FinePix XP11, FinePix XP15, FinePix XP20, FinePix XP22, FinePix XP30, FinePix XP30 (GPS), FinePix XP60, FinePix XP70, FinePix XP80, FinePix XP100, FinePix XP150, FinePix Z100, FinePix Z1000EXR, FinePix Z100FD, FinePix Z100-FD, FinePix Z10FD, FinePix Z10-FD, FinePix Z200, FinePix Z200fd, FinePix Z20FD, FinePix Z20-FD, FinePix Z250fd, FinePix Z30, FinePix Z300, FinePix Z31, FinePix Z33WP, FinePix Z35, FinePix Z37, FinePix Z70, FinePix Z700EXR, FinePix Z707EXR, FinePix Z71, FinePix Z80, FinePix Z800 EXR, FinePix Z800EXR, FinePix Z808EXR, FinePix Z81, FinePix Z90, FinePix Z900 EXR, FinePix Z900EXR, FinePix Z91, FinePix Z950 EXR, FinePix Z950EXR
CFU0014	8717825946452	7.2V	1260mAh	NP-W126	Fujifilm	FinePix T500, HS30EXR, HS33EXR, HS50EXR, X-Pro1, X-A1, X-A2, X-E1, X-E2, X-T1, X-T10
CFU0015	8718226229724	3.7V	1700mAh	NP-85	Fujifilm	Camileo X200, Camileo X400, Camileo X416, FinePix S1, FinePix SL240, FinePix SL260, FinePix SL280, FinePix SL300, FinePix SL305, SL-260, SL-280, SL-300, SL-305, SL-1000, SL-240, SL1000

CFU0016	8718503023236	3.7V	1010mAh	NP-48	Fujifilm	XQ1, XQ2
CGE0001	8717825944526	3.7V	900mAh	GE GB-40	GE	E1030, E1035, E1040, E1050, E1050TW, E1235, E1240, E1250TW, E850, GB40, GB-40, H855
CGM0001	8718503027586	3.8V	980mAh	VIRB XE	Garmin	VIRB XE
CGP0001	8718226229359	3.7V	1100mAh	AHDBT-001 AHDBT-002	GoPro	HD Helmet Hero, HD Hero, HD Hero 1080p, HD Hero 2, HD Hero 960, HD Hero Naked, HD Motorsports Hero, HD Surf Hero
CGP0002	8718503021560	3.7V	1050mAh	AHDBT-201 AHDBT-301	GoPro	HD Helmet Hero, HD Hero, HD Hero 1080p, HD Hero 2, HD Hero 960, HD Hero Naked, HD Motorsports Hero, HD Surf Hero, HD Hero 3
CGP0003	8718503023212	3.7V	1200mAh	AHDBT-302	GoPro	HD Hero 3+
CGP0004	8718503025759	3.8V	1160mAh	AHDBT-401	GoPro	HD Hero 4
CIS0001	8718503026763	3.7V	1220mAh	ISAW A1	ISAW	ISAW A1, ISAW A1 Rookie HD
CKN0003	8717825940702	3.6V	1000mAh	DR-LB1	Konica Minolta	KD-200Z, KD-300Z, Revio KD-300Z, Finecam S3, Finecam S3L, Finecam S3R, Finecam S3x, Finecam S4, Finecam S5, Finecam S3, Finecam S30, Finecam S3300, Finecam S3L, Finecam S3R, Finecam S3X, Finecam S4, Finecam S40, Finecam S5, Finecam S5R, KD-200Z, KD-300Z, Revio KD-300Z, PDR-3010, PDR-3310
CKO0004	8717825940672	3.7V	600mAh	KLIC-7002	Kodak	EasyShare V530, EasyShare V603
CKO0006	8717825940665	3.7V	700mAh	KLIC-7001	Kodak	EasyShare M1063, EasyShare M1073 IS, EasyShare M320, EasyShare M340, EasyShare M341, EasyShare M753, EasyShare M753 Zoom, EasyShare M763, EasyShare M853, EasyShare M853 Zoom, EasyShare M863, EasyShare M893 IS, EasyShare V550, EasyShare V570, EasyShare V610, EasyShare V705, MD 86063
CKO0007	8717825940641	3.7V	1800mAh	KLIC-5001	Kodak	Xacti DMX-FH11, Xacti DMX-HD1010, Xacti DMX-HD2000, Xacti DMX-WH1, Xacti VPC-FH1ABK, Xacti VPC-FH1BK, Xacti VPC-FH1EBK, Xacti VPC-HD1000, Xacti VPC-HD1010, Xacti VPC-HD1010BK, Xacti VPC-HD2000, Xacti VPC-HD2000ABK, Xacti VPC-HD2000EBK, Xacti VPC-TH1, Xacti VPC-TH1BL, Xacti VPC-TH1EX-B, Xacti VPC-TH1EXBL-B, Xacti VPC-TH1EXR-B, Xacti VPC-TH1R, Xacti VPC-TH2, Xacti VPC-WH1, Xacti VPC-WH1BL, Xacti VPC-WH1EXBL-B, Xacti VPC-WH1EXW-B, Xacti VPC-WH1EXYL-B, Xacti VPC-WH1YL
CKO0009	8717825940719	3.7V	800mAh	KLIC-7003	Kodak	EasyShare M380, EasyShare M381, EasyShare M420, EasyShare V1003, EasyShare V803, EasyShare Z950
CKO0010	8718503025742	7.4V	1200mAh	LB-070	Kodak	PixPro S1, PixPro S-1
CLE0002	8718226221902	3.7V	1400mAh	BP-DC8	Leica	X1
CLE0003	8718226229649	7.2V	895mAh	BP-DC9	Leica	V-LUX2
CLE0004	8718226229656	3.7V	1050mAh	BP-DC10	Leica	D-LUX 5, D-LUX 6
CMI0001	8717825940733	3.7V	750mAh	NP-1	Konica Minolta	DiMAGE X1
CMI0002	8717825940740	3.7V	750mAh	NP-200	Konica Minolta	DiMAGE X, DiMAGE Xg, DiMAGE Xi, DiMAGE Xi, DiMAGE Xt, DiMAGE Xt, DiMAGE Xt Biz, Exilim Card-M1, Exilim Card-M2, Exilim Card-M20, Exilim Card-M20U, Exilim Card-S1, Exilim Card-S100, Exilim Card-S100WE, Exilim Card-S1PM, Exilim Card-S2, Exilim Card-S20, Exilim Card-S20U, Exilim Card-S3, Exilim Card-S500, Exilim Card-S500EO, Exilim Card-S500GY, Exilim Card-S500WE, Exilim Card-S600, Exilim Card-S600BE, Exilim Card-S600D, Exilim Card-S600EO, Exilim Card-S600GD, Exilim Card-S600SR, Exilim Card-S770, Exilim Card-S770BE, Exilim Card-S770BU, Exilim Card-S770D, Exilim Card-S770RD, Exilim Card-S770SR, Exilim Card-S880, Exilim Card-S880BK, Exilim Card-S880RD, Exilim Zoom EX-Z11, Exilim Zoom EX-Z3, Exilim Zoom EX-Z4, Exilim Zoom EX-Z4U, Exilim Zoom EX-Z5, Exilim Zoom EX-Z6, Exilim Zoom EX-Z60, Exilim Zoom EX-Z60BK, Exilim Zoom EX-Z60SR, Exilim Zoom EX-Z65, Exilim Zoom EX-Z7, Exilim Zoom EX-Z70, Exilim Zoom EX-Z70BK, Exilim Zoom EX-Z70SR, Exilim Zoom EX-Z75, Exilim Zoom EX-Z75BE, Exilim Zoom EX-Z75BK, Exilim Zoom EX-Z75PK, Exilim Zoom EX-Z75SR, Exilim Zoom EX-Z77, Exilim Zoom EX-Z77BE, Exilim Zoom EX-Z77BK, Exilim Zoom EX-Z77PK, Exilim Zoom EX-Z77SR, Exilim Zoom EX-Z8
CMI0003	8717825940764	3.7V	900mAh	NP-500 NP-600 DR-LB4	Konica Minolta	DiMAGE G400, DiMAGE G500, DiMAGE G500, DiMAGE G530, DiMAGE G600, KD-310Z, KD-400Z, KD-410Z, KD-420Z, KD-500Z, KD-510Z, Revio KD-310, Revio KD-310Z, Revio KD-400Z, Revio KD-410Z, Revio KD-420Z, Revio KD-500Z, Revio KD-510Z

CMI0004	8717825940795	3.7V	650mAh	NP-900	Konica Minolta	T-100, T-110, X-36, X-960, S4, S6, DiMAGE E40, DiMAGE E50, DS6, Compactline 82 SE, Compactline 110, Compactline 412, RCP-8325XS, X-8 Compact, Prego DP4200, Prego DP5200, Prego DP5700, Prego DP6200, ReefMaster DC500, S5, PDR-3010, PDR-3310, DC-5080, DC-7080, Slimline X4, Slimline X5, Slimline X6, Slimline XS7, Slimline XT, Super Slim XS7, Super Slim XS7, DC C500, DC E43, DC E53, DC E53+, DC E63+, DC E720, E43, E53, E720, CS 6531-N, CS-5530, 4Ti, DA 4092, DA 5091, DA 5092, DA 5094, 02491-0015-00, NP900, NP-900, EZ 4033, DC-6600, DC-6800, Performic S5, Slimline X4, Slimline X5, Slimline X50, Slimline X6, Slimline X60, Slimline XS6, MD 85700, DC 4211, DC 5222, DC 6311, DC 4211, DC 5222, DC 6011, DC 6311, DC-4211, DC-5222, DC-6311, DC-4211, DC-5222, DC-6011, DC-6311, DS-7210, DS 7210, Luxmedia 7103, DM-5331, DM-6331, DS-4330, DS-4331, DS-4341, DS-4346, DS-5080, DS-5330, DS-5341, DS-6330, DS-6340, DS-T5, SL-6, SL-63, Slim Neo Xc534, Slim Neo Xi, DC5 super slim, DC50 slim, DC55 slim, DC6, DC6 super slim, DC65 slim, CS 6531-N, CS-5530, 4Ti, DA 4092, DA 5091, DA 5092, DA 5094, DC C500, DC E43, DC E53, DC E53+, DC E63+, DC E720, E43, E53, E720, DC-5080, DC-7080, Slimline X4, Slimline X5, Slimline X6, Slimline XS7, Slimline XT, Super Slim XS7, Super Slim XS7, DS6, Compactline 82 SE, Compactline 110, Compactline 412, RCP-8325XS, X-8 Compact, Prego DP4200, Prego DP5200, Prego DP5700, Prego DP6200, ReefMaster DC500, S5, PDR-3010, PDR-3310, S4, S6, DiMAGE E40, DiMAGE E50, T-100, T-110, X-36, X-960, ViviCam 3830, ViviCam 3945S, ViviCam 5340, ViviCam 5340S, Virtus D4, Virtus D5, Virtus D500, Virtus D6, Virtus D600, Virtus S6
CMI0005	8717825940771	3.7V	700mAh	NP-700	Konica Minolta	Optio Z10, L77, DG-X50, DG-X50-K, DG-X50-R, DG-X50-S, DiMAGE X50, DiMAGE X60, L77, Optio Z10, Xacti VPC-A5
CMI0007	8717825940757	7.4V	1450mAh	NP-400	Konica Minolta	GX-10, GX-10 SLR, GX-20, GX-20 SLR, DiMAGE A1, DiMAGE A2, Dynax 5D, Dynax 7D, Maxxum 5D, Maxxum 7 SLR, Maxxum 7D, a Sweet DIGITAL, a-5 digital, a-7 digital, a-sweet digital, GX-10, GX-10 SLR, GX-20, GX-20 SLR, K10D, K20D
CNI0002	8717825940863	3.7V	500mAh	EN-EL8	Nikon	EasyShare LS755, EasyShare LS-755, EasyShare LS755 Zoom, EasyShare M590, SLICE, SD1, SD14, SD15, Coolpix S52c, Coolpix P1, Coolpix P2, Coolpix S1, Coolpix S1 Ebony, Coolpix S1 Ivory, Coolpix S1 Silver, Coolpix S2, Coolpix S3, Coolpix S5, Coolpix S50, Coolpix S50c, Coolpix S51, Coolpix S51c, Coolpix S52, Coolpix S52c, Coolpix S6, Coolpix S7, Coolpix S7c, Coolpix S8, Coolpix S9
CNI0003	8717825940818	3.7V	1000mAh	EN-EL2	Nikon	Coolpix 2500, Coolpix 3500, Coolpix AW120, Coolpix SQ
CNI0004	8717825940849	3.7V	1050mAh	EN-EL5	Nikon	Coolpix 3700, Coolpix 4200, Coolpix 5200, Coolpix 5900, Coolpix 7900, Coolpix P100, Coolpix P3, Coolpix P4, Coolpix P500, Coolpix P5000, Coolpix P510, Coolpix P5100, Coolpix P520, Coolpix P6000, Coolpix P80, Coolpix P90, Coolpix S10

CNI0006	8717825940870	3V	1400mAh	CR-V3	Jupio	EasyShare CD33, EasyShare CD40, EasyShare CD43, EasyShare CD50, EasyShare C300, EasyShare C310, EasyShare C315, EasyShare C330, EasyShare C340, EasyShare C360, EasyShare C433, EasyShare C503, EasyShare C530, EasyShare C533, EasyShare C603, EasyShare C643, EasyShare C653, EasyShare C663, EasyShare C703, EasyShare C743, EasyShare C813, EasyShare C875, EasyShare CW330, EasyShare CX4200, EasyShare CX4210, EasyShare CX4230, EasyShare CX4300, EasyShare CX4310, EasyShare CX6200, EasyShare CX6230, EasyShare CX6330, EasyShare CX6445, EasyShare CX7220, EasyShare CX7300, EasyShare CX7310, EasyShare CX7330, EasyShare CX7430, EasyShare CX7525, EasyShare CX7530, EasyShare DX3215, EasyShare DX3500, EasyShare DX3600, EasyShare DX3700, EasyShare DX3900, EasyShare DX4330, EasyShare DX4530, EasyShare DX4900, EasyShare DX6340, EasyShare DX6440, EasyShare Z650 Zoom, EasyShare Z663 Zoom, EasyShare Z700 Zoom, EasyShare Z710 Zoom, EasyShare Z740 Zoom , EasyShare Z885, EasyShare ZD710 Zoom, DiMAGE E203, DiMAGE E223, DiMAGE E323, DiMAGE F100, DiMAGE F200, DiMAGE F300, DiMAGE G100, KD-210Z, KD-220Z, Coolpix 2100, Coolpix 2200, Coolpix 3100, Coolpix 3200, Coolpix 4100, Camedia C-1, Camedia C-100, Camedia C-120, Camedia C-150, Camedia C-160, Camedia C-170, Camedia C-180, Camedia C-1Z, Camedia C-2, Camedia C-200, Camedia C-2040, Camedia C-21, Camedia C-2100, Camedia C-211, Camedia C-21T, Camedia C-220, Camedia C-300, Camedia C-3000, Camedia C-3020, Camedia C-3030, Camedia C-3040, Camedia C-310, Camedia C-3100, Camedia C-315, Camedia C-350, Camedia C-360, Camedia C-370, Camedia C-40, Camedia C-4000, Camedia C-4040, Camedia C-4100, Camedia C-450, Camedia C-460, Camedia C-480, Camedia C-500, Camedia C-5050, Camedia C-55, Camedia C-5500, Camedia C-700, Camedia C-720, Camedia C-725, Camedia C-730, Camedia C-740, Camedia C-745, Camedia C-750, Camedia C-755, Camedia C-960, Camedia C-990, Camedia D-150, Camedia D-230, Camedia D-370, Camedia D-380, Camedia D-390, Camedia D-395, Camedia D-40, Camedia D-425, Camedia D-435, Camedia D-460, Camedia D-490, Camedia D-510, Camedia D-520, Camedia D-530, Camedia D-540, Camedia D-545, Camedia D-550, Camedia D-560, Camedia D-565, Camedia D-575, Camedia D-580, Camedia D-595, Camedia X-200, Camedia X-250, Camedia X-350, Camedia X-550, E-10, E-100RS, E-20, FE-100, FE-110, FE-120, SP-310, SP-320, SP-350, SP-500, Optio 230, Optio 330, Optio 33LF, Optio 33WR, Optio 43WR, Optio S30, Optio S40, Optio S45, Optio S50, Optio S55, Optio S60, Digibino DB100, Digibino DB200, ist, PDC-1050, DC 2.1S, DCZ 1.3S, DCZ 2.2S, DCZ 2.2V, DCZ 3.2S, DCZ 3.4, DCZ 4.1, DCZ 4.2, DCZ 5.1, EXAKTA DC 3300, Caplio RR230, Caplio RR330, Prego da3, Prego da4, Prego da5, Prego da6, Xacti DSC-R1, Xacti DSC-S1, Xacti DSC-S3, Xacti DSC-S4, Xacti DSC-S5, Xacti VPC-R1, Xacti VPC-R1E, Xacti VPC-R1EX, Xacti VPC-S1, Xacti VPC-S3, Xacti VPC-S4, Xacti VPC-S5, Xacti VPC-S6, PDR-M500, PDR-M700, PDR-T10, Digimax A302, Digimax A4, Digimax A40, Digimax A400, Digimax A402, Digimax A5, Digimax A50, Digimax A502, Digimax A503, Digimax A55W, Digimax A6, Digimax A7, Digimax 101, Digimax 130, Digimax 200, Digimax 202, Digimax 210SE, Digimax 220SE, Digimax 230, Digimax 240, Digimax 250, Digimax 300, Digimax 301, Digimax 324, Digimax 340, Digimax 3500, Digimax 350SE, Digimax 35MP3, Digimax 360, Digimax 370, Digimax 401, Digimax 410, Digimax 420, Digimax 430, Digimax 50Duo, Digimax 530, Digimax V3, Digimax V4, Digimax V40, Digimax V4000, Digimax V5, Digimax V50, Digimax V5000, Digimax V6, Digimax V6000, Digimax V70, GX-1, GX-1L, GX-1S, EasyShare CD33, EasyShare CD40, EasyShare CD43, EasyShare CD50, EasyShare C300, EasyShare C310, EasyShare C315, EasyShare C330, EasyShare C340, EasyShare C360, EasyShare C433, EasyShare C503, EasyShare C530, EasyShare C533, EasyShare C603, EasyShare C643, EasyShare C653, EasyShare C663, EasyShare C703, EasyShare C743, EasyShare C813, EasyShare C875, EasyShare CW330, EasyShare CX4200, EasyShare CX4210, EasyShare CX4230, EasyShare CX4300, EasyShare CX4310, EasyShare CX6200, EasyShare CX6230, EasyShare CX6330, EasyShare CX6445, EasyShare CX7220, EasyShare CX7300, EasyShare CX7310, EasyShare CX7330, EasyShare CX7430, EasyShare CX7525, EasyShare CX7530, EasyShare DX3215, EasyShare DX3500, EasyShare DX3600, EasyShare DX3700, EasyShare DX3900, EasyShare DX4330, EasyShare DX4530, EasyShare DX4900, EasyShare DX6340, EasyShare DX6440, EasyShare Z650 Zoom, EasyShare Z663 Zoom, EasyShare Z700 Zoom, EasyShare Z710 Zoom, EasyShare Z740 Zoom , EasyShare Z885, EasyShare ZD710 Zoom, QV-10, QV-100, QV-11, QV-20, QV-200, QV-2000UX, QV-2100, QV-2300UX, QV-2400UX, QV-2800UX, QV-2900UX, QV-30, QV-300, QV-3000, QV-3500, QV-3EX, QV-4000, QV-5000, QV-5700, QV-700, QV-770, QV-8000
CNI0007	8717825940801	7.4V	750mAh	EN-EL1	Nikon	Coolpix 4300, Coolpix 4500, Coolpix 4800, Coolpix 5000, Coolpix 5400, Coolpix 5700, Coolpix 775, Coolpix 8700, Coolpix 880, Coolpix 885, Coolpix 995, E880, DG-5W, DiMAGE A200
CNI0008	8717825940825	7.4V	1400mAh	EN-EL3	Nikon	D100 SLR, D50, D50 SLR, D70, D70 SLR, D70s, D70s SLR
CNI0009	8717825940832	11.1V	2250mAh	EN-EL4	Nikon	F6, F6 Film SLR, D2H, D2H SLR, D2Hs, D2HS SLR, D2X, D2X SLR, D2Xs, D2Xs SLR, D3, D3s, D3x
CNI0010	8717825946667	7.4V	1600mAh	EN-EL3E	Nikon	D100, D200, D200 SLR, D300, D300 SLR, D300s, D300s SLR, D50, D70, D700, D70s, D80, D90, DSLR D700
CNI0011	8717825946674	7.4V	1100mAh	EN-EL9(A)	Nikon	FinePix XP100, FinePix XP150, D3000, D3000 SLR, D40, D40x, D5000, D5000 SLR, D60, D60 SLR
CNI0012	8717825947350	3.7V	520mAh	EN-EL10	Nikon	Coolpix P50, Coolpix S200, Coolpix S203, Coolpix S210, Coolpix S220, Coolpix S225, Coolpix S230, Coolpix S3000, Coolpix S4000, Coolpix S500, Coolpix S510, Coolpix S5100, Coolpix S520, Coolpix S570, Coolpix S60, Coolpix S600, Coolpix S700, Coolpix S80

CNI0014	8717825942263	3.7V	650mAh	EN-EL11	Nikon	Xacti VPC-E10, Optio L50, Optio M50, Optio M60, Optio MX, Optio MX4, Optio 450, Optio 550, Optio 555, Optio 750, Optio 750Z, Optio S1, Optio V20, Optio W60, Optio W80, FE-370, ENEL10, EN-EL10, EN-4, BP-1500S, Tvs Digital, Coolpix S550, Coolpix S560, Caplio G3, Caplio G3 model M, Caplio G3 model S, Caplio G3S, Caplio G4, Caplio G4 wide, Caplio GX, Caplio GX8, Caplio 300G, Caplio 400G wide, Caplio 500G, Caplio 500G wide, Caplio 500SE, Caplio Pro G3, Caplio RX, Caplio RR10, Caplio RR30, Caplio R330, Caplio R50, R50, ENEL10, EN-EL10, EN-4, BP-1500S, Tvs Digital, Coolpix S550, Coolpix S560, FE-370, Optio L50, Optio M50, Optio M60, Optio MX, Optio MX4, Optio 450, Optio 550, Optio 555, Optio 750, Optio 750Z, Optio S1, Optio V20, Optio W60, Optio W80, Xacti VPC-E10, Xacti VPC-E10
CNI0015	8717825942584	3.7V	1050mAh	EN-EL12	Nikon	Coolpix AW100, Coolpix AW100s, Coolpix AW110, Coolpix AW120, Coolpix AW130, Coolpix P300, Coolpix P310, Coolpix P340, Coolpix S31 , Coolpix S1000pj, Coolpix S1100pj, Coolpix S1200pj, Coolpix S6000, Coolpix S610, Coolpix S6100, Coolpix S610c, Coolpix S6150, Coolpix S620, Coolpix S6200, Coolpix S630, Coolpix S6300, Coolpix S640, Coolpix S70, Coolpix S710, Coolpix S7000, Coolpix S8000, Coolpix S8100, Coolpix S8200, Coolpix S9100, Coolpix S9200, Coolpix S9300, Coolpix S9400, Coolpix S9500 GPS, Coolpix S9700, Coolpix S9900
CNI0016	8718226222305	3.7V	700mAh	EN-EL19	Nikon	Coolpix P330 (GPS), Coolpix S32, Coolpix S33, Coolpix S100, Coolpix S2500, Coolpix S2550, Coolpix S2700, Coolpix S2600, Coolpix S2900, Coolpix S3100, Coolpix S3300, Coolpix S3500, Coolpix S3600, Coolpix S3700, Coolpix S4100, Coolpix S6400, Coolpix S6500, Coolpix S4150, Coolpix S4300, Coolpix S5200, Coolpix S6500, Coolpix S6800, Coolpix S6900
CNI0017	8718226229397	3.7V	1020mAh	EN-EL20	Nikon	1 AW1, 1 J1, 1 J2, 1 J3, 1 S1, 1 V3, Coolpix A
CNI0019V2	8717825944663	7.4V	1100mAh	EN-EL14	Nikon	Coolpix P7000, Coolpix P7100 , Coolpix P7800 , Df body, D3100, D3200, D3300, D5100, D5200, D5300, D5500
CNI0020	8718226229885	7.0V	1700mAh	EN-EL15	Nikon	1 V1, D7000, D7100, D7200, D600, D610, D750, D800, D800E
CNI0021	8718226229892	10.8V	2800mAh	EN-EL18	Nikon	D4, D4s
CNI0022	8718503021607	7.2V	1250mAh	EN-EL21	Nikon	1 V2
CNI0023	8718503023274	3.8V	1550mAh	EN-EL23	Nikon	Coolpix P600, Coolpix P610, Coolpix P900, Coolpix S810C
CNI0024	8718503025704	7.2V	1010mAh	EN-EL22	Nikon	1 J4, 1 S2
CNI0025	8718503026817	7.2V	900mAh	EN-EL24	Nikon	1 J5
CNI0100	8718503026558	7.4V	2000mAh	EN-EL3E *ULTRA*	Nikon	D100, D200, D200 SLR, D300, D300 SLR, D300s, D300s SLR, D50, D70, D700, D70s, D80, D90, DSLR D700
CNI0101	8718503026565	7.0V	2000mAh	EN-EL15 *ULTRA*	Nikon	1 V1, D7000, D7100, D600, D610, D750, D800, D800E
CNI0102	8718503026800		1200mAh	EN-EL14A *ULTRA*	Nikon	Coolpix P7000, Coolpix P7100 , Coolpix P7800 , Df body, D3100, D3200, D3300, D5100, D5200, D5300, D5500

COL0002

8717825940924

3.7V

650mAh

Li-40B | Li-42B

Olympus

M900, Optio RS1000, Optio RS1500, Optio T30, Optio V10, Optio W30, Optima 1, Optima 100, Optima 102, Optima 103, Optima 104, Optima 105, Optima 145, Optima 200, Optima 3, Optima 830 UW, Optima 830UW, Life P42002, Life P43000, Life P43001, Life P43028, Life X43014, MD 86121, MD 86341, MD 86497 , MD 86535, Compactline 102, Compactline 202, Flexline 100 InTouch, Flexline 140, Flexline 200, Flexline 202, Flexline 240, Flexline 250, Powerflex 400, Powerflex 440, Powerflex 450, Powerflex 455, Powerflex 460, Powerflex 470, Powerflex 500, Powerflex 600, Powerflex 610HD, Powerflex 610 Full HD, Powerflex 700HD, Powerflex 700 Full HD, Powerflex 800, RCP-7325XS, X-8 Sports, XS-8, XS-10, ViviCam 5330, ViviCam 6330, Exilim EX-G1, Exilim EX-G1BK, Exilim EX-G1RD, Exilim EX-N5, Exilim EX-N50, Exilim Card EX-S5, Exilim Card EX-S5PK, Exilim Card EX-S5SR, Exilim Card EX-S6BE, Exilim Card EX-S6BK, Exilim Card EX-S6PK, Exilim Card EX-S6SR, Exilim Card EX-S7BK, Exilim Card EX-S7PE, Exilim Card EX-S8, Exilim Card EX-S8BE, Exilim Card EX-S8BK, Exilim Card EX-S8PE, Exilim Card EX-S8PK, Exilim Card EX-S8SR, Exilim Zoom EX-Z1, Exilim Zoom EX-Z2, Exilim Zoom EX-Z270, Exilim Zoom EX-Z280, Exilim Zoom EX-Z280SR, Exilim Zoom EX-Z330, Exilim Zoom EX-Z33BE, Exilim Zoom EX-Z33BK, Exilim Zoom EX-Z33PK, Exilim Zoom EX-Z33SR, Exilim Zoom EX-Z33VP, Exilim Zoom EX-Z35, Exilim Zoom EX-Z350, Exilim Zoom EX-Z35BE, Exilim Zoom EX-Z35BK, Exilim Zoom EX-Z35PE, Exilim Zoom EX-Z35PK, Exilim Zoom EX-Z35SR, Exilim Zoom EX-Z550, Exilim Zoom EX-Z550BE, Exilim Zoom EX-Z550BK, Exilim Zoom EX-Z550PK, Exilim Zoom EX-Z550RD, Exilim Zoom EX-Z550SR, Exilim Zoom EX-Z800, Exilim Zoom EX-Z800BE, Exilim Zoom EX-Z800BK, Exilim Zoom EX-Z800PK, Exilim Zoom EX-Z800SR, Exilim Zoom EX-Z800VP, Exilim Zoom EX-Z800YV, Exilim Zoom EX-ZS100, Exilim Zoom EX-ZS5, Exilim Zoom EX-ZS5BK, Exilim Zoom EX-ZS5EO, Exilim Zoom EX-ZS5PK, Exilim Zoom EX-ZS5SR, Exilim Hi-Zoom EX-H5, Exilim Hi-Zoom EX-H5BK, Exilim Hi-Zoom EX-H5RD, Exilim Hi-Zoom EX-H5SR, Exilim Hi-Zoom EX-H50, Exilim Hi-Zoom EX-ZS100, Exilim Hi-Zoom EX-ZS150, Exilim Zoom EX-Z16, Exilim Zoom EX-Z16BK, Exilim Zoom EX-Z16PK, Exilim Zoom EX-Z16RD, Exilim Zoom EX-Z16SR, Exilim Zoom EX-Z37, Exilim Zoom EX-Z370, Exilim Zoom EX-Z37BK, Exilim Zoom EX-Z37PE, Exilim Zoom EX-Z37PK, Exilim Zoom EX-Z37RD, Exilim Zoom EX-Z37SR, Exilim EX-N1, Exilim EX-N5, Exilim EX-N10, Exilim EX-N20, Exilim EX-N50, Exilim EX-S5, Exilim Zoom EX-Z1, Exilim Zoom EX-Z115, Exilim Zoom EX-Z2, Exilim Zoom EX-Z270, Exilim Zoom EX-Z280, Exilim Zoom EX-Z33, Exilim Zoom EX-Z330, Exilim Zoom EX-Z550, Exilim Zoom EX-Z800, EasyShare M522, EasyShare M530, EasyShare M532, Easyshare M5370, EasyShare M550, EasyShare M552, EasyShare M575, EasyShare M580, EasyShare M583, EasyShare M873, Easyshare M873 Zoom, EasyShare M883, Easyshare M883 Zoom, Easyshare MD30, EasyShare Mini, EasyShare Touch, Camedia D-630, Camedia X-600, D-630 Zoom, FE-150, FE-150 Zoom, FE-160, FE-190, FE-20, FE-220, FE-220D, FE-230, FE-240, FE-250, FE-280, FE-290, FE-300, FE-3000, FE-3010, FE-320, FE-330, FE-340, FE-350, FE-350 Grand Angle, FE-350 Wide, FE-360, FE-4000, FE-4010, FE-4030, FE-4050, FE-5000, FE-5010, FE-5020, FE-5030, FE-5050, FE-5500, IR-300, SP-700, VH-210, Stylus 1200, Stylus 5010, Stylus 7010, Stylus 7030, Stylus 7040, Stylus 710, Stylus 710 Digital, Stylus 720, Stylus 720 SW, Stylus 725 SW, Stylus 730, Stylus 740, Stylus 750, Stylus 760, Stylus 770 SW, Stylus 780, Stylus 790 SW, Stylus 790SW, Stylus 820, Stylus 830, Stylus 840, Stylus 850, Stylus 850 SW, Stylus-550WP, Stylus-7000, Tough 725SW, Tough 770SW, Tough TG-310, Tough TG-320, Tough 3000, u 1040, u 1050 SW, u 1060, u 1200, u 5000, u 700, u 7000, u 7010, u 710, u 720, u 720SW, u 730, u 740, u 750, u 760, u 770SW, u 780, u 790SW, u 795SW, u 820, u 830, u 840, u 850SW, u Tough-3000, u 5010, u 7020, u 7030, u 7040, u 7050, u770 SW, VH-210, VR-310, VR-320, VR-325, VR-330, X-785, X-790, X-795, X-800, X-905, X-915, X-920, X-935, X-960, X-970, EasyShare M522, EasyShare M530, EasyShare M532, Easyshare M5370, EasyShare M550, EasyShare M552, EasyShare M575, EasyShare M580, EasyShare M583, EasyShare M873, Easyshare M873 Zoom, EasyShare M883, Easyshare M883 Zoom, Easyshare MD30, EasyShare Mini, EasyShare Touch, Life P42002, Life P43000, Life P43001, Life P43028, Life X43014, MD 86121, MD 86341, MD 86497 , MD 86535, Compactline 102, Compactline 202, Flexline 100 InTouch, Flexline 140, Flexline 200, Flexline 202, Flexline 240, Flexline 250, Powerflex 400, Powerflex 450, Powerflex 455, Powerflex 460, Powerflex 470, Powerflex 500, Powerflex 600, Powerflex 610HD, Powerflex 610 Full HD, Powerflex 700HD, Powerflex 700 Full HD, Powerflex 800, RCP-7325XS, X-8 Sports, XS-8, XS-10, ViviCam 5330, ViviCam 6330, Exilim EX-G1, Exilim EX-G1BK, Exilim EX-G1RD, Exilim EX-N5, Exilim EX-N50, Exilim Card EX-S5, Exilim Card EX-S5PK, Exilim Card EX-S5SR, Exilim Card EX-S6BE, Exilim Card EX-S6BK, Exilim Card EX-S6PK, Exilim Card EX-S6SR, Exilim Card EX-S7BK, Exilim Card EX-S7PE, Exilim Card EX-S8, Exilim Card EX-S8BE, Exilim Card EX-S8BK, Exilim Card EX-S8PE, Exilim Card EX-S8PK, Exilim Card EX-S8SR, Exilim Zoom EX-Z1, Exilim Zoom EX-Z2, Exilim Zoom EX-Z270, Exilim Zoom EX-Z280, Exilim Zoom EX-Z280SR, Exilim Zoom EX-Z330, Exilim Zoom EX-Z33BE, Exilim Zoom EX-Z33BK, Exilim Zoom EX-Z33PK, Exilim Zoom EX-Z33SR, Exilim Zoom EX-Z33VP, Exilim Zoom EX-Z35, Exilim Zoom EX-Z350, Exilim Zoom EX-Z35BE, Exilim Zoom EX-Z35BK, Exilim Zoom EX-Z35PE, Exilim Zoom EX-Z35PK, Exilim Zoom EX-Z35SR, Exilim Zoom EX-Z550, Exilim Zoom EX-Z550BE, Exilim Zoom EX-Z550BK, Exilim Zoom EX-Z550PK, Exilim Zoom EX-Z550RD, Exilim Zoom EX-Z550SR, Exilim Zoom EX-Z800, Exilim Zoom EX-Z800BE, Exilim Zoom EX-Z800BK, Exilim Zoom EX-Z800PK, Exilim Zoom EX-Z800SR, Exilim Zoom EX-Z800VP, Exilim Zoom EX-Z800YV, Exilim Zoom EX-ZS100, Exilim Zoom EX-ZS5, Exilim Zoom EX-ZS5BK, Exilim Zoom EX-ZS5EO, Exilim Zoom EX-ZS5PK, Exilim Zoom EX-ZS5SR, Exilim Hi-Zoom EX-H5, Exilim Hi-Zoom EX-H5BK, Exilim Hi-Zoom EX-H5RD, Exilim Hi-Zoom EX-H5SR, Exilim Hi-Zoom EX-ZS100, Exilim Hi-Zoom EX-ZS150, Exilim Zoom EX-Z16, Exilim Zoom EX-Z16BK, Exilim Zoom EX-Z16PK, Exilim Zoom EX-Z16RD, Exilim Zoom EX-Z16SR, Exilim Zoom EX-Z37, Exilim Zoom EX-Z370, Exilim Zoom EX-Z37BK, Exilim Zoom EX-Z37PE, Exilim Zoom EX-Z37PK, Exilim Zoom EX-Z37RD, Exilim Zoom EX-Z37SR, Exilim EX-N1, Exilim EX-N5, Exilim EX-N10, Exilim EX-N20, Exilim EX-N50, Exilim EX-S5, Exilim Zoom EX-Z1, Exilim Zoom EX-Z115, Exilim Zoom EX-Z2, Exilim Zoom EX-Z270, Exilim Zoom EX-Z280, Exilim Zoom EX-Z33, Exilim Zoom EX-Z330, Exilim Zoom EX-Z550, Exilim Zoom EX-Z800, Optima 1, Optima 100, Optima 102, Optima 103, Optima 104, Optima 105, Optima 145, Optima 200, Optima 3, Optima 830 UW, Optima 830UW, Optio L30, Optio L36, Optio L40, Optio LS1000, Optio LS1100, Optio M30, Optio M40, Optio M90, Optio M900, Optio RS1000, Optio RS1500, Optio T30, Optio V10, Optio W30, ReefMaster DC600, Xacti VPC-E1403, Xacti VPC-E1403EX, Xacti VPC-T1060, Xacti VPC-T700, Xacti VPC-T700T, Xacti VPC-T850

COL0004	8717825940894	3.7V	950mAh	Li-10B Li-12B	Olympus	Xacti DSC-AZ3, Xacti DSC-J1, Xacti DSC-J2, Xacti DSC-MZ, Xacti DSC-MZ3, Xacti VPC-AZ3, Xacti VPC-AZ3EX, Xacti VPC-J1, Xacti VPC-J1EX, Xacti VPC-J2, Xacti VPC-J2EX, Xacti VPC-MZ3, Xacti VPC-MZ3EX, Xacti VPC-MZ3GX, Xacti VPC-T700, Xacti VPC-T850, UW8, UW-8, SuperSlim XS10, SuperSlim XS-10, SuperSlim XS70, SuperSlim XS-70, SuperSlim XS8, SuperSlim XS-8, SuperSlim XS80, SuperSlim XS-80, IS 12, IS12, Traveller SZ7, Traveller SZ-7, Traveller Z14, Traveller Z-14, Camedia C-470, Camedia C-470 Zoom, Camedia C-50, Camedia C-50 Zoom, Camedia C-5000 Zoom, Camedia C-60, Camedia C-60 Zoom, Camedia C-70, Camedia C-70 Zoom, Camedia C-7000, Camedia C-7000 Zoom, Camedia C-760, Camedia C-760 Ultra Zoom, Camedia C-765 Ultra, Camedia C-765 Ultra Zoom, Camedia C-770 Ultra, Camedia C-770 Ultra Zoom, Camedia D-590, Camedia D-590 Zoom, Camedia U-15, Camedia U-20, Camedia U-25, Camedia U-30, Camedia U-40, Camedia X-1, Camedia X-2, Camedia X-3, Camedia X-500, FE-200, FE-500, IR-500, u 10 , u 15, u 20, u 25, u 300, u 400, u 410, u 500, u 600, u 800, u 810, u 1000, u Digital 500, u Digital 600, u Digital 800, u 10 Digital, u 15 Digital, u 20 Digital, u 25 Digital, u 30 Digital, u 300 Digital, u 40 Digital, u 400 Digital, u 410 Digital, u Ferrari, Stylus 1000, Stylus 300, Stylus 300 Digital, Stylus 400, Stylus 400 Digital, Stylus 410, Stylus 410 Digital, Stylus 500, Stylus 500 Digital, Stylus 600, Stylus 600 Digital, Stylus 800, Stylus 800 Digital, Stylus 810, Stylus C-50, X-2, X-3, X-835, X-845, X-855, X-875
COL0005	8717825940917	3.6V	650mAh	Li-30B	Olympus	Xacti VPC-AZ3 EX, Xacti VPC-J1, Xacti VPC-J2, Xacti VPC-MZ3, Xacti VPC-X350, mju Mini Digital, mju Mini Digital S, mju-Mini, mju-mini Digital, mju-mini Digital, mju-mini Digital S, mju-mini Digital S, Stylus Verve Digital, Stylus Verve Digital S, Stylus Verve S
COL0006	8717825940887	7.2V	1500mAh	PS-BLM1	Olympus	Camedia C-5060, Camedia C-7070, Camedia C-8080, E-1, E-1 (SLR), E-3, E-3 (SLR), E-30, E-300 EVOLT SLR, E-330 EVOLT SLR, E-500 EVOLT SLR, E-510 SLR, E-520, E-520 SLR, E-550 EVOLT SLR, EVOLT E-300, EVOLT E-330, EVOLT E-500, EVOLT E-510, C-5060 Wide Zoom, C-7070 Wide Zoom, C-8080 Wide Zoom
COL0007	8717825942546	7.2V	1000mAh	PS-BLS1	Olympus	E-400, E-400 EVOLT SLR, E-410 EVOLT SLR, E-410 SLR, E-420, E-420 SLR, E-450, E-450 SLR, E-550 EVOLT SLR, E-600, E-620, E-620 SLR, E-P1, E-P2, E-P3, E-PL1, E-PL3, E-PM1, EVOLT E-410, PEN E-P2, PEN E-P3, PEN E-PL1, PEN E-PL3
COL0008	8717825942140	3.7V	850mAh	Li-50B	Olympus	Optio i-10, Optio RZ10, Optio RZ10 BLACK, Optio RZ10 LIME, Optio RZ10 VIOLET, Optio RZ10 WHITE, Optio RZ18, Optio WG1, Optio WG-1 GPS, Optio WG2, Optio WG-2, Optio X70, Optima 147, Exilim High Speed EX-TR10, Exilim High Speed EX-TR15, Exilim High Speed EX-TR300, Exilim High Speed EX-TR350, Caplio CX3, Caplio CX4, Caplio CX5, Caplio CX6, Caplio PX, CX3, CX4, CX5, WG-4, WG-30, PX, Exilim High Speed EX-TR10, Exilim High Speed EX-TR15, Exilim High Speed EX-TR300, Exilim High Speed EX-TR350, Optima 147, Optio i-10, Optio RZ10, Optio RZ10 BLACK, Optio RZ10 LIME, Optio RZ10 VIOLET, Optio RZ10 WHITE, Optio RZ18, Optio WG1, Optio WG-1 GPS, Optio WG2, Optio WG-2, Optio X70, u 1010, u 1020, u 1030, u 1030SW, u 1030SW, u 5010, u 6020, u 9000, u 9010, u Tough 1030SW, u Tough 6000, u Tough 6010, u Tough 6020, u Tough 8000, u Tough 8010, u Tough 9000, u Tough-6000, u Tough-6010, u Tough-6020, u Tough-8000, u Tough-8010, u-9000, u-9000, u-9010, u-9010, TG-610, TG-630, TG-820, TG-830, Tough TG-850, SP-800UZ, SP-810UZ, Stylus 1010, Stylus 1020, Stylus 1030, Stylus 1030SW, Stylus Tough-6000, Stylus Tough-8000, Stylus-9000, XZ-10, Tough 1030SW, Tough TG-610, Tough TG-630, Tough TG-810, Tough TG-820, Tough TG-830, Tough TG-850, Tough-6000, Tough-6010, Tough-6020, Tough-8000, Tough-8010, Traveller SZ-11, Traveller SZ-14, Traveller SZ-15, Traveller SZ-16, Traveller SZ-30MR, Traveller SZ-31MR, VG-170, VH-410, VH-520, VR-340, VR-360, VG-170, VH-410, VH-520, VR-340, VR-360, XZ-1, XZ-10
COL0009	8718226220974	2.4V	840mAh	BR-403	Olympus	DS-2300, DS-3000, DS-4000
COL0010	8718226221162	3.6V	650mAh	Li-70B	Olympus	D-705, D-710, D-715, FE-4020, FE-4040, FE-5040, VG-110, VG-120, VG-130, VG-140, VG-145, VG-150, VG-160, VG-110, VG-120, VG-130, VG-140, VG-145, VG-150, VG-160, X-940
COL0011	8718226222183	7.4V	1620mAh	BLM-5 PS-BLM5	Olympus	E-5, E-5 (SLR)
COL0012	8718226222244	7.2V	1210mAh	BLS-5 PS-BLS5	Olympus	Stylus 1, E-P3, E-PL1s, E-PL2, E-PL3, E-PL5, E-PL7, E-PM1, E-M10, OM-D E-M10, PEN E-PM1
COL0013	8718503021140	3.7V	1270mAh	Li-90B	Olympus	Tough TG-1, Tough TG-2, Tough TG-3, Tough TG-4, Traveller SH-50, Traveller SH50, XZ-2
COL0014	8718503021515	7.4V	1220mAh	PS-BLN1	Olympus	PEN E-P5, OM-D E-M5

CPA0002	8717825941099	3.7V	1100mAh	CGA-S005E DMW-BCC12	Panasonic	Lumix DMC-FS1, Lumix DMC-FS2, Lumix DMC-FX01, Lumix DMC-FX01-A, Lumix DMC-FX01BB, Lumix DMC-FX01BS, Lumix DMC-FX01EB-K, Lumix DMC-FX01EB-S, Lumix DMC-FX01EB-W, Lumix DMC-FX01EF-A, Lumix DMC-FX01EF-K, Lumix DMC-FX01EF-S, Lumix DMC-FX01EF-W, Lumix DMC-FX01EG, Lumix DMC-FX01EG-A, Lumix DMC-FX01EG-K, Lumix DMC-FX01EG-S, Lumix DMC-FX01GK, Lumix DMC-FX01-K, Lumix DMC-FX01-P, Lumix DMC-FX01-S, Lumix DMC-FX01-W, Lumix DMC-FX07, Lumix DMC-FX07EF, Lumix DMC-FX07EF-S, Lumix DMC-FX07EG, Lumix DMC-FX07EGM, Lumix DMC-FX07K, Lumix DMC-FX10, Lumix DMC-FX100EF-K, Lumix DMC-FX100EF-N, Lumix DMC-FX100EF-S, Lumix DMC-FX100EG, Lumix DMC-FX100EG-K, Lumix DMC-FX100EG-S, Lumix DMC-FX100GK, Lumix DMC-FX10A, Lumix DMC-FX10EB-K, Lumix DMC-FX10EB-S, Lumix DMC-FX10EF-S, Lumix DMC-FX10EG, Lumix DMC-FX10EG-A, Lumix DMC-FX10EG-S, Lumix DMC-FX10P, Lumix DMC-FX10S, Lumix DMC-FX12, Lumix DMC-FX12EB-K, Lumix DMC-FX12EB-S, Lumix DMC-FX12EF-S, Lumix DMC-FX12EG, Lumix DMC-FX12EG-K, Lumix DMC-FX12EG-S, Lumix DMC-FX12GK, Lumix DMC-FX12K, Lumix DMC-FX12S, Lumix DMC-FX150, Lumix DMC-FX150EFK, Lumix DMC-FX150K, Lumix DMC-FX150S, Lumix DMC-FX180, Lumix DMC-FX180GK, Lumix DMC-FX180K, Lumix DMC-FX180N, Lumix DMC-FX180S, Lumix DMC-FX3, Lumix DMC-FX3EF, Lumix DMC-FX3EF-S, Lumix DMC-FX3EG, Lumix DMC-FX3EGM, Lumix DMC-FX3EG-S, Lumix DMC-FX3K, Lumix DMC-FX3S, Lumix DMC-FX50, Lumix DMC-FX50EF, Lumix DMC-FX50EG, Lumix DMC-FX50EGM, Lumix DMC-FX50K, Lumix DMC-FX8, Lumix DMC-FX8-A, Lumix DMC-FX8BS, Lumix DMC-FX8EBB, Lumix DMC-FX8EG-A, Lumix DMC-FX8EG-K, Lumix DMC-FX8EG-P, Lumix DMC-FX8EG-S, Lumix DMC-FX8GK, Lumix DMC-FX8GN, Lumix DMC-FX8-K, Lumix DMC-FX8-P, Lumix DMC-FX8-S, Lumix DMC-FX9, Lumix DMC-FX9BB, Lumix DMC-FX9BS, Lumix DMC-FX9EB-K, Lumix DMC-FX9EB-S, Lumix DMC-FX9EB-S, Lumix DMC-FX9EF-K, Lumix DMC-FX9EF-S, Lumix DMC-FX9EG, Lumix DMC-FX9EG-K, Lumix DMC-FX9EG-R, Lumix DMC-FX9EG-S, Lumix DMC-FX9GK, Lumix DMC-FX9GN, Lumix DMC-FX9-H, Lumix DMC-FX9-K, Lumix DMC-FX9-R, Lumix DMC-FX9-S, Lumix DMC-LX1, Lumix DMC-LX1BS, Lumix DMC-LX1EG-K, Lumix DMC-LX1EG-S, Lumix DMC-LX1GK, Lumix DMC-LX1GN, Lumix DMC-LX1-K, Lumix DMC-LX1K-B, Lumix DMC-LX1-S, Lumix DMC-LX1S-B, Lumix DMC-LX2, Lumix DMC-LX2EF, Lumix DMC-LX2EF-S, Lumix DMC-LX2EG, Lumix DMC-LX2EG-K, Lumix DMC-LX2EGM, Lumix DMC-LX2EG-S, Lumix DMC-LX2K, Lumix DMC-LX2S, Lumix DMC-LX3, Lumix DMC-LX3EF-K, Lumix DMC-LX3GK, Lumix DMC-LX3K, Lumix DMC-LX3S, HMX-R10, HMX-R10BP, Finepix F20, FinePix F40fd, FinePix F45fd, FinePix F47fd, C-LUX1, D-LUX 2, D-LUX 3, D-LUX 4, D-LUX2, D-LUX3, Caplio GR Digital, Caplio GR Digital II, Caplio GR Digital III, Caplio G600, Caplio GX100, Caplio GX200, Caplio R3, Caplio R30, Caplio R4, Caplio R40, Caplio R5, GR Digital III, GR Digital IV, G600, G700, G700SE, GX200, C-LUX1, D-LUX 2, D-LUX 3, D-LUX 4, D-LUX2, D-LUX3, Finepix F20, FinePix F40fd, FinePix F45fd, FinePix F47fd, HMX-R10, HMX-R10BP, Lumix DMC-FS1, Lumix DMC-FS2, Lumix DMC-FX01, Lumix DMC-FX01-A, Lumix DMC-FX01BB, Lumix DMC-FX01BS, Lumix DMC-FX01EB-K, Lumix DMC-FX01EB-S, Lumix DMC-FX01EB-W, Lumix DMC-FX01EF-A, Lumix DMC-FX01EF-K, Lumix DMC-FX01EF-S, Lumix DMC-FX01EF-W, Lumix DMC-FX01EG, Lumix DMC-FX01EG-A, Lumix DMC-FX01EG-K, Lumix DMC-FX01EG-S, Lumix DMC-FX01GK, Lumix DMC-FX01-K, Lumix DMC-FX01-P, Lumix DMC-FX01-S, Lumix DMC-FX01-W, Lumix DMC-FX07, Lumix DMC-FX07EF, Lumix DMC-FX07EF-S, Lumix DMC-FX07EG, Lumix DMC-FX07EGM, Lumix DMC-FX07K, Lumix DMC-FX10, Lumix DMC-FX100EF-K, Lumix DMC-FX100EF-N, Lumix DMC-FX100EF-S, Lumix DMC-FX100EG, Lumix DMC-FX100EG-K, Lumix DMC-FX100EG-S, Lumix DMC-FX100GK, Lumix DMC-FX10A, Lumix DMC-FX10EB-K, Lumix DMC-FX10EB-S, Lumix DMC-FX10EF-S, Lumix DMC-FX10EG, Lumix DMC-FX10EG-A, Lumix DMC-FX10EG-S, Lumix DMC-FX10P, Lumix DMC-FX10S, Lumix DMC-FX12, Lumix DMC-FX12EB-K, Lumix DMC-FX12EB-S, Lumix DMC-FX12EF-S, Lumix DMC-FX12EG, Lumix DMC-FX12EG-K, Lumix DMC-FX12EG-S, Lumix DMC-FX12GK, Lumix DMC-FX12K, Lumix DMC-FX12S, Lumix DMC-FX150, Lumix DMC-FX150EFK, Lumix DMC-FX150K, Lumix DMC-FX150S, Lumix DMC-FX180, Lumix DMC-FX180GK, Lumix DMC-FX180K, Lumix DMC-FX180N, Lumix DMC-FX180S, Lumix DMC-FX3, Lumix DMC-FX3EF, Lumix DMC-FX3EF-S, Lumix DMC-FX3EG, Lumix DMC-FX3EGM, Lumix DMC-FX3EG-S, Lumix DMC-FX3K, Lumix DMC-FX3S, Lumix DMC-FX50, Lumix DMC-FX50EF, Lumix DMC-FX50EG, Lumix DMC-FX50EGM, Lumix DMC-FX50K, Lumix DMC-FX8, Lumix DMC-FX8-A, Lumix DMC-FX8BS, Lumix DMC-FX8EBB, Lumix DMC-FX8EG-A, Lumix DMC-FX8EG-K, Lumix DMC-FX8EG-P, Lumix DMC-FX8EG-S, Lumix DMC-FX8GK, Lumix DMC-FX8GN, Lumix DMC-FX8-K, Lumix DMC-FX8-P, Lumix DMC-FX8-S, Lumix DMC-FX9, Lumix DMC-FX9BB, Lumix DMC-FX9BS, Lumix DMC-FX9EB-K, Lumix DMC-FX9EB-S, Lumix DMC-FX9EB-S, Lumix DMC-FX9EF-K, Lumix DMC-FX9EF-S, Lumix DMC-FX9EG, Lumix DMC-FX9EG-K, Lumix DMC-FX9EG-R, Lumix DMC-FX9EG-S, Lumix DMC-FX9GK, Lumix DMC-FX9GN, Lumix DMC-FX9-H, Lumix DMC-FX9-K, Lumix DMC-FX9-R, Lumix DMC-FX9-S, Lumix DMC-LX1, Lumix DMC-LX1BS, Lumix DMC-LX1EG-K, Lumix DMC-LX1EG-S, Lumix DMC-LX1GK, Lumix DMC-LX1GN, Lumix DMC-LX1-K, Lumix DMC-LX1K-B, Lumix DMC-LX1-S, Lumix DMC-LX1S-B, Lumix DMC-LX2, Lumix DMC-LX2EF, Lumix DMC-LX2EF-S, Lumix DMC-LX2EG, Lumix DMC-LX2EG-K, Lumix DMC-LX2EGM, Lumix DMC-LX2EG-S, Lumix DMC-LX2K, Lumix DMC-LX2S, Lumix DMC-LX3, Lumix DMC-LX3EF-K, Lumix DMC-LX3GK, Lumix DMC-LX3K, Lumix DMC-LX3S, Optio X90, X90
CPA0006	8717825941051	3.6V	600mAh	CGR-S001 DMW-BCA7	Panasonic	D-LUX, Lumix DMC-F1, Lumix DMC-F1B, Lumix DMC-F1E-S, Lumix DMC-F1K, Lumix DMC-F1PP, Lumix DMC-F1S, Lumix DMC-FX1, Lumix DMC-FX1EG, Lumix DMC-FX1EG-A, Lumix DMC-FX1EG-R, Lumix DMC-FX1EG-S, Lumix DMC-FX1GC-A, Lumix DMC-FX1GC-D, Lumix DMC-FX1GC-G, Lumix DMC-FX1GC-R, Lumix DMC-FX1GC-S, Lumix DMC-FX5, Lumix DMC-FX5EG, Lumix DMC-FX5EG-A, Lumix DMC-FX5EG-S, Lumix DMC-FX5EN
CPA0007	8717825941112	3.6V	900mAh	CGR-S101E DMW-BC7	Panasonic	Lumix DMC-F7, Lumix DMC-F7-A, Lumix DMC-F7A-S, Lumix DMC-F7-B, Lumix DMC-F7-K, Lumix DMC-F7-N, Lumix DMC-F7PP, Lumix DMC-F7-R, Lumix DMC-F7-S

CPA0009	8717825941082	3.7V	650mAh	CGR-S004E DMW-BCB7	Panasonic	Lumix DMC-FX2 Series, Lumix DMC-FX2B, Lumix DMC-FX2EBS, Lumix DMC-FX2EG-S, Lumix DMC-FX2GN, Lumix DMC-FX2PL-S, Lumix DMC-FX2S, Lumix DMC-FX7 Series, Lumix DMC-FX7A, Lumix DMC-FX7B, Lumix DMC-FX7EBS, Lumix DMC-FX7EG, Lumix DMC-FX7EG-A, Lumix DMC-FX7EG-K, Lumix DMC-FX7EG-R, Lumix DMC-FX7EG-S, Lumix DMC-FX7EG-T, Lumix DMC-FX7GN, Lumix DMC-FX7K, Lumix DMC-FX7PP-S, Lumix DMC-FX7R, Lumix DMC-FX7S, Lumix DMC-FX7T, Lumix DMC-FX7W, Life P42005, MD 86027
CPA0010	8717825941068	7.2V	650mAh	CGR-S002 DMW-BM7	Panasonic	Lumix DMC-FZ1, Lumix DMC-FZ10, Lumix DMC-FZ10EG-K, Lumix DMC-FZ10EG-S, Lumix DMC-FZ10GN, Lumix DMC-FZ15, Lumix DMC-FZ15K, Lumix DMC-FZ1A, Lumix DMC-FZ1A-K, Lumix DMC-FZ1A-S, Lumix DMC-FZ1B, Lumix DMC-FZ1PP, Lumix DMC-FZ2, Lumix DMC-FZ20, Lumix DMC-FZ20BB, Lumix DMC-FZ20E, Lumix DMC-FZ20EG-K, Lumix DMC-FZ20EG-S, Lumix DMC-FZ20K, Lumix DMC-FZ20S, Lumix DMC-FZ2A-S, Lumix DMC-FZ3, Lumix DMC-FZ3B, Lumix DMC-FZ3EG-S, Lumix DMC-FZ4, Lumix DMC-FZ4EG-S, Lumix DMC-FZ4S, Lumix DMC-FZ5, Lumix DMC-FZ5EG, Lumix DMC-FZ5GK, Lumix DMC-FZ5K, Lumix DMC-FZ5S
CPA0011	8717825941105	7.2V	850mAh	CGA-S006E DMW-BMA7	Panasonic	Lumix DMC-FZ18, Lumix DMC-FZ18EB-K, Lumix DMC-FZ18EG, Lumix DMC-FZ18EG-K, Lumix DMC-FZ18EG-S, Lumix DMC-FZ18GK, Lumix DMC-FZ18K, Lumix DMC-FZ18S, Lumix DMC-FZ28, Lumix DMC-FZ28GK, Lumix DMC-FZ28K, Lumix DMC-FZ28S, Lumix DMC-FZ30, Lumix DMC-FZ30BB, Lumix DMC-FZ30EE-K, Lumix DMC-FZ30EE-S, Lumix DMC-FZ30EG, Lumix DMC-FZ30EG-K, Lumix DMC-FZ30EG-S, Lumix DMC-FZ30GK, Lumix DMC-FZ30-K, Lumix DMC-FZ30PP, Lumix DMC-FZ30-S, Lumix DMC-FZ35, Lumix DMC-FZ35GK, Lumix DMC-FZ35K, Lumix DMC-FZ38, Lumix DMC-FZ38K, Lumix DMC-FZ50, Lumix DMC-FZ50EB-K, Lumix DMC-FZ50EB-S, Lumix DMC-FZ50EE-K, Lumix DMC-FZ50EE-S, Lumix DMC-FZ50EF, Lumix DMC-FZ50EGM, Lumix DMC-FZ50K, Lumix DMC-FZ50S, Lumix DMC-FZ7, Lumix DMC-FZ7BB, Lumix DMC-FZ7BS, Lumix DMC-FZ7EB-K, Lumix DMC-FZ7EB-S, Lumix DMC-FZ7EE-K, Lumix DMC-FZ7EE-S, Lumix DMC-FZ7EF-K, Lumix DMC-FZ7EF-S, Lumix DMC-FZ7EG-K, Lumix DMC-FZ7EG-S, Lumix DMC-FZ7GK, Lumix DMC-FZ7-K, Lumix DMC-FZ7-S, Lumix DMC-FZ8, Lumix DMC-FZ8EB-K, Lumix DMC-FZ8EB-S, Lumix DMC-FZ8EF-S, Lumix DMC-FZ8EG, Lumix DMC-FZ8GK, Lumix DMC-FZ8K, Lumix DMC-FZ8S
CPA0012	8717825941143	7.2V	1400mAh	CGR-S602E DMW-BC14	Panasonic	DIGILUX 1, DIGILUX 2, DIGILUX 3, Lumix DMC-LC1, Lumix DMC-LC1B, Lumix DMC-LC1EG-K, Lumix DMC-LC20, Lumix DMC-LC40, Lumix DMC-LC40A-K, Lumix DMC-LC40B, Lumix DMC-LC40D, Lumix DMC-LC40K, Lumix DMC-LC40S, Lumix DMC-LC5, Lumix DMC-LC5A-K, Lumix DMC-LC5A-S, Lumix DMC-LC5B, Lumix DMC-LC5K, Lumix DMC-LC5S, Lumix DMC-L1, Lumix DMC-L1K, Lumix DMC-L1KEB-K, Lumix DMC-L1KEG-K
CPA0013	8717825947329	3.7V	1000mAh	CGR-S007E DMW-BCD10	Panasonic	Lumix DMC-TZ1, Lumix DMC-TZ11, Lumix DMC-TZ15, Lumix DMC-TZ11GK, Lumix DMC-TZ15GK, Lumix DMC-TZ1-A, Lumix DMC-TZ1BK, Lumix DMC-TZ1BS, Lumix DMC-TZ1EB-A, Lumix DMC-TZ1EB-K, Lumix DMC-TZ1EB-S, Lumix DMC-TZ1EF-A, Lumix DMC-TZ1EF-K, Lumix DMC-TZ1EF-S, Lumix DMC-TZ1EG-A, Lumix DMC-TZ1EG-K, Lumix DMC-TZ1EG-S, Lumix DMC-TZ1GK, Lumix DMC-TZ1-K, Lumix DMC-TZ1-S, Lumix DMC-TZ2, Lumix DMC-TZ2EB-K, Lumix DMC-TZ2EB-S, Lumix DMC-TZ2EF-S, Lumix DMC-TZ2EG, Lumix DMC-TZ2EG-K, Lumix DMC-TZ2EG-S, Lumix DMC-TZ2GK, Lumix DMC-TZ3, Lumix DMC-TZ3A, Lumix DMC-TZ3EB-K, Lumix DMC-TZ3EB-S, Lumix DMC-TZ3EF-S, Lumix DMC-TZ3EG, Lumix DMC-TZ3EG-K, Lumix DMC-TZ3EG-S, Lumix DMC-TZ3GK, Lumix DMC-TZ3K, Lumix DMC-TZ3S, Lumix DMC-TZ4K, Lumix DMC-TZ4S, Lumix DMC-TZ50, Lumix DMC-TZ50S, Lumix DMC-TZ5, Lumix DMC-TZ5A, Lumix DMC-TZ5K, Lumix DMC-TZ5S
CPA0014	8717825941273	3.6V	600mAh	CGR-S008E DMW-BCE10 VW-VBJ10	Panasonic	HM-TA1H, HM-TA1R, HM-TA1V, HM-TA1W, SDR-S10, SDR-S10EB-K, SDR-S10EG-K, SDR-S10P1, SDR-S15, SDR-S26, SDR-S7, SDR-S7EG-K, SDR-S7EG-S, SDR-S7K, SDR-S7S, SDR-S9, SDR-S9EG-S, SDR-SW20, SDR-SW20R, SDR-SW20S, SDR-SW21, SDR-SW28, C-LUX 2, C-LUX 3, Caplio CX1, Caplio CX2, Caplio R10, Caplio R6, Caplio R7, Caplio R8, CX1, CX2, R10, C-LUX 2, C-LUX 3, HM-TA1H, HM-TA1R, HM-TA1V, HM-TA1W, SDR-S10, SDR-S10EB-K, SDR-S10EG-K, SDR-S10P1, SDR-S15, SDR-S26, SDR-S7, SDR-S7EG-K, SDR-S7EG-S, SDR-S7K, SDR-S7S, SDR-S9, SDR-S9EG-S, SDR-SW20, SDR-SW20R, SDR-SW20S, SDR-SW21, SDR-SW28, Lumix DMC-FS20GK, Lumix DMC-FS20K, Lumix DMC-FS20P, Lumix DMC-FS20S, Lumix DMC-FS3, Lumix DMC-FS3A, Lumix DMC-FS3GK, Lumix DMC-FS3P, Lumix DMC-FS3S, Lumix DMC-FS5, Lumix DMC-FS5GK, Lumix DMC-FS5K, Lumix DMC-FS5R, Lumix DMC-FS5S, Lumix DMC-FX30, Lumix DMC-FX30A, Lumix DMC-FX30EB-K, Lumix DMC-FX30EB-S, Lumix DMC-FX30EB-T, Lumix DMC-FX30EF-K, Lumix DMC-FX30EF-S, Lumix DMC-FX30EG, Lumix DMC-FX30EG-A, Lumix DMC-FX30EG-K, Lumix DMC-FX30EG-S, Lumix DMC-FX30EG-T, Lumix DMC-FX30GK, Lumix DMC-FX30K, Lumix DMC-FX30S, Lumix DMC-FX30T, Lumix DMC-FX33, Lumix DMC-FX33A, Lumix DMC-FX33EB-S, Lumix DMC-FX33EF-K, Lumix DMC-FX33EF-S, Lumix DMC-FX33EG, Lumix DMC-FX33EG-A, Lumix DMC-FX33EG-K, Lumix DMC-FX33EG-S, Lumix DMC-FX33EG-T, Lumix DMC-FX33GK, Lumix DMC-FX33K, Lumix DMC-FX33S, Lumix DMC-FX33T, Lumix DMC-FX35, Lumix DMC-FX35A, Lumix DMC-FX35K, Lumix DMC-FX35S, Lumix DMC-FX36, Lumix DMC-FX36GK, Lumix DMC-FX37, Lumix DMC-FX37A, Lumix DMC-FX37K, Lumix DMC-FX37P, Lumix DMC-FX37S, Lumix DMC-FX37T, Lumix DMC-FX37W, Lumix DMC-FX38, Lumix DMC-FX38GK, Lumix DMC-FX38K, Lumix DMC-FX38P, Lumix DMC-FX38S, Lumix DMC-FX38T, Lumix DMC-FX38W, Lumix DMC-FX500, Lumix DMC-FX500K, Lumix DMC-FX500S, Lumix DMC-FX520, Lumix DMC-FX520GK, Lumix DMC-FX55, Lumix DMC-FX55EB-K, Lumix DMC-FX55EF-K, Lumix DMC-FX55EF-S, Lumix DMC-FX55EG, Lumix DMC-FX55EG-K, Lumix DMC-FX55EG-S, Lumix DMC-FX55GK, Lumix DMC-FX55K, Lumix DMC-FX55P, Lumix DMC-FX55S

CPA0023	8718226226549	3.6V	1050mAh	DMW-BCJ13E	Panasonic	DMC-LX5, DMC-LX7
CPA0024	8718503022161	7.2V	1860mAh	DMW-BLF19E	Panasonic	DMC-GH3, DMC-GH4
CPA0025	8718503023014	3.6V	690mAh	DMW-BCL7	Panasonic	DMC-SZ3, DMC-SZ8, DMC-SZ9, DMC-XS1, DMC-XS3, DMC-FH10, DMC-F5, DMC-FS50
CPA0026	8718503023021	3.6V	1150mAh	DMW-BCM13E	Panasonic	DMC-FT5, DMC-FT5 GPS NFC, DMC-LZ40, DMC-TS5, DMC-TZ40, DMC-TZ41, DMC-TZ55, DMC-TZ57, DMC-TZ60, DMC-TZ70, DMC-ZS30
CPA0027	8718503023038	7.2V	900mAh	DMW-BLG10	Panasonic	DMC-GF6, DMC-GX7, DMC-LX100
CPA0028	8718503023052	7.2V	1200mAh	DMW-BLC12E	Panasonic	DMC-FZ200, DMC-FZ300, DMC-FZ1000, DMC-GH2, DMC-G5, DMC-G5K, DMC-G5X, DMC-G5W, DMC-G6, DMC-G7, DMC-GX8
CPA0029	8718503022727	3.7V	800mAh	DMW-BCN10	Panasonic	DMC-LF1, DMC-LF1K, DMC-LF1W, DMC-LF1EG-K, DMC-LF1EG-W
CPA0030	8718503023113	7.2V	1050mAh	DMW-BLD10	Panasonic	DMC-GF2, DMC-GF2, DMC-GF2CK, DMC-GF2CR, DMC-GF2CS, DMC-GF2CW, DMC-GF2KK, DMC-GF2KR, DMC-GF2KS, DMC-GF2KW, DMC-GF2, DMC-GF2C, DMC-GF2W, DMC-GF2K, DMC-GF2S, DMC-GF2CEB, DMC-GF2WEB, DMC-GF2P, DMC-GF2KW, DMC-GF2KR, DMC-GF2CW, DMC-GF2CS, DMC-GF2CR, DMC-GF2CK, DMC-GF2KS, DMC-GF2KK, DMC-GF2KEB, DMC-G3, DMC-G3, DMC-G3KBODY, DMC-G3KK, DMC-G3KR, DMC-G3KT, DMC-G3KW, DMC-G3, DMC-GX1, DMC-GX1KBODY, DMC-GX1KK, DMC-GX1KS
CPA0031	8718503023243	7.2V	680mAh	DMW-BLH7	Panasonic	DMC-GM1
CPA0100	8718503026572	7.2V	2000mAh	DMW-BLF19 *ULTRA*	Panasonic	DMC-GH3, DMC-GH4
CPE0010	8717825942478	3.7V	650mAh	D-Li88	Pentax	Optio H90, Optio P70, Optio P80, Optio W90, Optio WS80, HX-DC1, HX-DC10, HX-WA1, Camileo BW10, Camileo SX500, Camileo SX900, HX-DC1, HX-DC10, HX-WA1, Optio H90, Optio P70, Optio P80, Optio W90, Optio WS80, Xacti VPC-X1200, Xacti VPC-X1220, Xacti VPC-X1420, Xacti DMX-CG10, Xacti DMX-CG100, Xacti DMX-CG11, Xacti DMX-CG110, Xacti DMX-CG11D, Xacti DMX-CG11G, Xacti DMX-CG11W, Xacti DMX-CS1, Xacti DMX-GH1, Xacti VPC-CA100, Xacti VPC-CA100EX, Xacti VPC-CA100EXBK, Xacti VPC-CA100EXP, Xacti VPC-CA100EXYL, Xacti VPC-CA102, Xacti VPC-CA102YL, Xacti VPC-CG10, Xacti VPC-CG100, Xacti VPC-CG100EX, Xacti VPC-CG100EXBK-B, Xacti VPC-CG100EXW-B, Xacti VPC-CG102BK, Xacti VPC-CG10BK, Xacti VPC-CG10EXBK-B, Xacti VPC-CG10EXP-B, Xacti VPC-CG10EXW-B, Xacti VPC-CG10GX, Xacti VPC-CG10P, Xacti VPC-CG20, Xacti VPC-CG20BK, Xacti VPC-CG20EX-B, Xacti VPC-CG21, Xacti VPC-CG88, Xacti VPC-CS1, Xacti VPC-CS1P, Xacti VPC-GH1, Xacti VPC-GH1EX-B, Xacti VPC-GH2, Xacti VPC-GH3, Xacti VPC-GH4, Xacti VPC-PD1, Xacti VPC-PD2BK
CPE0011	8717825945691	7.2V	1600mAh	D-Li90	Pentax	K3, K-3, K-3 II, K5, K-5, K-5 II, K-5 IIS, K7, K-7, 645, 645D
CPE0012	8718226221995	7.2V	1100mAh	D-Li109	Pentax	K-30, K-50, K-R, K-S1, K-S2
CRI0004	8717825941327	3.7V	1500mAh	DB-50	Ricoh	EasyShare Z1012, EasyShare Z1012 IS, EasyShare Z1015, EasyShare Z1015 IS, EasyShare Z1085, EasyShare Z1085 IS, EasyShare Z1485, EasyShare Z1485 IS, EasyShare Z612, EasyShare Z712, EasyShare Z712 IS, EasyShare Z812, EasyShare Z812 IS Zoom, EasyShare Z8612, EasyShare Z8612 IS, EasyShare Z885, Caplio RZ1, Caplio R1, Caplio R1S, Caplio R1V, Caplio R2, EasyShare Z1012, EasyShare Z1012 IS, EasyShare Z1015, EasyShare Z1015 IS, EasyShare Z1085, EasyShare Z1085 IS, EasyShare Z1485, EasyShare Z1485 IS, EasyShare Z612, EasyShare Z712, EasyShare Z712 IS, EasyShare Z812, EasyShare Z812 IS Zoom, EasyShare Z8612, EasyShare Z8612 IS, EasyShare Z885, KLIC8000, KLIC-8000, Zx1
CRO0001	8717825942300	3.7V	1100mAh	NP-83	Rollei	DC8300, DC-8300, MD 85910, DC8111, DC-8111, 02491-0028-01, Vx8, 02491-0028-01, CR-8530, HDC831E, 02491-0028-00, 02491-0028-01, DS8330-1, NP83, NP-83, DS8330, ViviCam 8300, DC-8300, DC-8300, DC-8500, DC-8600, DC-XZ6, 02491-0028-01, CR-8530, HDC831E, 02491-0028-01, Vx8, DC8111, DC-8111, DC8300, DC-8300, MD 85910, DP8300, DP-8300, 02491-0028-01, DC-8000, Prego 8330, Prego DP8300, Prego DP8330, RCP-7430XW, RCP-8427XW, RCP-8527X, Compactline 150
CRO0002	8718503026824	3.7V	1000mAh	RL410B	Rollei	Actioncam 410
CSA0001	8717825941969	3.7V	650mAh	SLB-0837B	Samsung	L201, L301, L70, L70B, L83T, NV10, NV15, NV20, NV8, VLUU NV10
CSA0002	8717825941747	3.7V	950mAh	SLB-1137D	Samsung	i100, i80, i85, L74 Wide, NV100HD, NV103, NV106 HD, NV11, NV24HD, NV30, NV40, TL34HD
CSA0003	8717825941730	3.7V	1000mAh	SLB-1137C	Samsung	i7
CSA0006	8717825941624	3.7V	700mAh	SLB-0937	Samsung	i8, L730, L830, NV33, NV4, CL5, PL10
CSA0007	8717825943161	3.7V	760mAh	SLB-07A	Samsung	PL150, ST100, ST45, ST50, ST500, ST550, ST600, TL100, TL210, TL220, TL225, TL90
CSA0008	8718226221353	7.4V	1240mAh	BP-1310	Samsung	NX, NX10, NX100, NX11, NX20, NX5
CSA0009	8718226222336	3.7V	850mAh	BP-85A	Samsung	SH100, PL210, WB210
CSA0010	8718226222343	3.7V	760mAh	SLB-07	Samsung	PL150, ST45, ST50, ST500, ST550, ST600, TL100, TL210, TL220, TL225, TL90
CSA0011	8718226220967	3.7V	740mAh	EA-BP70A	Samsung	DV150F, ES65, ES67, ES70, ES73, ES75, ES80, ES90, AQ100, MV800, PL100, PL120, PL170, PL20, PL200, PL80, PL90, SL50, SL600, SL605, SL630, ST100, ST30, ST60, ST65, ST6500, ST66, ST70, ST72, ST700, ST76, ST77, ST80, ST88, ST90, ST93, ST95, ST150F, TL105, TL110, TL205, WB30F, WP10

CSA0012	8718226229908	3.7V	880mAh	BP-88B	Samsung	MV900, MV900F
CSA0019	8717825942102	7.4V	1900mAh	SBL-1974	Samsung	PRO 815, Pro 815SE
CSA0020	8718226229380	7.4V	1030mAh	BP-1030	Samsung	NX1000, NX200, NX2000, NX210, NX300, NX1100
CSA0021	8718503023229	3.8V	4600mAh	B735EE	Samsung	NX GN100, NX GN120, EK-GN100, EK-GN120
CSA0022	8718503025674	7.6V	1410mAh	BP-1410	Samsung	NX30, WB2200F
CSA0023	8718503025728	3.8V	2300mAh	B740AU B740AE	Samsung	NX mini, NX3000, S4 Zoom
CSA0024	8718503025735	3.7V	1950mAh	BP2000 EB-F1A2KBU	Samsung	Galaxy Camera 2, GC200, EK-GC200
CSA0025	8718503026534	7.2V	2000mAh	ED-BP1900	Samsung	NX1
CSO0002	8717825941365	7.2V	1220mAh	NP-FA70	Sony	DCR-DVD7, DCR-DVD7E, DCR-HC90, DCR-HC90E, DCR-HC90ES, DCR-PC1000, DCR-PC1000B, DCR-PC1000E, DCR-PC1000S, DCR-PC53, DCR-PC55/B, DCR-PC55/R, DCR-PC55/S, DCR-PC55/W
CSO0003	8717825941389	3.7V	550mAh	NP-FE1	Sony	Cyber-Shot DSC-T7
CSO0008	8717825941518	3.6V	650mAh	NP-FT1	Sony	Cyber-shot DSC-L1, Cyber-shot DSC-L1/B, Cyber-shot DSC-L1/L, Cyber-shot DSC-L1/LJ, Cyber-shot DSC-L1/R, Cyber-shot DSC-L1/S, Cyber-shot DSC-L1/W, Cyber-shot DSC-M1, Cyber-shot DSC-M2, Cyber-shot DSC-T1, Cyber-shot DSC-T10, Cyber-shot DSC-T10/B, Cyber-shot DSC-T10/P, Cyber-shot DSC-T10/W, Cyber-shot DSC-T11, Cyber-shot DSC-T3, Cyber-shot DSC-T3/B, Cyber-shot DSC-T33, Cyber-shot DSC-T3S, Cyber-shot DSC-T5, Cyber-shot DSC-T5/B, Cyber-shot DSC-T5/N, Cyber-shot DSC-T5/R, Cyber-shot DSC-T9
CSO0009	8717825941372	3.6V	750mAh	NP-FC10 NP-FC11	Sony	Cyber-shot DSC-F77, Cyber-shot DSC-F77A, Cyber-shot DSC-FX77, Cyber-shot DSC-P10, Cyber-shot DSC-P10L, Cyber-shot DSC-P10S, Cyber-shot DSC-P12, Cyber-shot DSC-P2, Cyber-shot DSC-P3, Cyber-shot DSC-P5, Cyber-shot DSC-P7, Cyber-shot DSC-P8, Cyber-shot DSC-P8L, Cyber-shot DSC-P8R, Cyber-shot DSC-P8S, Cyber-shot DSC-P9, Cyber-shot DSC-V1
CSO0011	8717825941419	7.2V	1400mAh	FM50 NP-FM51 NP-QM50 NP-QM51	Sony	Cyber-shot DSC-F707, Cyber-shot DSC-F717, Cyber-shot DSC-F828, Cyber-shot DSC-R1, Cyber-shot DSC-S30, Cyber-shot DSC-S50, Cyber-shot DSC-S70, Cyber-shot DSC-S75, Cyber-shot DSC-S85, MVC-CD200, MVC-CD250, MVC-CD300, MVC-CD350, MVC-CD400, MVC-CD500, CCD-TR108, CCD-TR208, CCD-TR408, CCD-TR748, CCD-TR748E, CCD-TRV106K, CCD-TRV107, CCD-TRV108, CCD-TRV108E, CCD-TRV116, CCD-TRV118, CCD-TRV126, CCD-TRV128, CCD-TRV138, CCD-TRV140, CCD-TRV18, CCD-TRV19, CCD-TRV20, CCD-TRV208, CCD-TRV208E, CCD-TRV218, CCD-TRV218E, CCD-TRV228, CCD-TRV228E, CCD-TRV238, CCD-TRV238E, CCD-TRV240, CCD-TRV245, CCD-TRV25, CCD-TRV27, CCD-TRV308, CCD-TRV318, CCD-TRV328, CCD-TRV338, CCD-TRV340, CCD-TRV345, CCD-TRV408, CCD-TRV408E, CCD-TRV418, CCD-TRV418E, CCD-TRV425, CCD-TRV428, CCD-TRV428E, CCD-TRV438E, CCD-TRV50, CCD-TRV608, CCD-TRV730, CCD-TRV740, CCD-TRV840, CCD-TRV950, CCD-TRV96K, DCR-DVD100, DCR-DVD100E, DCR-DVD101, DCR-DVD101E, DCR-DVD200, DCR-DVD200E, DCR-DVD201, DCR-DVD201E, DCR-DVD300, DCR-DVD301, DCR-DVD91, DCR-DVD91E, DCR-HC1, DCR-HC1 PRO, DCR-HC14, DCR-HC14E, DCR-HC15, DCR-HC15E, DCR-HC88, DCR-PC100, DCR-PC101, DCR-PC101E, DCR-PC101K, DCR-PC103, DCR-PC103E, DCR-PC104, DCR-PC104E, DCR-PC105, DCR-PC105E, DCR-PC105K, DCR-PC110, DCR-PC110E, DCR-PC115, DCR-PC115E, DCR-PC120, DCR-PC120BT, DCR-PC120E, DCR-PC300K, DCR-PC330, DCR-PC330E, DCR-PC6, DCR-PC6E, DCR-PC8, DCR-PC8E, DCR-PC9, DCR-PC9E, DCR-TR238, DCR-TRV10, DCR-TRV108, DCR-TRV10E, DCR-TRV11, DCR-TRV116, DCR-TRV116E, DCR-TRV118E, DCR-TRV11E, DCR-TRV12, DCR-TRV12E, DCR-TRV14, DCR-TRV140, DCR-TRV140E, DCR-TRV140U, DCR-TRV145, DCR-TRV145E, DCR-TRV14E, DCR-TRV15, DCR-TRV150, DCR-TRV15E, DCR-TRV16, DCR-TRV16E, DCR-TRV17, DCR-TRV17E, DCR-TRV17K, DCR-TRV18, DCR-TRV18E, DCR-TRV18K, DCR-TRV19, DCR-TRV19E, DCR-TRV20, DCR-TRV208, DCR-TRV20E, DCR-TRV215, DCR-TRV218, DCR-TRV22, DCR-TRV228, DCR-TRV22E, DCR-TRV22K, DCR-TRV230, DCR-TRV230E, DCR-TRV235, DCR-TRV235E, DCR-TRV238, DCR-TRV238E, DCR-TRV239, DCR-TRV239E, DCR-TRV24, DCR-TRV240, DCR-TRV240E, DCR-TRV240K, DCR-TRV245, DCR-TRV245E, DCR-TRV24E, DCR-TRV25, DCR-TRV250, DCR-TRV250E, DCR-TRV255, DCR-TRV255E, DCR-TRV25E, DCR-TRV260, DCR-TRV265, DCR-TRV265E, DCR-TRV27, DCR-TRV270, DCR-TRV270E, DCR-TRV27E, DCR-TRV280, DCR-TRV285, DCR-TRV285E, DCR-TRV30, DCR-TRV300K, DCR-TRV30E, DCR-TRV325, DCR-TRV33, DCR-TRV330, DCR-TRV330E, DCR-TRV33E, DCR-TRV33K, DCR-TRV340, DCR-TRV340E, DCR-TRV345, DCR-TRV345E, DCR-TRV350, DCR-TRV351, DCR-TRV355, DCR-TRV355E, DCR-TRV360, DCR-TRV361, DCR-TRV38, DCR-TRV39, DCR-TRV40, DCR-TRV408, DCR-TRV40E, DCR-TRV418, DCR-TRV428, DCR-TRV430, DCR-TRV430E, DCR-TRV438, DCR-TRV460, DCR-TRV460E, DCR-TRV480, DCR-TRV480E, DCR-TRV50, DCR-TRV50E, DCR-TRV530, DCR-TRV530E, DCR-TRV6, DCR-TRV60, DCR-TRV60E, DCR-TRV6E, DCR-TRV70, DCR-TRV70K, DCR-TRV725, DCR-TRV730, DCR-TRV730E, DCR-TRV738, DCR-TRV738E, DCR-TRV740, DCR-TRV740E, DCR-TRV748, DCR-TRV75, DCR-TRV75E, DCR-TRV8, DCR-TRV80, DCR-TRV80E, DCR-TRV828, DCR-TRV828E, DCR-TRV830, DCR-TRV830E, DCR-TRV840, DCR-TRV8K, DCR-TRV940, DCR-TRV940E, DCR-TRV950, DCR-TRV950E, DCR-TV480, DSR-PDX10, GV-D1000, GV-D1000(Video Walkman), HDR-HC1, HDR-HC1E, HDR-SR1, HDR-SR1e, HDR-UX1, HDR-UX1e, HVR-A1U PRO, HVR-AV1, HVL-IRM(Infrared Light), HVL-ML20M (Underwater Video Light)

CSO0012	8717825941334	3.6V	1200mAh	NP-FR1	Sony	Cyber-shot DSC-F88, Cyber-shot DSC-FR3, Cyber-shot DSC-G1, Cyber-shot DSC-P100, Cyber-shot DSC-P100/L, Cyber-shot DSC-P100/LJ, Cyber-shot DSC-P100/R, Cyber-shot DSC-P100/S, Cyber-shot DSC-P100PP, Cyber-shot DSC-P120, Cyber-shot DSC-P150, Cyber-shot DSC-P150/B, Cyber-shot DSC-P150/L, Cyber-shot DSC-P150/S, Cyber-shot DSC-P200, Cyber-shot DSC-P200/B, Cyber-shot DSC-P200/R, Cyber-shot DSC-P200/S, Cyber-shot DSC-T30, Cyber-shot DSC-T30/B, Cyber-shot DSC-T30S, Cyber-shot DSC-T50, Cyber-shot DSC-T50/B, Cyber-shot DSC-T50/R, Cyber-shot DSC-V3
CSO0013	8717825941402	7.2V	1400mAh	NP-FF70	Sony	DCR-HC1000, DCR-HC1000E, DCR-HC1000JE, DCR-IP1, DCR-IP1E, DCR-IP1K, DCR-IP200K, DCR-IP210, DCR-IP210E, DCR-IP220, DCR-IP220E, DCR-IP220K, DCR-IP45, DCR-IP45E, DCR-IP5, DCR-IP55, DCR-IP55E, DCR-IP5E, DCR-IP7, DCR-IP7BT, DCR-IP7E, DCR-IPC10, DCR-PC106, DCR-PC106E, DCR-PC107, DCR-PC107E, DCR-PC108, DCR-PC108E, DCR-PC109, DCR-PC109E, DCR-PC350, DCR-PC350E
CSO0016	8717825946629	7.2V	2350mAh	NP-F330 NP-F550	Sony	CCD-RV100, CCD-RV200, CCD-SC5, CCD-SC5/E, CCD-SC55, CCD-SC55E, CCD-SC6, CCD-SC65, CCD-SC7, CCD-SC7/E, CCD-SC8/E, CCD-SC9, CCD-TR1, CCD-TR11, CCD-TR1100, CCD-TR1100E, CCD-TR12, CCD-TR18, CCD-TR18E, CCD-TR1E, CCD-TR2, CCD-TR200, CCD-TR205, CCD-TR215, CCD-TR2200, CCD-TR2200E, CCD-TR2300, CCD-TR2300E, CCD-TR280PK, CCD-TR290PK, CCD-TR3, CCD-TR300, CCD-TR3000, CCD-TR3000E, CCD-TR3100, CCD-TR3100E, CCD-TR311E, CCD-TR315, CCD-TR315E, CCD-TR317, CCD-TR3200, CCD-TR3200E, CCD-TR3300, CCD-TR3300E, CCD-TR411, CCD-TR411E, CCD-TR412E, CCD-TR413, CCD-TR414, CCD-TR415E, CCD-TR416, CCD-TR417, CCD-TR417E, CCD-TR425, CCD-TR425E, CCD-TR427, CCD-TR427E, CCD-TR500, CCD-TR511, CCD-TR511E, CCD-TR512E, CCD-TR515, CCD-TR515E, CCD-TR516, CCD-TR516E, CCD-TR517, CCD-TR555, CCD-TR57, CCD-TR610, CCD-TR617, CCD-TR617E, CCD-TR618, CCD-TR618E, CCD-TR640, CCD-TR640E, CCD-TR67, CCD-TR7000, CCD-TR710, CCD-TR713, CCD-TR713E, CCD-TR716, CCD-TR717, CCD-TR717E, CCD-TR718, CCD-TR718E, CCD-TR728, CCD-TR728E, CCD-TR730E, CCD-TR76, CCD-TR760E, CCD-TR810E, CCD-TR818, CCD-TR820, CCD-TR825, CCD-TR840, CCD-TR840E, CCD-TR845, CCD-TR845E, CCD-TR87, CCD-TR910, CCD-TR913, CCD-TR913E, CCD-TR917, CCD-TR918, CCD-TR918E, CCD-TR930, CCD-TR940, CCD-TR950, CCD-TR950E, CCD-TR97, CCD-TRT97, CCD-TRV101, CCD-TRV120, CCD-TRV120E, CCD-TRV130, CCD-TRV15, CCD-TRV16E, CCD-TRV201, CCD-TRV215, CCD-TRV25, CCD-TRV26E, CCD-TRV27E, CCD-TRV28, CCD-TRV3, CCD-TRV3000, CCD-TRV310, CCD-TRV315, CCD-TRV318, CCD-TRV32, CCD-TRV330, CCD-TRV35, CCD-TRV36, CCD-TRV36E, CCD-TRV37, CCD-TRV37E, CCD-TRV4, CCD-TRV41, CCD-TRV416, CCD-TRV427, CCD-TRV43, CCD-TRV45K, CCD-TRV46, CCD-TRV46E, CCD-TRV47, CCD-TRV47E, CCD-TRV48, CCD-TRV48E, CCD-TRV49, CCD-TRV51, CCD-TRV517, CCD-TRV54E, CCD-TRV56E, CCD-TRV57, CCD-TRV58, CCD-TRV59, CCD-TRV59E, CCD-TRV615, CCD-TRV62, CCD-TRV620, CCD-TRV63, CCD-TRV64, CCD-TRV65, CCD-TRV66, CCD-TRV66E, CCD-TRV66K, CCD-TRV67, CCD-TRV67E, CCD-TRV68, CCD-TRV69, CCD-TRV71, CCD-TRV715, CCD-TRV716, CCD-TRV717, CCD-TRV72, CCD-TRV720, CCD-TRV728, CCD-TRV75, CCD-TRV77, CCD-TRV78, CCD-TRV78E, CCD-TRV80PK, CCD-TRV81, CCD-TRV815, CCD-TRV82, CCD-TRV85, CCD-TRV85K, CCD-TRV86PK, CCD-TRV87, CCD-TRV87E, CCD-TRV88, CCD-TRV9, CCD-TRV90, CCD-TRV900, CCD-TRV91, CCD-TRV92, CCD-TRV93, CCD-TRV930, CCD-TRV94, CCD-TRV94E, CCD-TRV95, CCD-TRV95E, CCD-TRV95K, CCD-TRV98, CCD-TRV98E, CCD-TRV99, CVX-V18NS(Nightshot Camers), CVX-V18NSP(Nightshot Camers), DCR-PC115, DCR-PD150, DCR-PD170, DCR-SC100, DCR-TR7 Series, DCR-TR7000, DCR-TR7000E, DCR-TR700D, DCR-TR7100, DCR-TR7100E, DCR-TR8000, DCR-TR8000E, DCR-TR8100, DCR-TR8100E, DCR-TRU47E, DCR-TRV103, DCR-TRV110, DCR-TRV110E, DCR-TRV110K, DCR-TRV120, DCR-TRV120E, DCR-TRV125, DCR-TRV125E, DCR-TRV130, DCR-TRV130E, DCR-TRV203, DCR-TRV210, DCR-TRV210E, DCR-TRV220K, DCR-TRV310, DCR-TRV310E, DCR-TRV310K, DCR-TRV315, DCR-TRV320, DCR-TRV320E, DCR-TRV410, DCR-TRV420, DCR-TRV420E, DCR-TRV49E, DCR-TRV5, DCR-TRV510, DCR-TRV520, DCR-TRV520E, DCR-TRV525, DCR-TRV58E, DCR-TRV620, DCR-TRV620E, DCR-TRV620K, DCR-TRV7, DCR-TRV720, DCR-TRV720E, DCR-TRV735K, DCR-TRV820, DCR-TRV820E, DCR-TRV820K, DCR-TRV890, DCR-TRV9, DCR-TRV900, DCR-TRV900E, DCR-TRV935K, DCR-TV900, DCR-TV900E, DCR-TVX1000, DCR-TVX2000, DCR-TVX700, DCR-TVX9000, DCR-VX1000, DCR-VX2000, DCR-VX2000E, DCR-VX2001, DCR-VX2100, DCR-VX2100E, DCR-VX700, DCR-VX9 Series, DCR-VX9000, DSR-200, DSR-DU1(Video Disk Unit), DSR-PD100, DSR-PD100A, DSR-PD100AP, DSR-PD150, DSR-PD170, DSR-PD190P, DSR-V10(Video Walkman), DSR-V10P(Video Walkman), GV-A100(Video Walkman), GV-A500, GV-A500E, GV-A700(Video Walkman), GV-D200, GV-D200(Video Walkman), GV-D300, GV-D300, GV-D300(Video Walkman), GV-D800(Video Walkman), GV-D900, GV-D900(Video Walkman), HDR-AX2000E, HDR-FX1, HDR-FX7, HDR-FX7E, HDR-Z1E, HVR-M10 PRO, HVR-M10C(videocassette recorder), HVR-M10E(videocassette recorder), HVR-M10N(videocassette recorder), HVR-M10P(videocassette recorder), HVR-M10U(videocassette recorder), HVR-V1J, HVR-V1U, HVR-Z1, HVR-Z1C, HVR-Z1E, HVR-Z1J, HVR-Z1N, HVR-Z1P, HVR-Z1U, MVC-FDR1(Digital Mavica), MVC-FDR1E(Digital Mavica), MVC-FDR3(Digital Mavica), MVC-FDR3E(Digital Mavica), HVL-ML20 (Marine Light), CRX10U(CD-RW), DCM-M1, D-V500(DVD Player), EVO-250 (Video Recorder), MPK-DVF4, PBD-D50(DVD Player), PBD-V30(DVD Player), PLM-100(Glasstron), PLM-50(Glasstron), PLM-A35(Glasstron), PLM-A55(Glasstron), Q002-HDR1, UPX-2000(Printer), HVL-20DW (Video Light), HVL-20DW2(Video Light), Cyber-shot DSC-CD250, Cyber-shot DSC-CD400, Cyber-shot DSC-D700, Cyber-shot DSC-D770, GV-D200 WALKMAN, GVH-D700 WALKMAN, MVC-CD1000, MVC-CD200, MVC-CD200, MVC-FD100, MVC-FD51, MVC-FD51, MVC-FD7, MVC-FD71, MVC-FD73, MVC-FD73K, MVC-FD75, MVC-FD81, MVC-FD83, MVC-FD83K, MVC-FD85, MVC-FD87, MVC-FD88, MVC-FD88K, MVC-FD90, MVC-FD91, MVC-FD92, MVC-FD95, MVC-FD97, MVC-FDR1, MVC-FDR3
CSO0017	8717825946681	7.2V	1500mAh	NP-FM55H	Sony	DSLR A-100, DSLR A-100H, DSLR A-100K, DSLR A-100W

CSO0021	8717825942171	3.6V	960mAh	NP-FG1 NP-BG1 (met infochip)	Sony	Cyber-shot DSC-G1, Cyber-shot DSC-H10, Cyber-shot DSC-H10/B, Cyber-shot DSC-H20, Cyber-shot DSC-H3, Cyber-shot DSC-H3/B, Cyber-shot DSC-H50, Cyber-shot DSC-H50/B, Cyber-shot DSC-H55, Cyber-shot DSC-H7, Cyber-shot DSC-H7/B, Cyber-shot DSC-H70, Cyber-shot DSC-H70B, Cyber-shot DSC-H70L, Cyber-shot DSC-H70R, Cyber-shot DSC-H70S, Cyber-shot DSC-H9, Cyber-shot DSC-H9/B, Cyber-shot DSC-H90, Cyber-shot DSC-HX10V, Cyber-shot DSC-HX20V, Cyber-shot DSC-HX5B, Cyber-shot DSC-HX5V, Cyber-shot DSC-HX5V/B, Cyber-shot DSC-HX7V, Cyber-shot DSC-HX7V/B, Cyber-shot DSC-HX7V/L, Cyber-shot DSC-HX7V/R, Cyber-shot DSC-HX9V, Cyber-shot DSC-N1, Cyber-shot DSC-N2, Cyber-shot DSC-T100, Cyber-shot DSC-T100/B, Cyber-shot DSC-T100/R, Cyber-shot DSC-T100S, Cyber-shot DSC-T20, Cyber-shot DSC-T25, Cyber-shot DSC-T20/P, Cyber-shot DSC-T20/W, Cyber-shot DSC-W100, Cyber-shot DSC-W100B, Cyber-shot DSC-W100S, Cyber-shot DSC-W110, Cyber-shot DSC-W115, Cyber-shot DSC-W120, Cyber-shot DSC-W120/B, Cyber-shot DSC-W120/L, Cyber-shot DSC-W120/P, Cyber-shot DSC-W125, Cyber-shot DSC-W130, Cyber-shot DSC-W130/B, Cyber-shot DSC-W130/P, Cyber-shot DSC-W150, Cyber-shot DSC-W150/B, Cyber-shot DSC-W150/N, Cyber-shot DSC-W150/R, Cyber-shot DSC-W170, Cyber-shot DSC-W170/B, Cyber-shot DSC-W170/N, Cyber-shot DSC-W170/R, Cyber-shot DSC-W200, Cyber-shot DSC-W210, Cyber-shot DSC-W215, Cyber-shot DSC-W220, Cyber-shot DSC-W230, Cyber-shot DSC-W270, Cyber-shot DSC-W275, Cyber-shot DSC-W290, Cyber-shot DSC-W30, Cyber-shot DSC-W300, Cyber-shot DSC-W30L, Cyber-shot DSC-W30S, Cyber-shot DSC-W30S, Cyber-shot DSC-W30W, Cyber-shot DSC-W35, Cyber-shot DSC-W40, Cyber-shot DSC-W50, Cyber-shot DSC-W50B, Cyber-shot DSC-W50S, Cyber-shot DSC-W55, Cyber-shot DSC-W55/B, Cyber-shot DSC-W55/L, Cyber-shot DSC-W55/P, Cyber-shot DSC-W70, Cyber-shot DSC-W70B, Cyber-shot DSC-W70S, Cyber-shot DSC-W80, Cyber-shot DSC-W80/B, Cyber-shot DSC-W80/P, Cyber-shot DSC-W80/W, Cyber-shot DSC-W80S, Cyber-shot DSC-W85, Cyber-shot DSC-W90, Cyber-shot DSC-W90/B, Cyber-shot DSC-W90S, Cyber-shot DSC-WX1, Cyber-shot DSC-WX10, Cyber-shot DSC-WX10B, Cyber-shot DSC-WX10N, Cyber-shot DSC-WX10V, Cyber-shot DSC-WX1B, Cyber-shot DSC-WX1N, Cyber-shot DSC-WX1S
CSO0022	8717825941952	3.6V	700mAh	NP-FD1 NP-BD1(met infochip)	Sony	Cyber-shot DSC-G3, Cyber-shot DSC-T2, Cyber-shot DSC-T2/B, Cyber-shot DSC-T2/G, Cyber-shot DSC-T2/L, Cyber-shot DSC-T2/P, Cyber-shot DSC-T2/W, Cyber-shot DSC-T200, Cyber-shot DSC-T200/B, Cyber-shot DSC-T200/R, Cyber-shot DSC-T200/S, Cyber-shot DSC-T300, Cyber-shot DSC-T500, Cyber-shot DSC-T70, Cyber-shot DSC-T70/B, Cyber-shot DSC-T70/P, Cyber-shot DSC-T70/S, Cyber-shot DSC-T70/W, Cyber-shot DSC-T700, Cyber-shot DSC-T75, Cyber-shot DSC-T77, Cyber-shot DSC-T90, Cyber-shot DSC-T900, Cyber-shot DSC-TX1, Cyber-shot DSC-TX1H, Cyber-shot DSC-TX1L, Cyber-shot DSC-TX1N, Cyber-shot DSC-TX1P, Cyber-shot DSC-TX1S
CSO0023	8717825942676	3.6V	750mAh	NP-BK1 (met infochip)	Sony	Cyber-shot DSC-S750, Cyber-shot DSC-S780, Cyber-shot DSC-S950, Cyber-shot DSC-S980, Cyber-shot DSC-W180, Cyber-shot DSC-W180/S, Cyber-shot DSC-W190, Cyber-shot DSC-W190/R, Cyber-shot DSC-W370, Bloggie MHS-PM5 Series, Webbie HD, Webbie MHS-PM1
CSO0024V2	8718226221841	7.2V	1080mAh	NP-FW50 (met infochip)	Sony	Alpha DSLR-A7, Alpha DSLR-A7R, Alpha DSLR-A33, Alpha DSLR-A35, Alpha DSLR-A37, Alpha DSLR-A55, Alpha DSLR-A3000, Alpha DSLR-A5000, Alpha DSLR-A5100, Alpha DSLR-A6000, Cyber-shot DSC-RX10, Cyber-shot DSC-RX10 II, NEX-3, NEX-3N, NEX-5, NEX-5N, NEX-5R, NEX-5T, NEX-6, NEX-7, NEX-C3, NEX-F3
CSO0025	8718226221889	3.6V	630mAh	NP-BN1 (met infochip)	Sony	Cyber-shot DSC-T110, Cyber-shot DSC-T110B, Cyber-shot DSC-T110P, Cyber-shot DSC-T110R, Cyber-shot DSC-T110S, Cyber-shot DSC-T110V, Cyber-shot DSC-T99, Cyber-shot DSC-T99C, Cyber-shot DSC-T99D, Cyber-shot DSC-T99DC, Cyber-shot DSC-TF1, Cyber-shot DSC-TX10, Cyber-shot DSC-TX100V, Cyber-shot DSC-TX100VB, Cyber-shot DSC-TX100VR, Cyber-shot DSC-TX10B, Cyber-shot DSC-TX10G, Cyber-shot DSC-TX10P, Cyber-shot DSC-TX20, Cyber-shot DSC-TX30, Cyber-shot DSC-TX5, Cyber-shot DSC-TX7, Cyber-shot DSC-TX7/L, Cyber-shot DSC-TX7/R, Cyber-shot DSC-TX7/S, Cyber-shot DSC-TX7C, Cyber-shot DSC-TX9, Cyber-shot DSC-TX9C, Cyber-shot DSC-W310, Cyber-shot DSC-W320, Cyber-shot DSC-W330, Cyber-shot DSC-W330/S, Cyber-shot DSC-W350, Cyber-shot DSC-W350D, Cyber-shot DSC-W360, Cyber-shot DSC-W360, Cyber-shot DSC-W380, Cyber-shot DSC-W390, Cyber-shot DSC-W510, Cyber-shot DSC-W510B, Cyber-shot DSC-W510P, Cyber-shot DSC-W510R, Cyber-shot DSC-W530, Cyber-shot DSC-W530B, Cyber-shot DSC-W530G, Cyber-shot DSC-W530L, Cyber-shot DSC-W530P, Cyber-shot DSC-W550, Cyber-shot DSC-W560, Cyber-shot DSC-W560B, Cyber-shot DSC-W560L, Cyber-shot DSC-W560R, Cyber-shot DSC-W570, Cyber-shot DSC-W570B, Cyber-shot DSC-W570D, Cyber-shot DSC-W570P, Cyber-shot DSC-W570R, Cyber-shot DSC-W570S, Cyber-shot DSC-W570V, Cyber-shot DSC-W580, Cyber-shot DSC-W610, Cyber-shot DSC-W620, Cyber-shot DSC-W630, Cyber-shot DSC-W650, Cyber-shot DSC-W670, Cyber-shot DSC-W690, Cyber-shot DSC-W710, Cyber-shot DSC-W730, Cyber-shot DSC-W810, Cyber-shot DSC-W830, Cyber-shot DSC-WX10, Cyber-shot DSC-WX100, Cyber-shot DSC-WX150, Cyber-shot DSC-WX200, Cyber-shot DSC-WX220, Cyber-shot DSC-WX30, Cyber-shot DSC-WX5, Cyber-shot DSC-WX50, Cyber-shot DSC-WX5C, Cyber-shot DSC-WX60, Cyber-shot DSC-WX7, Cyber-shot DSC-WX70, Cyber-shot DSC-WX7B, Cyber-shot DSC-WX80, Cyber-shot DSC-WX9, Cyber-shot DSC-WX9B
CSO0026	8718503021010	3.6V	1250mAh	NP-BX1	Sony	Cyber-shot DSC-HX50, Cyber-shot DSC-HX50V, Cyber-shot DSC-HX60, Cyber-shot DSC-HX60V, Cyber-shot DSC-HX90, Cyber-shot DSC-HX90V, Cyber-shot DSC-HX300, Cyber-shot DSC-HX350, Cyber-shot DSC-HX400V, Cyber-shot DSC-RX1R, Cyber-shot DSC-RX100, Cyber-shot DSC-RX100 II NFC, Cyber-shot DSC-RX100 III Wifi, Cyber-shot DSC-WX200, Cyber-shot DSC-WX300, Cyber-shot DSC-WX350, Cyber-shot DSC-WX500, HDR-AS15 Action Cam, HDR-AS20 Action Cam Wifi, HDR-AS30 Action Cam Wifi, HDR-AS100V, HDR-CX240E
CSO0027	8718503025858	3.6V	640mAh	NP-BY1	Sony	HDR-AZ1 , HDR-AZ1VR

CSO0028	8718503030706	3.6V	1250mAh	NP-BX2	Sony	Cyber-shot DSC-HX50, Cyber-shot DSC-HX50V, Cyber-shot DSC-HX60, Cyber-shot DSC-HX60V, Cyber-shot DSC-HX90, Cyber-shot DSC-HX90V, Cyber-shot DSC-HX300, Cyber-shot DSC-HX350, Cyber-shot DSC-HX400V, Cyber-shot DSC-RX1R, Cyber-shot DSC-RX100, Cyber-shot DSC-RX100 II NFC, Cyber-shot DSC-RX100 III Wifi, Cyber-shot DSC-WX200, Cyber-shot DSC-WX300, Cyber-shot DSC-WX350, Cyber-shot DSC-WX500, HDR-AS15 Action Cam, HDR-AS20 Action Cam Wifi, HDR-AS30 Action Cam Wifi, HDR-AS100V, HDR-CX240E
CXI0001	8718503027593	3.8V	1300mAh	AZ16	Xiaomi	Mi Pro, Yi Action Camera, Yi Sport Camera, Yi 4K