



Prod.nr.	EAN	Voltage	Capacity	Type	Brand	Compatible Camera's
VCA0002	8717825940023	7.4V	800mAh	BP-308	Canon	IXY DVM5, HV10, DC50, DC51, DV-M5, MVX4i, Optura 600, VIXIA HR10
VCA0003	8717825940009	7.4V	800mAh	BP-208	Canon	ELURA 100, Elura100, iVIS DC200, iVIS DC22, iVIS DC50, IXY DV S1, IXY DV51, HR10, DC10, DC100, DC19, DC20, DC201, DC21, DC210, DC211, DC22, DC220, DC230, DC40, DC50, DC51, DC95, MVX15i, MVX400, MVX430, MVX450, MVX460, FVM300, Optura S1, VIXIA HR10
VCA0004	8717825940047	7.4V	750mAh	BP-406	Canon	ELURA 10, ELURA 10MC, ELURA 2, ELURA 20, ELURA 20MC, ELURA 2MC, IXY DV, IXY DV2, IXY DVM2, IXY DVM2-V, IXY DVM3, DM-MV3, DM-MV3i, DM-MV3iMC, DM-MV3MC, DM-MV4, DM-MV4i, DM-MV4iMC, MV3, MV-3, MV3i, MV-3i, MV-3iMC, MV-3MC, MV4, MV4i, MV4i, MV4i MC, MV4iMC, MVX10, MVX10i, Optura 300
VCA0005	8717825940146	6V	1900mAh	BP-711 BP-714 BP-726 NP-729	Canon	E06, E07, E08, E09, E20, E210, E230, E250, E350, E40, E440, E460, E50, E51, E520, E53, E57, E60, E61, E620, E63, E640, E65, E65A, E66, E660, E67, E680, E70, E700, E77, E80, E800, E800Hi, E808, E850, E850Hi, E90, ES100, ES1000, ES10V, ES170, ES18, ES180, ES190, ES200, ES2000, ES20V, ES2500, ES270, ES280, ES290, ES290A, ES300, ES3000, ES40, ES400V, ES500, ES520, ES550, ES600, ES70, ES7000, ES750, ES80, ES800, ES870, ES90, ES900, ES970, EX1, EX2Hi, H440, H460, H480, H520, H640, H660, H680, H800, H850, H-850UC-1, UC1, UC10, UC15, UC15C, UC16, UC1Hi, UC1MarkII, UC2, UC20, UC25Hi, UC2Hi, UC30, UC30Hi, UC3Hi, UC40Hi, UC55, UC5Hi, UC6000, UC7000, UC7500, UC8000, UC8500, UC9500, UC-L100W, UCS1, UCS2, UCS20, UCS3, UCS5, UC-V1Hi, UCX65Hi, EQ305, J10, J100, J20, L1, L10, L2, LX1, LX100, LX-1T, VME70, VME70A, VME77, VME800H, VTLC50
VCA0006	8717825940122	7.2V	1100mAh	BP-608	Canon	ELURA, DM-CV11, DM-MV100, DM-MV20i, DM-PV1, DVMV100, DV-MV100, DVMV20, DV-MV20, MV100, MV20, MV20i, ZRCV11
VCA0008	8717825940054	7.4V	1400mAh	BP-412	Canon	ELURA 10, ELURA 10MC, ELURA 2, ELURA 20, ELURA 20MC, ELURA 2MC, IXY DV, IXY DV2, IXY DVM2, IXY DVM2-V, IXY DVM3, DM-MV3, DM-MV3i, DM-MV3iMC, DM-MV3MC, DM-MV4, DM-MV4i, DM-MV4iMC, MV3, MV-3, MV3i, MV-3i, MV-3iMC, MV-3MC, MV4, MV4i, MV4i, MV4i MC, MV4iMC, MVX10, MVX10i, Optura 300
VCA0009	8717825940016	7.4V	1450mAh	BP-2L12 BP-2L14	Canon	ELURA 40MC, ELURA 50, ELURA 60, ELURA 65, ELURA 70, ELURA 80, ELURA 85, ELURA 90, iVIS DC300, iVIS HF R10, iVIS HG10, iVIS HV30, IXY DV3, IXY DV5, IXY DVM3, HF R106, HF R16, HF R17, HF R18, HG10, HV20, HV30, HV30 HDV, HV40, Legria HV40, DC301, DC310, DC320, DC330, DC410, DC411, DC420, MD100, MD101, MD110, MD111, MD120, MD130, MD140, MD150, MD160, MD205, MD215, MD216, MD225, MD235, MD245, MD255, MD265, MV5, MV5i, MV5iMC, MV6, MV6i, MV6iMC, MV790, MV800, MV800i, MV830, MV830i, MV850, MV850i, MV880X, MV880Xi, MV890, MV900, MV901, MV920, MV930, MV940, MV950, MV960, MVX20, MVX200, MVX200i, MVX20i, MVX250, MVX250i, MVX25i, MVX30, MVX300, MVX30i, MVX330, MVX330i, MVX35, MVX350, MVX350i, MVX35i, MVX40, MVX40i, MVX45, MVX45i, FV500, FVM100, FVM20, FVM200, FVM30, FVM500, ZR100, ZR200, ZR300, ZR400, ZR500, ZR600, ZR700, ZR800, ZR830, ZR850, ZR900, ZR930, ZR950, ZR960, Optura 30, Optura 300, Optura 40, Optura 400, Optura 50, Optura 500, Optura 60, VIXIA HG10, VIXIA HV20, VIXIA HV30, VIXIA HV40
VCA0010	8717825940153	7.2V	1900mAh	BP-911 BP-914 NP-915	Canon	E1, E2, E30, ES300V, ES4000, ES410V, ES420, ES420V, ES50, ES5000, ES520A, ES55, ES60, ES6000, ES65, ES6500V, ES7000ES, ES7000V, ES700ES, ES75, ES8000V, ES8100Hi8, ES8100V, ES8200, ES8200V, ES8400, ES8400V, ES8600, G10, G1000, G10Hi, G1500, G15Hi, G20, G2000, G20Hi, G30, G30Hi, G35, G35Hi, G45, G45Hi, UCV10, UCV100, UCV10Hi, UCV20, UCV200, UCV20Hi, UCV30, UC-V30, UCV300, UCV30Hi, UCX1Hi, UCX2, UCX2Hi, UCX30Hi, UCX3Hi, UCX40Hi, UCX45Hi, UCX50, UCX50Hi, UC-X55, UCX55Hi, V20, V200, V30, V300, V40, V400, V40Hi, V420, V50, V500, V50Hi, V520, V60, V60Hi, V65, V65Hi, V72, V75Hi, X1 Hi, X2 Hi, X30 Hi, X40 Hi, X45 Hi, X50 Hi, X55 Hi, DM-MV1, DM-MV10, MV1, MV10, MV10i, MV20, MV200, MV200i, MV20i, FV1, GL1, GL2, Optura, Optura Pi, ICX1Hi, ULTURA, UV-X20, VISTURA, XH-A1, XH-G1, XH-H1, XL1, XL1S, XL2, XLH1 PRO HDV, XLM2, XM1, XM2
VCA0012	8717825940139	7.2V	1900mAh	BP-617	Canon	ELURA, DM-CV11, DM-MV20i, DM-PV1, DVMV100, DVMV20, DV-MV20, MV100, MV20, MV20i, ZRCV11
VCA0014	8717825940108	7.4V	2800mAh	BP-522	Canon	X150i, IXY DVM, DM-MV100X, DM-MV100Xi, DM-MV30, DM-MV400, DM-MV430, DM-MV450, DM-MVX1i, MV100X, MV100Xi, MV30, MV300, MV300i, MV30i, MV400, MV400i, MV430, MV430i, MV430iMC, MV450, MV450i, MV500, MV500i, MV520, MV530, MV530i, MV550, MV550i, MV600, MV600i, MV630, MV630i, MV650, MV650i, MV700, MV700i, MV730, MV730i, MV750, MV750i, MVX1, MVX100, MVX100i, MVX150, MVX150i, MVX1i, MVX2i, MVX3i, MVXLi, FV10, FV100, FV2, FV20, FV200, FV30, FV300, FV40, FV400, FV50, FV500, FVM1, FVM10, ZR10, ZR20, ZR25, ZR25mc, ZR30, ZR30mc, ZR40, ZR45, ZR45MC, ZR50, ZR50MC, ZR60, ZR60MC, ZR65MC, ZR70MC, ZR80, ZR85, ZR85MC, ZR90, Optura 10, Optura 100MC, Optura 20, Optura 200MC, Optura 50MC, Optura Pi, Optura Xi, PV130

VCA0016	8717825940177	7.2V	4200mAh	BP-930 BP-924 BP-927 BP-931	Canon	E1, E2, E30, ES300V, ES-300V, ES4000, ES-4000, ES410V, ES-410V, ES420, ES420V, ES-420V, ES50, ES-50, ES5000, ES-5000, ES520A, ES-520A, ES55, ES-55, ES60, ES-60, ES6000, ES-6000, ES65, ES-65, ES6500V, ES-6500V, ES7000ES, ES-7000es, ES7000V, ES-7000V, ES700ES, ES75, ES-75, ES8000V, ES-8000V, ES-8100, ES-8100H18, ES8100H8, ES8100V, ES-8100V, ES8200, ES8200V, ES-8200V, ES8400, ES8400V, ES-8400V, ES8600, ES-8600, G10, G1000, G10HI, G1500, G15HI, G20, G2000, G20HI, G30, G30HI, G35, G35HI, G45, G45HI, UCV10, UC-V10, UCV100, UC-V100, UCV10HI, UC-V10HI, UCV20, UC-V20, UCV200, UC-V200, UCV20HI, UC-V20HI, UCV30, UC-V30, UCV300, UC-V300, UCV30HI, UC-V30HI, UCX1HI, UC-X1HI, UCX2, UC-X2, UCX2HI, UC-X2HI, UCX30HI, UC-X30HI, UCX3HI, UCX40HI, UC-X40HI, UCX45HI, UC-X45HI, UCX50, UC-X50, UCX50HI, UCX50HI, UC-X50HI, UC-X55, UCX55HI, UC-X55HI, V20, V200, V30, V300, V40, V400, V40HI, V420, V50, V500, V50HI, V520, V60, V60HI, V65, V65HI, V72, V75HI, X1 Hi, X2 Hi, X30 Hi, X40 Hi, X45 Hi, X50 Hi, X55 Hi, DM-MV1, DM-MV10, MV1, MV10, MV10i, MV20, MV200, MV200i, MV20i, FV1, GL1, GL2, Optura, Optura Pi, ICX1HI, ULTURA, UV-X20, VISTURA, XH-A1, XH-G1, XH-H1, XL1, XL1S, XL2, XLH1 PRO HDV, XLM2, XM1, XM2
VCA0017	8717825940115	7.4V	4500mAh	BP-535	Canon	X150i, IXY DVM, DM-MV100X, DM-MV100Xi, DM-MV30, DM-MV400, DM-MV430, DM-MV450, DM-MVXi, MV100X, MV100Xi, MV30, MV300, MV300i, MV30i, MV400, MV400i, MV430, MV430i, MV430IMC, MV450, MV450i, MV500, MV500i, MV520, MV530, MV530i, MV550, MV550i, MV600, MV600i, MV630, MV630i, MV650, MV650i, MV700, MV700i, MV730, MV730i, MV750, MV750i, MVX1, MVX100, MVX100i, MVX150, MVX150i, MVX1i, MVX2i, MVX3i, MVXLi, FV10, FV100, FV2, FV20, FV200, FV30, FV300, FV40, FV400, FV50, FV500, FVM1, FVM10, ZR10, ZR20, ZR25, ZR25mc, ZR30, ZR30mc, ZR40, ZR45, ZR45MC, ZR50, ZR50MC, ZR60, ZR60MC, ZR65MC, ZR70MC, ZR80, ZR85, ZR85MC, ZR90, Optura 10, Optura 100MC, Optura 20, Optura 200MC, Optura 50MC, Optura Pi, Optura Xi, PV130
VCA0018	8717825940184	7.2V	7000mAh	BP-941 BP-945 BP-975	Canon	E1, E2, E30, ES300V, ES-300V, ES4000, ES-4000, ES410V, ES-410V, ES420, ES420V, ES-420V, ES50, ES-50, ES5000, ES-5000, ES520A, ES-520A, ES55, ES-55, ES60, ES-60, ES6000, ES-6000, ES65, ES-65, ES6500V, ES-6500V, ES7000ES, ES-7000es, ES7000V, ES-7000V, ES700ES, ES75, ES-75, ES8000V, ES-8000V, ES-8100, ES-8100H18, ES8100H8, ES8100V, ES-8100V, ES8200, ES8200V, ES-8200V, ES8400, ES8400V, ES-8400V, ES8600, ES-8600, G10, G1000, G10HI, G1500, G15HI, G20, G2000, G20HI, G30, G30HI, G35, G35HI, G45, G45HI, UCV10, UC-V10, UCV100, UC-V100, UCV10HI, UC-V10HI, UCV20, UC-V20, UCV200, UC-V200, UCV20HI, UC-V20HI, UCV30, UC-V30, UCV300, UC-V300, UCV30HI, UC-V30HI, UCX1HI, UCX1HI, UCX2, UC-X2, UCX2HI, UC-X2HI, UCX30HI, UC-X30HI, UCX3HI, UCX40HI, UC-X40HI, UCX45HI, UC-X45HI, UCX50, UC-X50, UC-X50HI, UC-X55, UCX55HI, UC-X55HI, V20, V200, V30, V300, V40, V400, V40HI, V420, V50, V500, V50HI, V520, V60, V60HI, V65, V65HI, V72, V75HI, X1 Hi, X2 Hi, X30 Hi, X40 Hi, X45 Hi, X50 Hi, X55 Hi, DM-MV1, DM-MV10, MV1, MV10, MV10i, MV20, MV200, MV200i, MV20i, FV1, GL1, GL2, Optura, Optura Pi, ICX1HI, ULTURA, UV-X20, VISTURA, XH-A1, XH-G1, XH-H1, XL1, XL1S, XL2, XLH1 PRO HDV, XLM2, XM1, XM2
VCA0019	8717825941174	7.4V	2400mAh	BP-2L24	Canon	ELURA 40MC, ELURA 50, ELURA 60, ELURA 65, ELURA 70, ELURA 80, ELURA 85, ELURA 90, iVIS DC300, iVIS HG10, iVIS HV30, IXY DV3, IXY DV5, IXY DVM3, HF R106, HF R16, HF R17, HF R18, HG10, HV20, HV30, HV30 HDV, HV40, Legria HV40, DC301, DC310, DC320, DC330, DC410, DC411, DC420, MD100, MD101, MD110, MD111, MD120, MD130, MD140, MD150, MD160, MD205, MD215, MD216, MD225, MD235, MD245, MD255, MD265, MV5, MV5i, MV5iMC, MV6, MV6i, MV6iMC, MV790, MV800, MV800i, MV830, MV830i, MV850, MV850i, MV880X, MV880Xi, MV890, MV900, MV901, MV920, MV930, MV940, MV950, MV960, MVX20, MVX200, MVX200i, MVX20i, MVX250, MVX250i, MVX25i, MVX30, MVX300, MVX30i, MVX330, MVX330i, MVX35, MVX350, MVX350i, MVX35i, MVX40, MVX40i, MVX45, MVX45i, FV500, FVM100, FVM20, FVM200, FVM30, FVM500, ZR100, ZR200, ZR300, ZR400, ZR500, ZR600, ZR700, ZR800, ZR830, ZR850, ZR900, ZR930, ZR950, ZR960, Optura 30, Optura 300, Optura 40, Optura 400, Optura 50, Optura 500, Optura 60, VIXIA HG10, VIXIA HV20, VIXIA HV30, VIXIA HV40
VCA0020	8717825942232	7.4V	890mAh	BP-808 (chip)	Canon	iVIS FS10, iVIS FS21, iVIS HF M31, iVIS HF M32, iVIS HF S10, iVIS HF S11, iVIS HF S21, iVIS HF10, iVIS HF100, iVIS HF20, HF G10, HF G25, HF M306, HF M31, HF M32, HF M36, HF M406, HF M41, HF M46, HF S10, HF S100, HF S11, HF S20, HF S200, HF S21, HFS100, HFS200, Legria HF M306, Legria HF M31, Legria HF M36, Legria HF S20, Legria HF S200, Legria HF S21, HG20, HG21, FS10, FS100, FS11, FS20, FS200, FS21, FS22, FS300, FS305, FS306, FS307, FS31, FS36, FS37, FS406, FS46, Legria FS305, Legria FS306, Legria FS307, Legria FS36, Legria FS37, VIXIA FS100/E, VIXIA HF M30, VIXIA HF M300, VIXIA HF M31, VIXIA HF S10, VIXIA HF S100, VIXIA HF S11, VIXIA HF S20, VIXIA HF S200, VIXIA HF S21, VIXIA HF20, VIXIA HF200
VCA0021	8717825942249	7.4V	890mAh	BP-809 (chip)	Canon	iVIS HF S10, iVIS HF S11, iVIS HF10, iVIS HF100, iVIS HF11, iVIS HF20, iVIS HF21, iVIS HG21, HF10, HF100, HF11, Legria HF M306, Legria HF M31, Legria HF M36, Legria HF S20, Legria HF S200, Legria HF S21, HG20, HG21, VIXIA FS10, VIXIA FS100, VIXIA FS11, VIXIA HF M30, VIXIA HF M300, VIXIA HF M31, VIXIA HF S10, VIXIA HF S100, VIXIA HF S11, VIXIA HF S20, VIXIA HF S200, VIXIA HF S21, VIXIA HF10, VIXIA HF100, VIXIA HF11, VIXIA HF20, VIXIA HF200, VIXIA HFS10, VIXIA HFS100, VIXIA HFS100E, VIXIA HG20, VIXIA HG21

VCA0026	8717825945400	7.4V	2490mAh	BP-827 (chip)	Canon	iVlS HF S10, iVlS HF S11, iVlS HF10, iVlS HF100, iVlS HF11, iVlS HF20, iVlS HF21, iVlS HG21, HF G10, HF G25, HF M306, HF M31, HF M32, HF M36, HF M406, HF M41, HF M46, HF S10, HF S100, HF S11, HF S20, HF S200, HF S21, HF10, HF100, HF11, HFS100, HFS200, Legria HF M306, Legria HF M31, Legria HF M36, Legria HF S20, Legria HF S200, Legria HF S21, HG20, HG21, FS10, FS100, FS11, FS20, FS200, FS21, FS22, FS305, FS306, FS307, FS36, FS37, FS406, FS46, VIXIA HF M30, VIXIA HF M300, VIXIA HF M31, VIXIA HF S10, VIXIA HF S100, VIXIA HF S11, VIXIA HF S20, VIXIA HF S200, VIXIA HF S21, VIXIA HF10, VIXIA HF100, VIXIA HF11, VIXIA HF20, VIXIA HF200, VIXIA HG20, VIXIA HG21
VCA0027	8718226220998	7.4V	1780mAh	BP-819 (chip)	Canon	iVlS FS10, iVlS FS21, iVlS HF M31, iVlS HF M32, iVlS HF S10, iVlS HF S11, iVlS HF S21, iVlS HF10, iVlS HF100, iVlS HF20, HF G10, HF G25, HF M306, HF M31, HF M32, HF M36, HF M406, HF M41, HF M46, HF S10, HF S100, HF S11, HF S20, HF S200, HF S21, HFS100, HFS200, Legria HF M306, Legria HF M31, Legria HF M36, Legria HF S20, Legria HF S200, Legria HF S21, HG20, HG21, FS10, FS100, FS11, FS20, FS200, FS21, FS22, FS300, FS305, FS306, FS307, FS31, FS36, FS37, FS406, FS46, Legria FS305, Legria FS306, Legria FS307, Legria FS36, Legria FS37, VIXIA FS100/E, VIXIA HF M30, VIXIA HF M300, VIXIA HF M31, VIXIA HF S10, VIXIA HF S100, VIXIA HF S11, VIXIA HF S20, VIXIA HF S200, VIXIA HF S21, VIXIA HF20, VIXIA HF200
VCA0028	8718226229762	7.4V	7900mAh	BP-970G	Canon	E1 , E2 , E30 , ES-300V , ES-4000, ES-410V, ES-420V, ES-420V Hi8 , ES-50, ES-5000, ES-520A, ES-55, ES-60 Hi8, ES-6000, ES-65 Hi8 , ES-6500V, ES-7000es, ES-7000V , ES-75 Hi8 , ES-8000V, ES-8100 Hi8, ES-8100V, ES-8200V, ES-8200V Hi8 , ES-8400V , ES-8400V Hi8 , ES-8600 , G-1000, G-10hi , G-1500, G-15Hi , G-20hi, G-30Hi , G-35Hi , G-45Hi, G-50Hi , UC-V100 , UC-V10Hi , UC-V200, UC-V20Hi , UC-V300, UC-V30Hi , UC-V400, UC-V40Hi, UC-V420, UC-V50Hi , UC-V520 , UC-X1Hi , UC-X2 , UC-X20Hi, UC-X2Hi , UC-X30Hi , UC-X40Hi , UC-X45Hi , UC-X50Hi , UC-X55Hi , V40 , V40Hi , V420 , V50Hi , V520 , V60Hi , V65Hi , V72 , V75Hi , DM-MV1 , DM-MV10 , DM-MV100 , DM-MV200i , GL-1 , GL-2, FV1 , MB-C2, MB-E30, MB-V72 , Optura , Ultura , Vistura, XH-A1, XH-G1, XL1, XL1S , XL2 , XL-H1 , XM1 , XM2 , XV1 , XV2
VCA0029	8718226229915	7.4V	4900mAh	BP-955	Canon	XF-100, XF-105, XF-300 HD, XF-305 HD , XH A1S, XH G1S, C100, C500
VCA0030	8718226229922	7.4V	7350mAh	BP-975	Canon	XF-100, XF-105, XF-300 HD, XF-305 HD , XH A1S, XH G1S, C100, C500
VCA0031	8718503022789	3.7V	1000mAh	BP-110	Canon	HF-R26, HF-R28, HF-R206
VCA0032	8718503022796	3.6V	895mAh	BP-709	Canon	HF M52, HF M56, HF M506, HF R36, HF R37, HF R38, HF R46, HF R48 , HF R66, HF R68, HF R306, HF R406, HF R606, HF M50, HF M52, HF M500, HF R30, HF R32, HF R40, HF R42, HF R300, HF R400, HF R506
VCA0033	8718503022802	3.6V	1790mAh	BP-718	Canon	HF M52, HF M56, HF M506, HF R36, HF R37, HF R38, HF R46, HF R48 , HF R66, HF R68 , HF R306, HF R406, HF R606, HF M50, HF M52, HF M500, HF R30, HF R32, HF R40, HF R42, HF R300, HF R400, HF R506
VCA0034	8718503022819	3.6V	2680mAh	BP-727	Canon	HF M52, HF M56, HF M506, HF R36, HF R37, HF R38, HF R46, HF R48 , HF R66, HF R68 , HF R306, HF R406, HF R606, HF M50, HF M52, HF M500, HF R30, HF R32, HF R40, HF R42, HF R300, HF R400, HF R506
VCA0035	8718503023083	7.4V	1780mAh	BP-820	Canon	HF G30, XA10, XA20, XA25
VCA0036	8718503023090	7.4V	2670mAh	BP-828	Canon	HF G30, XA10, XA20, XA25

VHI0001	8717825940399	7.2V	750mAh	DZ-BP07S	Hitachi	DZ-BD10H, DZ-BD10HA, DZ-BD70, DZ-BD70A, DZ-BD70E, DZ-BD70E, DZ-BD7H, DZ-BD7HA, DZ-BD7HE, DZ-BD7HE, DZ-BD9H, DZ-BX35, DZ-BX35, DZ-BX35, DZ-BX35A, DZ-BX35E, DZ-BX37E, DZ-GX20, DZ-GX20A, DZ-GX20E, DZ-GX25M, DZ-GX3100, DZ-GX3100, DZ-GX3100A, DZ-GX3100E, DZ-GX3200, DZ-GX3200, DZ-GX3200A, DZ-GX3200E, DZ-GX3300, DZ-GX3300(B), DZ-GX3300(S), DZ-GX3300A, DZ-GX3300E, DZ-GX5000A, DZ-GX5020, DZ-GX5020A, DZ-GX5020E, DZ-GX5060, DZ-GX5060SW, DZ-GX5080A, DZ-GX5100, DZ-GX5100E, DZ-GX5100SW, DZ-GX5300, DZ-HD90, DZ-HS300, DZ-HS300, DZ-HS300A, DZ-HS300E, DZ-HS301, DZ-HS301E, DZ-HS301SW, DZ-HS303, DZ-HS303A, DZ-HS303E, DZ-HS303SW, DZ-HS401, DZ-HS403, DZ-HS500, DZ-HS500, DZ-HS500A, DZ-HS500E, DZ-HS500SW, DZ-HS501, DZ-HS501E, DZ-HS503, DZ-HS50SW, DZ-HS803, DZ-HS903, DZ-M5000V5, DZ-M7000V5, DZ-M8000V6, DZ-MV270, DZ-MV350, DZ-MV350, DZ-MV350A, DZ-MV350E, DZ-MV380, DZ-MV380, DZ-MV380A, DZ-MV380E, DZ-MV550, DZ-MV550A, DZ-MV550E, DZ-MV580, DZ-MV580A, DZ-MV580E, DZ-MV730, DZ-MV730A, DZ-MV730E, DZ-MV750, DZ-MV750E, DZ-MV750MA, DZ-MV780, DZ-MV780A, DZ-MV780E, DZ-MV780R, DZ-MV780S, NV-GS10, NV-GS100K, NV-GS10B, NV-GS10EG, NV-GS10EG-A, NV-GS10EG-R, NV-GS10EG-S, NV-GS120, NV-GS120B, NV-GS120EG-S, NV-GS120GN, NV-GS120GN-S, NV-GS120K, NV-GS140, NV-GS140EG-S, NV-GS140E-S, NV-GS150, NV-GS150B, NV-GS150EG-S, NV-GS150E-S, NV-GS158GK, NV-GS17, NV-GS17EF-S, NV-GS17E-S, NV-GS180, NV-GS180EB-S, NV-GS180EF-S, NV-GS180EG-S, NV-GS180E-S, NV-GS188GK, NV-GS188GK-S, NV-GS19, NV-GS200, NV-GS200B, NV-GS200EG-S, NV-GS200GN, NV-GS200K, NV-GS21, NV-GS21B, NV-GS21E-S, NV-GS22, NV-GS22EG-A, NV-GS22EG-S, NV-GS230, NV-GS230EB-S, NV-GS230EG-S, NV-GS230E-S, NV-GS24, NV-GS250, NV-GS250B, NV-GS250EG-S, NV-GS250E-S, NV-GS258GK, NV-GS26GK, NV-GS26GK-S, NV-GS27, NV-GS27EB-S, NV-GS27EF-S, NV-GS27EG-S, NV-GS27E-S, NV-GS280, NV-GS280EB-S, NV-GS280EG-S, NV-GS28GK, NV-GS29, NV-GS30, NV-GS300, NV-GS300EB-S, NV-GS300EG-S, NV-GS300E-S, NV-GS308GK, NV-GS308GK-S, NV-GS30B, NV-GS320, NV-GS320EB-S, NV-GS320EG-S, NV-GS320E-S, NV-GS328GK, NV-GS33, NV-GS330, NV-GS33EG-S, NV-GS35, NV-GS35E-S, NV-GS36, NV-GS37, NV-GS37EB-S, NV-GS37EG-S, NV-GS37E-S, NV-GS38GK, NV-GS39, NV-GS40, NV-GS400, NV-GS400B, NV-GS400EG-S, NV-GS400GN, NV-GS400K, NV-GS408GK, NV-GS40B, NV-GS44, NV-GS50, NV-GS500, NV-GS500EB-S, NV-GS500EG-S, NV-GS500E-S, NV-GS508GK, NV-GS508GK-S, NV-GS50A, NV-GS50A-S, NV-GS50AW, NV-GS50B, NV-GS50K, NV-GS50V, NV-GS55, NV-GS55B, NV-GS55EG-S, NV-GS55GN-S, NV-GS55K, NV-GS58GK, NV-GS58GK-S, NV-GS59, NV-GS60, NV-GS60EB-S, NV-GS60EG-S, NV-GS65, NV-GS70, NV-GS70A, NV-GS70A-S, NV-GS70B, NV-GS70K, NV-GS75, NV-GS75B, NV-GS75EG-S, NV-GS78GK, NV-GS80, NV-GS80EB-S, NV-GS80EG-S, NV-GS80E-S, NV-GS83, NV-GS85, NV-GS90, NV-MX500A, PV-GS12, PV-GS120, PV-GS14, PV-GS15, PV-GS150, PV-GS180, PV-GS19, PV-GS200, PV-GS250, PV-GS29, PV-GS300, PV-GS31, PV-GS320, PV-GS33, PV-GS34, PV-GS35, PV-GS36, PV-GS39, PV-GS400, PV-GS50, PV-GS500, PV-GS50K, PV-GS50S, PV-GS55, PV-GS59, PV-GS65, PV-GS70, PV-GS75, PV-GS80, PV-GS83, PV-GS85, PV-GS9, SDR-H18, SDR-H20, SDR-H200, SDR-H20EB-S, SDR-H20EG-S, SDR-H20E-S, SDR-H250, SDR-H250EB-S, SDR-H250EG-S, SDR-H250E-S, SDR-H280, SDR-H288GK, VDR-D100, VDR-D100EB-S, VDR-D150, VDR-D150EB-S, VDR-D150EF-S, VDR-D150EG-S, VDR-D150E-S, VDR-D158GK, VDR-D160, VDR-D160EB-S, VDR-D160EG-S, VDR-D160E-S, VDR-D200, VDR-D210, VDR-D220, VDR-D220EB-S, VDR-D220EG-S, VDR-D220E-S, VDR-D230, VDR-D250, VDR-D250EB-S, VDR-D250EG-S, VDR-D250E-S, VDR-D258GK, VDR-D300, VDR-D300EB-S, VDR-D300EG-S, VDR-D300E-S, VDR-D308GK, VDR-D310, VDR-D310EB-S, VDR-D310EG-S, VDR-D310E-S, VDR-D400, VDR-M30, VDR-M30 DVD, VDR-M30K, VDR-M50, VDR-M50 DVD, VDR-M50B, VDR-M50EG-S, VDR-M50PP, VDR-M53, VDR-M54, VDR-M55, VDR-M55E-S, VDR-M70, VDR-M70 DVD, VDR-M70B, VDR-M70EG-S, VDR-M70K, VDR-M70PP, VDR-M75, VDR-M75E-S, VDR-M95
---------	---------------	------	--------	----------	---------	---

VHI0002	8717825940405	7.2V	1400mAh	DZ-BP14	Hitachi	AG-DC15, AG-DV1DC, AG-DVC15, AG-DVC30, AG-DVC32, AG-DVC60, AG-DVC60E, AG-DVC62, AG-DVC7, AG-DVC80, AG-DVX100, AG-DVX100 PRO, AG-DVX1000, AG-DVX100A, AG-DVX100AE, AG-DVX100AP, AG-DVX100BE, AG-DVX100BP, AG-DVX102A, AG-EZ50U, AG-HVX200, AG-HVX200P, DZ-MV200A, DZ-MV200E, DZ-MV208E, DZ-MV230A, DZ-MV230E, DZ-MV250, DZ-MV270A, DZ-MV270E, DZ-MX5000, NV-C1, NV-C2, NV-C3, NV-C5, NV-C7, NV-DA1, NV-DA1B, NV-DA1EG, NV-DA1EN, NV-DA1ENA, NV-DB1, NV-D89, NV-DS11, NV-DS11EN, NV-DS11ENA, NV-DS11ENC, NV-DS12, NV-DS12B, NV-DS12EG, NV-DS15, NV-DS150, NV-DS150B, NV-DS15A, NV-DS15B, NV-DS15EG, NV-DS15EN, NV-DS15ENC, NV-DS200, NV-DS25, NV-DS25A, NV-DS25EG, NV-DS25EN, NV-DS27, NV-DS27B, NV-DS28, NV-DS28A, NV-DS28B, NV-DS29, NV-DS29EG, NV-DS3, NV-DS30, NV-DS30A, NV-DS30EG, NV-DS33, NV-DS33EN, NV-DS35, NV-DS37, NV-DS37B, NV-DS38, NV-DS38A, NV-DS38B, NV-DS38EG, NV-DS50, NV-DS50A, NV-DS55, NV-DS60, NV-DS60A, NV-DS60B, NV-DS60EG, NV-DS60EG-S, NV-DS65, NV-DS65A, NV-DS65A-S, NV-DS65B, NV-DS65EG, NV-DS68, NV-DS68EG, NV-DS7, NV-DS7/NW, NV-DS77, NV-DS77B, NV-DS77EG, NV-DS77EN, NV-DS77ENA, NV-DS8, NV-DS80K, NV-DS88, NV-DS88A, NV-DS88EG, NV-DS88K, NV-DS89, NV-DS89EG, NV-DS8EG, NV-DS9, NV-DS99, NV-DS990, NV-DS990EG, NV-DS99EN, NV-DS99ENA, NV-EX1, NV-EX1B, NV-EX1EG, NV-EX1EN, NV-EX1ENA, NV-EX21, NV-EX21A, NV-EX21EG, NV-EX3, NV-EX3EG, NV-GS1, NV-GS11, NV-GS12, NV-GS14, NV-GS15, NV-GS15EB, NV-GS15GC-S, NV-GS1B, NV-GS1EG, NV-GS20, NV-GS3, NV-GS33, NV-GS3B, NV-GS3EG, NV-GS4, NV-GS4B, NV-GS4EG, NV-GS5, NV-GS5B, NV-GS5EG, NV-GS5K, NV-GS7K, NV-GS9, NV-GX7, NV-GX7EG, NV-GX7K, NV-M20, NV-MX1, NV-MX1000, NV-MX1B, NV-MX2, NV-MX2000, NV-MX2500, NV-MX2B, NV-MX2EG, NV-MX300, NV-MX3000, NV-MX300A, NV-MX300EG, NV-MX300EN, NV-MX340, NV-MX350, NV-MX350A, NV-MX350EG, NV-MX3A, NV-MX3EN, NV-MX5, NV-MX500, NV-MX5000, NV-MX500B, NV-MX500EG, NV-MX5B, NV-MX7, NV-MX7A, NV-MX7B, NV-MX7DEN, NV-MX8, NV-MX8B, NV-MD9000, NV-MG3, NV-RX22, NV-RX33, NV-RX33EG, NV-RX66, NV-RX66EG, AJ-PCS060G(Portable Hard Disk Unit), PV-BP8, PV-DBP8, PV-DBP8A, PV-DC102, PV-DC103, PV-DC152, PV-DC202, PV-DC203, PV-DC252, PV-DC352, PV-DC402, PV-DC52, PV-DC53, PV-DC602, PV-DC702, PV-DC73, PV-DC852, PV-DC901, PV-DC952, PV-DC953, PV-D401, PV-DVP8A, PV-DVP8-A, PV-DV100, PV-DV100K, PV-DV101, PV-DV102, PV-DV103, PV-DV121, PV-DV151, PV-DV200, PV-DV200K, PV-DV201, PV-DV201-K, PV-DV202, PV-DV203, PV-DV221, PV-DV351, PV-DV400, PV-DV400K, PV-DV401, PV-DV402, PV-DV51, PV-DV52, PV-DV53, PV-DV600, PV-DV600K, PV-DV601, PV-DV601D, PV-DV602, PV-DV700, PV-DV701, PV-DV702, PV-DV702K, PV-DV710, PV-DV73, PV-DV800, PV-DV800K, PV-DV801, PV-DV851, PV-DV851D, PV-DV852, PV-DV900, PV-DV901, PV-DV910, PV-DV951, PV-DV952, PV-DV953, PV-GS11, PV-GS12, PV-GS13, PV-GS14, PV-GS15, PV-GS2, PV-GS9, PV-VM202, VDR-M10, VDR-M20, DZ-MV100, DZ-MV100, DZ-MV100A, DZ-MV100E, DZ-MV200, DZ-MV200, DZ-MV200A, DZ-MV200E, DZ-MV208, DZ-MV208E, DZ-MV230, DZ-MV230A, DZ-MV230E, DZ-MV238E, DZ-MV250, DZ-MV270, DZ-MV270A, DZ-MV270E
---------	---------------	------	---------	---------	---------	--

VHI0005	8717825940436	7.2V	1400mAh	DZ-BP14S	Hitachi	<p>DZ-BD10H, DZ-BD10HA, DZ-BD70, DZ-BD70A, DZ-BD70E, DZ-BD70E, DZ-BD7H, DZ-BD7HA, DZ-BD7HE, DZ-BD7HE, DZ-BD9H, DZ-BX35, DZ-BX35, DZ-BX35, DZ-BX35A, DZ-BX35E, DZ-BX37E, DZ-GX20, DZ-GX20A, DZ-GX20E, DZ-GX25M, DZ-GX3100, DZ-GX3100, DZ-GX3100A, DZ-GX3100E, DZ-GX3200, DZ-GX3200, DZ-GX3200A, DZ-GX3200E, DZ-GX3300, DZ-GX3300(B), DZ-GX3300(S), DZ-GX3300A, DZ-GX3300E, DZ-GX5000A, DZ-GX5020, DZ-GX5020A, DZ-GX5020E, DZ-GX5060, DZ-GX5060SW, DZ-GX5080A, DZ-GX5100, DZ-GX5100E, DZ-GX5100SW, DZ-GX5300, DZ-HD90, DZ-HS300, DZ-HS300, DZ-HS300A, DZ-HS300E, DZ-HS301, DZ-HS301E, DZ-HS301SW, DZ-HS303, DZ-HS303A, DZ-HS303E, DZ-HS303SW, DZ-HS401, DZ-HS403, DZ-HS500, DZ-HS500, DZ-HS500A, DZ-HS500E, DZ-HS500SW, DZ-HS501, DZ-HS501E, DZ-HS503, DZ-HS50SW, DZ-HS803, DZ-HS903, DZ-M5000V5, DZ-M7000V5, DZ-M8000V6, DZ-MV270, DZ-MV350, DZ-MV350, DZ-MV350A, DZ-MV350E, DZ-MV380, DZ-MV380, DZ-MV380A, DZ-MV380E, DZ-MV550, DZ-MV550A, DZ-MV550E, DZ-MV580, DZ-MV580A, DZ-MV580E, DZ-MV730, DZ-MV730A, DZ-MV730E, DZ-MV750, DZ-MV750E, DZ-MV750MA, DZ-MV780, DZ-MV780A, DZ-MV780E, DZ-MV780R, DZ-MV780S, NV-GS10, NV-GS100K, NV-GS10B, NV-GS10EG, NV-GS10EG-A, NV-GS10EG-R, NV-GS10EG-S, NV-GS120, NV-GS120B, NV-GS120EG-S, NV-GS120GN, NV-GS120GN-S, NV-GS120K, NV-GS140, NV-GS140EG-S, NV-GS140E-S, NV-GS150, NV-GS150B, NV-GS150EG-S, NV-GS150E-S, NV-GS158GK, NV-GS17, NV-GS17EF-S, NV-GS17E-S, NV-GS180, NV-GS180EB-S, NV-GS180EF-S, NV-GS180EG-S, NV-GS180E-S, NV-GS188GK, NV-GS188GK-S, NV-GS19, NV-GS200, NV-GS200B, NV-GS200EG-S, NV-GS200GN, NV-GS200K, NV-GS21, NV-GS21B, NV-GS21E-S, NV-GS22, NV-GS22EG-A, NV-GS22EG-S, NV-GS230, NV-GS230EB-S, NV-GS230EG-S, NV-GS230E-S, NV-GS24, NV-GS250, NV-GS250B, NV-GS250EG-S, NV-GS250E-S, NV-GS258GK, NV-GS26GK, NV-GS26GK-S, NV-GS27, NV-GS27EB-S, NV-GS27EF-S, NV-GS27EG-S, NV-GS27E-S, NV-GS280, NV-GS280EB-S, NV-GS280EG-S, NV-GS28GK, NV-GS29, NV-GS30, NV-GS300, NV-GS300EB-S, NV-GS300EG-S, NV-GS300E-S, NV-GS308GK, NV-GS308GK-S, NV-GS30B, NV-GS320, NV-GS320EB-S, NV-GS320EG-S, NV-GS320E-S, NV-GS328GK, NV-GS33, NV-GS330, NV-GS33EG-S, NV-GS35, NV-GS35E-S, NV-GS36, NV-GS37, NV-GS37EB-S, NV-GS37EG-S, NV-GS37E-S, NV-GS38GK, NV-GS39, NV-GS40, NV-GS400, NV-GS400B, NV-GS400EG-S, NV-GS400GN, NV-GS400K, NV-GS408GK, NV-GS40B, NV-GS44, NV-GS50, NV-GS500, NV-GS500EB-S, NV-GS500EG-S, NV-GS500E-S, NV-GS508GK, NV-GS508GK-S, NV-GS50A, NV-GS50A-S, NV-GS50AW, NV-GS50B, NV-GS50K, NV-GS50V, NV-GS55, NV-GS55B, NV-GS55EG-S, NV-GS55GN-S, NV-GS55K, NV-GS58GK, NV-GS58GK-S, NV-GS59, NV-GS60, NV-GS60EB-S, NV-GS60EG-S, NV-GS65, NV-GS70, NV-GS70A, NV-GS70A-S, NV-GS70B, NV-GS70K, NV-GS75, NV-GS75B, NV-GS75EG-S, NV-GS78GK, NV-GS80, NV-GS80EB-S, NV-GS80EG-S, NV-GS80E-S, NV-GS83, NV-GS85, NV-GS90, NV-MX500A, PV-GS12, PV-GS120, PV-GS14, PV-GS15, PV-GS150, PV-GS180, PV-GS19, PV-GS200, PV-GS250, PV-GS29, PV-GS300, PV-GS31, PV-GS320, PV-GS33, PV-GS34, PV-GS35, PV-GS36, PV-GS39, PV-GS400, PV-GS50, PV-GS500, PV-GS50K, PV-GS50S, PV-GS55, PV-GS59, PV-GS65, PV-GS70, PV-GS75, PV-GS80, PV-GS83, PV-GS85, PV-GS9, SDR-H18, SDR-H20, SDR-H200, SDR-H20EB-S, SDR-H20EG-S, SDR-H20E-S, SDR-H250, SDR-H250EB-S, SDR-H250EG-S, SDR-H250E-S, SDR-H280, SDR-H288GK, VDR-D100, VDR-D100EB-S, VDR-D150, VDR-D150EB-S, VDR-D150EF-S, VDR-D150EG-S, VDR-D150E-S, VDR-D158GK, VDR-D160, VDR-D160EB-S, VDR-D160EG-S, VDR-D160E-S, VDR-D200, VDR-D210, VDR-D220, VDR-D220EB-S, VDR-D220EG-S, VDR-D220E-S, VDR-D230, VDR-D250, VDR-D250EB-S, VDR-D250EG-S, VDR-D250E-S, VDR-D258GK, VDR-D300, VDR-D300EB-S, VDR-D300EG-S, VDR-D300E-S, VDR-D308GK, VDR-D310, VDR-D310EB-S, VDR-D310EG-S, VDR-D310E-S, VDR-D400, VDR-M30, VDR-M30 DVD, VDR-M30K, VDR-M50, VDR-M50 DVD, VDR-M50B, VDR-M50EG-S, VDR-M50PP, VDR-M53, VDR-M54, VDR-M55, VDR-M55E-S, VDR-M70, VDR-M70 DVD, VDR-M70B, VDR-M70EG-S, VDR-M70K, VDR-M70PP, VDR-M75, VDR-M75E-S, VDR-M95</p>
---------	---------------	------	---------	----------	---------	--

VHI0007	8717825943772	7.2V	2100mAh	DZ-BP21S	Hitachi	<p>DZ-BD10H, DZ-BD10HA, DZ-BD70, DZ-BD70A, DZ-BD70E, DZ-BD70E, DZ-BD7H, DZ-BD7HA, DZ-BD7HE, DZ-BD7HE, DZ-BD9H, DZ-BX35, DZ-BX35, DZ-BX35, DZ-BX35A, DZ-BX35E, DZ-BX37E, DZ-GX20, DZ-GX20A, DZ-GX20E, DZ-GX25M, DZ-GX3100, DZ-GX3100, DZ-GX3100A, DZ-GX3100E, DZ-GX3200, DZ-GX3200, DZ-GX3200A, DZ-GX3200E, DZ-GX3300, DZ-GX3300(B), DZ-GX3300(S), DZ-GX3300A, DZ-GX3300E, DZ-GX5000A, DZ-GX5020, DZ-GX5020A, DZ-GX5020E, DZ-GX5060, DZ-GX5060SW, DZ-GX5080A, DZ-GX5100, DZ-GX5100E, DZ-GX5100SW, DZ-GX5300, DZ-HD90, DZ-HS300, DZ-HS300, DZ-HS300A, DZ-HS300E, DZ-HS301, DZ-HS301E, DZ-HS301SW, DZ-HS303, DZ-HS303A, DZ-HS303E, DZ-HS303SW, DZ-HS401, DZ-HS403, DZ-HS500, DZ-HS500, DZ-HS500A, DZ-HS500E, DZ-HS500SW, DZ-HS501, DZ-HS501E, DZ-HS503, DZ-HS50SW, DZ-HS803, DZ-HS903, DZ-M5000V5, DZ-M7000V5, DZ-M8000V6, DZ-MV270, DZ-MV350, DZ-MV350, DZ-MV350A, DZ-MV350E, DZ-MV380, DZ-MV380, DZ-MV380A, DZ-MV380E, DZ-MV550, DZ-MV550A, DZ-MV550E, DZ-MV580, DZ-MV580A, DZ-MV580E, DZ-MV730, DZ-MV730A, DZ-MV730E, DZ-MV750, DZ-MV750E, DZ-MV750MA, DZ-MV780, DZ-MV780A, DZ-MV780E, DZ-MV780R, DZ-MV780S, NV-GS10, NV-GS100K, NV-GS10B, NV-GS10EG, NV-GS10EG-A, NV-GS10EG-R, NV-GS10EG-S, NV-GS120, NV-GS120B, NV-GS120EG-S, NV-GS120GN, NV-GS120GN-S, NV-GS120K, NV-GS140, NV-GS140EG-S, NV-GS140E-S, NV-GS150, NV-GS150B, NV-GS150EG-S, NV-GS150E-S, NV-GS158GK, NV-GS17, NV-GS17EF-S, NV-GS17E-S, NV-GS180, NV-GS180EB-S, NV-GS180EF-S, NV-GS180EG-S, NV-GS180E-S, NV-GS188GK, NV-GS188GK-S, NV-GS19, NV-GS200, NV-GS200B, NV-GS200EG-S, NV-GS200GN, NV-GS200K, NV-GS21, NV-GS21B, NV-GS21E-S, NV-GS22, NV-GS22EG-A, NV-GS22EG-S, NV-GS230, NV-GS230EB-S, NV-GS230EG-S, NV-GS230E-S, NV-GS24, NV-GS250, NV-GS250B, NV-GS250EG-S, NV-GS250E-S, NV-GS258GK, NV-GS26GK, NV-GS26GK-S, NV-GS27, NV-GS27EB-S, NV-GS27EF-S, NV-GS27EG-S, NV-GS27E-S, NV-GS280, NV-GS280EB-S, NV-GS280EG-S, NV-GS28GK, NV-GS29, NV-GS30, NV-GS300, NV-GS300EB-S, NV-GS300EG-S, NV-GS300E-S, NV-GS308GK, NV-GS308GK-S, NV-GS30B, NV-GS320, NV-GS320EB-S, NV-GS320EG-S, NV-GS320E-S, NV-GS328GK, NV-GS33, NV-GS330, NV-GS33EG-S, NV-GS35, NV-GS35E-S, NV-GS36, NV-GS37, NV-GS37EB-S, NV-GS37EG-S, NV-GS37E-S, NV-GS38GK, NV-GS39, NV-GS40, NV-GS400, NV-GS400B, NV-GS400EG-S, NV-GS400GN, NV-GS400K, NV-GS408GK, NV-GS40B, NV-GS44, NV-GS50, NV-GS500, NV-GS500EB-S, NV-GS500EG-S, NV-GS500E-S, NV-GS508GK, NV-GS508GK-S, NV-GS50A, NV-GS50A-S, NV-GS50AW, NV-GS50B, NV-GS50K, NV-GS50V, NV-GS55, NV-GS55B, NV-GS55EG-S, NV-GS55GN-S, NV-GS55K, NV-GS58GK, NV-GS58GK-S, NV-GS59, NV-GS60, NV-GS60EB-S, NV-GS60EG-S, NV-GS65, NV-GS70, NV-GS70A, NV-GS70A-S, NV-GS70B, NV-GS70K, NV-GS75, NV-GS75B, NV-GS75EG-S, NV-GS78GK, NV-GS80, NV-GS80EB-S, NV-GS80EG-S, NV-GS80E-S, NV-GS83, NV-GS85, NV-GS90, NV-MX500A, PV-GS12, PV-GS120, PV-GS14, PV-GS15, PV-GS150, PV-GS180, PV-GS19, PV-GS200, PV-GS250, PV-GS29, PV-GS300, PV-GS31, PV-GS320, PV-GS33, PV-GS34, PV-GS35, PV-GS36, PV-GS39, PV-GS400, PV-GS50, PV-GS500, PV-GS50K, PV-GS50S, PV-GS55, PV-GS59, PV-GS65, PV-GS70, PV-GS75, PV-GS80, PV-GS83, PV-GS85, PV-GS9, SDR-H18, SDR-H20, SDR-H200, SDR-H20EB-S, SDR-H20EG-S, SDR-H20E-S, SDR-H250, SDR-H250EB-S, SDR-H250EG-S, SDR-H250E-S, SDR-H280, SDR-H288GK, VDR-D100, VDR-D100EB-S, VDR-D150, VDR-D150EB-S, VDR-D150EF-S, VDR-D150EG-S, VDR-D150E-S, VDR-D158GK, VDR-D160, VDR-D160EB-S, VDR-D160EG-S, VDR-D160E-S, VDR-D200, VDR-D210, VDR-D220, VDR-D220EB-S, VDR-D220EG-S, VDR-D220E-S, VDR-D230, VDR-D250, VDR-D250EB-S, VDR-D250EG-S, VDR-D250E-S, VDR-D258GK, VDR-D300, VDR-D300EB-S, VDR-D300EG-S, VDR-D300E-S, VDR-D308GK, VDR-D310, VDR-D310EB-S, VDR-D310EG-S, VDR-D310E-S, VDR-D400, VDR-M30, VDR-M30 DVD, VDR-M30K, VDR-M50, VDR-M50 DVD, VDR-M50B, VDR-M50EG-S, VDR-M50PP, VDR-M53, VDR-M54, VDR-M55, VDR-M55E-S, VDR-M70, VDR-M70 DVD, VDR-M70B, VDR-M70EG-S, VDR-M70K, VDR-M70PP, VDR-M75, VDR-M75E-S, VDR-M95</p>
---------	---------------	------	---------	----------	---------	--

VJV0002

8717825944021

6V

2000mAh

BN-V12U

JVC

NV-S1A, NV-S2, NV-S20, NV-S250, NV-S4, NV-S5, NV-S500, NV-S500EN, NV-S5A, NV-S5B, NV-S5E, NV-S5EC, NV-S6, NV-S600, NV-S600EN, NV-S6A, NV-S6B, NV-S6E, NV-S7, NV-S700, NV-S750, NV-S78, NV-S8, NV-S800, NV-S8A, NV-VJ57, NV-VJ66, NV-VJ77, NV-VJ78, NV-VJ98, VZ-LDS15, PV-A206, PV-A207, PV-A286, PV-A306, PV-A307, M890, GR-AW1, GR-AW1U, GR-AXM Series, GR-AXM100, GR-AXM100U, GR-AXM1010U, GR-AXM10U, GR-AXM11, GR-AXM151US, GR-AXM17US, GR-AXM18, GR-AXM1U, GR-AXM205, GR-AXM20U, GR-AXM210, GR-AXM210U, GR-AXM217, GR-AXM22, GR-AXM220, GR-AXM220U, GR-AXM225, GR-AXM225U, GR-AXM23, GR-AXM230, GR-AXM230U, GR-AXM231U, GR-AXM237, GR-AXM241U, GR-AXM250U, GR-AXM25U, GR-AXM270, GR-AXM270U, GR-AXM28, GR-AXM2U, GR-AXM30, GR-AXM300, GR-AXM300U, GR-AXM30U, GR-AXM310, GR-AXM310U, GR-AXM317, GR-AXM33, GR-AXM341U, GR-AXM368, GR-AXM38, GR-AXM4, GR-AXM405, GR-AXM40U, GR-AXM43, GR-AXM4U, GR-AXM500, GR-AXM50U, GR-AXM510, GR-AXM510U, GR-AXM511, GR-AXM511U, GR-AXM53, GR-AXM568, GR-AXM650, GR-AXM650U, GR-AXM66, GR-AXM670, GR-AXM670U, GR-AXM700, GR-AXM700U, GR-AXM70U, GR-AXM710, GR-AXM710U, GR-AXM717, GR-AXM740U, GR-AXM745U, GR-AXM750, GR-AXM750U, GR-AXM750US, GR-AXM755US, GR-AXM768, GR-AXM77, GR-AXM800, GR-AXM800U, GR-AXM80U, GR-AXM870, GR-AXM88, GR-AXM88UM, GR-AXM900, GR-AXM900U, GR-AXM910, GR-AXM910U, GR-AXM917, GR-AXM99, GR-AX Series, GR-AX10, GR-AX100, GR-AX1010U, GR-AX1027, GR-AX1027P, GR-AX10U, GR-AX11, GR-AX110, GR-AX15, GR-AX150, GR-AX155, GR-AX16, GR-AX17, GR-AX17U, GR-AX2, GR-AX200, GR-AX200U, GR-AX201, GR-AX201U, GR-AX202U, GR-AX21, GR-AX210, GR-AX210U, GR-AX217, GR-AX220U, GR-AX227, GR-AX230, GR-AX230U, GR-AX237, GR-AX247, GR-AX25, GR-AX250, GR-AX255, GR-AX25U, GR-AX26U, GR-AX280, GR-AX2U, GR-AX30, GR-AX300U, GR-AX301, GR-AX30U, GR-AX31, GR-AX310, GR-AX310U, GR-AX317, GR-AX33, GR-AX33U, GR-AX34U, GR-AX35, GR-AX350U, GR-AX358, GR-AX35U, GR-AX37, GR-AX37U, GR-AX380, GR-AX400, GR-AX400U, GR-AX401, GR-AX401U, GR-AX404, GR-AX404U, GR-AX410, GR-AX410U, GR-AX417, GR-AX420U, GR-AX430, GR-AX430U, GR-AX437, GR-AX458, GR-AX46U, GR-AX47, GR-AX47U, GR-AX480, GR-AX5, GR-AX50, GR-AX500, GR-AX500U, GR-AX501, GR-AX50U, GR-AX510U, GR-AX527, GR-AX528, GR-AX55, GR-AX550, GR-AX558, GR-AX55U, GR-AX5EG, GR-AX5U, GR-AX60, GR-AX606, GR-AX606U, GR-AX610U, GR-AX627, GR-AX640, GR-AX640U, GR-AX650, GR-AX650U, GR-AX655U, GR-AX657, GR-AX680, GR-AX7, GR-AX70, GR-AX700U, GR-AX70U, GR-AX710U, GR-AX717, GR-AX720, GR-AX720U, GR-AX727, GR-AX730, GR-AX730U, GR-AX74U, GR-AX75, GR-AX750U, GR-AX75U, GR-AX760, GR-AX760U, GR-AX761U, GR-AX767, GR-AX76U, GR-AX77, GR-AX777, GR-AX77U, GR-AX780, GR-AX7EG, GR-AX7U, GR-AX80, GR-AX800, GR-AX800U, GR-AX808, GR-AX808U, GR-AX810U, GR-AX817, GR-AX820U, GR-AX820US, GR-AX827, GR-AX830, GR-AX830U, GR-AX837, GR-AX840, GR-AX840U, GR-AX841, GR-AX841U, GR-AX847, GR-AX84U, GR-AX850, GR-AX857, GR-AX880, GR-AX880U, GR-AX890, GR-AX890U, GR-AX890US, GR-AX90, GR-AX900U, GR-AX90U, GR-AX910, GR-AX910U, GR-AX911U, GR-AX920, GR-AX920U, GR-AX930, GR-AX930U, GR-AX937, GR-AX94, GR-AX940, GR-AX940U, GR-AX947, GR-AX94U, GR-AX95, GR-AX957, GR-AX958, GR-AX96U, GR-AX97, GR-AX970U, GR-AX97U, GR-AX999, GR-AX9U, GR-DVA1, GR-DVA1U, GR-DVF1, GR-DVF10, GR-DVF10U, GR-DVF20, GR-DVF20U, GR-DVF25, GR-DVF3, GR-DVF7, GR-DVM20, GR-DV10, GR-EX1, GR-EX7, GR-EZ1U, GR-FXM Series, GR-FXM105, GR-FXM15, GR-FXM16, GR-FXM161, GR-FXM25, GR-FXM333, GR-FXM35, GR-FXM373, GR-FXM373, GR-FXM383, GR-FXM405, GR-FXM40A, GR-FXM405, GR-FXM40E, GR-FXM41, GR-FXM41E, GR-FXM42E, GR-FXM45, GR-FXM55, GR-FXM555, GR-FXM605, GR-FXM65, GR-FXM75, GR-FX Series, GR-FX10, GR-FX101, GR-FX11, GR-FX12, GR-FX14, GR-FX16, GR-FX17, GR-FX17E, GR-FX18E, GR-FX23, GR-FX30, GR-FX305, GR-FX33, GR-FX40, GR-FX401, GR-FX405, GR-FX43, GR-FX50, GR-FX505, GR-FX53, GR-FX60, GR-FX601, GR-HF705U, GR-HF805U, GR-LT10, GR-LT5, GR-LT7, GR-LT90, GR-LT91, GR-M3, GR-M51, GR-M7U, GR-MV1, GR-1U, GR-323U, GR-AS-X760U, GR-S27, GR-SV1U, GR-SV3, GR-SV33, GR-SV3U, GR-SV7, GR-SV7U, GR-SXM Series, GR-SXM161, GR-SXM200, GR-SXM235U, GR-SXM240U, GR-SXM245U, GR-SXM247, GR-SXM25, GR-SXM250US, GR-SXM255, GR-SXM256, GR-SXM26, GR-SXM260, GR-SXM260A, GR-SXM260U, GR-SXM260US, GR-SXM265, GR-SXM26EA, GR-SXM277, GR-SXM278, GR-SXM279, GR-SXM29, GR-SXM30, GR-SXM300, GR-SXM320, GR-SXM320U, GR-SXM321, GR-SXM330, GR-SXM330U, GR-SXM335U, GR-SXM337, GR-SXM340U, GR-SXM347, GR-SXM37US, GR-SXM45, GR-SXM46, GR-SXM460, GR-SXM460A, GR-SXM46EA, GR-SXM47, GR-SXM48, GR-SXM50, GR-SXM50E, GR-SXM515U, GR-SXM520U, GR-SXM525U, GR-SXM527U, GR-SXM530, GR-SXM535U, GR-SXM540U, GR-SXM57, GR-SXM58, GR-SXM600, GR-SXM607, GR-SXM61, GR-SXM61, GR-SXM71, GR-SXM72, GR-SXM720, GR-SXM720U, GR-SXM730U, GR-SXM735U, GR-SXM737, GR-SXM740U, GR-SXM745, GR-SXM747, GR-SXM75, GR-SXM750U, GR-SXM750US, GR-SXM755US, GR-SXM760, GR-SXM81, GR-SXM82, GR-SXM91, GR-SXM915, GR-SXM915U, GR-SXM92, GR-SXM920, GR-SXM920U, GR-SXM930, GR-SXM930U, GR-SXM937, GR-SXM947, GR-SXM960U, GR-SX160, GR-SX19, GR-SX20, GR-SX202, GR-SX21, GR-SX210, GR-SX210A, GR-SX21EA, GR-SX22, GR-SX24, GR-SX26, GR-SX260, GR-SX26E, GR-SX41, GR-SX51, GR-SX52, GR-SX850, GR-SX850U, GR-SX851, GR-SX851U, GR-SX867, GR-SX870, GR-SX877, GR-SX90, GR-SX907, GR-SX950, GR-SX950U, GR-SX960, GR-SZ1, GR-SZ3, GR-SZ7, GR-SZ9, GR-SZ9U, XM-D1BK, M890, NV-G1, NV-G101, NV-G101A, NV-G120, NV-G2, NV-G200, NV-G202, NV-G202A, NV-G220, NV-G3, NV-G303, NV-G3A, NV-M810, NV-M810PX, NV-MS70, NV-MS95, NV-MS950, NV-MS95A, NV-3CCD1, NV-61, NV-63, NV-RJ16, NV-RJ17, NV-RJ26, NV-RJ27, NV-RJ36, NV-RJ46, NV-RJ47, NV-RJ56, NV-RJ67, NV-S1, NV-S1A, NV-S2, NV-S20, NV-S250, NV-S4, NV-S5, NV-S500, NV-S500EN, NV-S5A, NV-S5B, NV-S5E, NV-S5EC, NV-S6, NV-S600, NV-S600EN, NV-S6A, NV-S6B, NV-S6E, NV-S7, NV-S700, NV-S750, NV-S78, NV-S8, NV-S800, NV-S8A, NV-VJ57, NV-VJ66, NV-VJ77, NV-VJ78, NV-VJ98, VZ-LDS15, PV-A206, PV-A207, PV-A286, PV-A306, PV-A307, PV-D1000, PV-D326, PV-D406, PV-D407, PV-D506, PV-D507, PV-D607, PV-D705, PV-IQ203, PV-IQ205, PV-IQ244D, PV-IQ303, PV-IQ305, PV-IQ306, PV-IQ325, PV-IQ403, PV-IQ404, PV-IQ404A, PV-IQ405, PV-IQ503, PV-IQ504, PV-IQ505, PV-IQ525, PV-L352, PV-L353, PV-L354, PV-L552, PV-L557, PV-L606, PV-L657, PV-L757, PV-L857, PV-22, PV-31, PV-32, PV-332, PV-333, PV-362, PV-40, PV-41, PV-42, PV-43, PV-50, PV-53, PV-5372, PV-559, PV-5630, PV-S332, PV-S372, PV-S43, PV-S53, PV-S62, PV-S63, PV-S630, PV-S64, PV-S72, PV-S770A, PV-10, PV-10B, PV-10PX, PV-14, PV-17, PV-18, PV-19, PV-20, PV-21, SC-A20, SC-A23, SC-A25, SC-H985, SC-H996, SC-K60, SC-K70, SC-K75, SC-K80, SC-L100, SC-L150, SC-M3, SC-X800, SC-X803, SC-X804, SC-X854, SC-X904, SC-X915, SC-X953, SL-C90, SV-E27, SV-H30, SV-H33, SV-H815, VC-E27N, VC-E405P, VC-E805P, VC-E806P, VC-E807, VC-H815, VP-A12, VP-A17, VP-

VJV0003	8717825940474	7.2V	750mAh	BN-V306	JVC	GR-DVM407, GR-DVM76, GR-DVM76U, GR-DVM79, GR-DVM96, GR-DVM96U, GR-DVX34K, GR-DVX35K, GR-DVX400, GR-DVX400EG, GR-DVX407, GR-DVX407EG, GR-DVX408, GR-DVX505K, GR-DVX507, GR-DVX507EG, GR-DVX509, GR-DVX600K, GR-DVX6K, GR-DVX707, GR-DVX707EG, GR-DVX707K, GR-DVX709
VJV0004	8717825940528	7.2V	900mAh	BN-V507	JVC	GR-DVM50, GR-DVM50U, GR-DVM55, GR-DVM55U, GR-DVM70, GR-DVM70U, GR-DVM75, GR-DVM75U, GR-DVM80, GR-DVM80U, GR-DVM90, GR-DVM90U, GR-DVX10, GR-DVX10EG, GR-DVX33K, GR-DVX33K-X, GR-DVX4, GR-DVX40, GR-DVX40A, GR-DVX44, GR-DVX44EG, GR-DVX48, GR-DVX49, GR-DVX5K, GR-DVX7, GR-DVX70, GR-DVX77, GR-DVX78, GR-DVX8, GR-DVX80, GR-DVX88, GR-DVX88EG, GR-DVX9, GR-DVX90, GR-DVX9EG, M50, M70
VJV0005	8717825940450	7.4V	700mAh	BN-V107	JVC	GR-DVP1, GR-DVP1EG, GR-DVP1T, GR-DVP3, GR-DVP3EG, GR-DVP3ST, GR-DVP3U, GR-DVP5, GR-DVP5EG, GR-DVP7, GR-DVP7A, GR-DVP7A-BK, GR-DVP7A-SL, GR-DVP7ED, GR-DVP7EG, GR-DVP7EK, GR-DVP7SH, GR-DVP7U, GR-DVP7USI, GR-DVP8, GR-DVP8E, GR-DVP9, GR-DVP9E, GR-DVP9U, GR-DVP9US, GR-DVX307, GR-DX100, GR-DX100E, GR-DX100EK, GR-DX103K, GR-DX106, GR-DX107, GR-DX115, GR-DX117, GR-DX25, GR-DX25E, GR-DX25EK, GR-DX27, GR-DX27E, GR-DX28, GR-DX300, GR-DX300E, GR-DX300K, GR-DX300U, GR-DX300US, GR-DX307, GR-DX307E, GR-DX307US, GR-DX317, GR-DX35, GR-DX35E, GR-DX35K, GR-DX37, GR-DX45, GR-DX48, GR-DX48E, GR-DX55, GR-DX55E, GR-DX57, GR-DX57E, GR-DX67, GR-DX73K, GR-DX75, GR-DX75E, GR-DX75US, GR-DX76, GR-DX77, GR-DX77US, GR-DX78, GR-DX85, GR-DX95, GR-DX95E, GR-DX95EK, GR-DX95K, GR-DX95U, GR-DX95US, GR-DX97, GR-DX97E, GR-DX97US
VJV0006	8717825940610	7.2V	800mAh	BN-VM200	JVC	GZ-MC100, GZ-MC100EK, GZ-MC100EX, GZ-MC100U, GZ-MC100US, GZ-MC200, GZ-MC200E, GZ-MC200EX, GZ-MC200U, GZ-MC200US, GZ-MC500, GZ-MC500EK, GZ-MC500EX, GZ-MC500U, GZ-MC500US
VJV0008	8717825940467	7.4V	1600mAh	BN-V114	JVC	GR-DVP1, GR-DVP1EG, GR-DVP1T, GR-DVP3, GR-DVP3EG, GR-DVP3ST, GR-DVP3U, GR-DVP5, GR-DVP5EG, GR-DVP7, GR-DVP7A, GR-DVP7A-BK, GR-DVP7A-SL, GR-DVP7ED, GR-DVP7EG, GR-DVP7EK, GR-DVP7SH, GR-DVP7U, GR-DVP7USI, GR-DVP8, GR-DVP8E, GR-DVP9, GR-DVP9E, GR-DVP9U, GR-DVP9US, GR-DVX307, GR-DX100, GR-DX100E, GR-DX100EK, GR-DX103K, GR-DX106, GR-DX107, GR-DX115, GR-DX117, GR-DX25, GR-DX25E, GR-DX25EK, GR-DX27, GR-DX27E, GR-DX28, GR-DX300, GR-DX300E, GR-DX300K, GR-DX300U, GR-DX300US, GR-DX307, GR-DX307E, GR-DX307US, GR-DX317, GR-DX35, GR-DX35E, GR-DX35K, GR-DX37, GR-DX45, GR-DX48, GR-DX48E, GR-DX55, GR-DX55E, GR-DX57, GR-DX57E, GR-DX67, GR-DX73K, GR-DX75, GR-DX75E, GR-DX75US, GR-DX76, GR-DX77, GR-DX77US, GR-DX78, GR-DX85, GR-DX95, GR-DX95E, GR-DX95EK, GR-DX95K, GR-DX95U, GR-DX95US, GR-DX97, GR-DX97E, GR-DX97US

VJV0009	8717825940498	7.2V	1200mAh	BN-V408	JVC	CU-VH1, CU-VH1US, GR-D20, GR-D200, GR-D200, GR-D2000, GR-D200U, GR-D200US, GR-D201, GR-D201US, GR-D20E, GR-D20EG, GR-D21, GR-D21EK, GR-D22, GR-D220, GR-D225, GR-D225EK, GR-D228, GR-D22US, GR-D23, GR-D230, GR-D230EK, GR-D230US, GR-D231, GR-D238, GR-D24, GR-D27, GR-D30, GR-D30E, GR-D30U, GR-D30US, GR-D31, GR-D31EK, GR-D31US, GR-D33, GR-D33EK, GR-D33US, GR-D34, GR-D40, GR-D43, GR-D43EK, GR-D47, GR-D50, GR-D500, GR-D50E, GR-D50K, GR-D51, GR-D53, GR-D54, GR-D60, GR-D60EK, GR-D61, GR-D63, GR-D63EK, GR-D65, GR-D70, GR-D70E, GR-D70EK, GR-D70K, GR-D70U, GR-D70US, GR-D71US, GR-D72, GR-D72US, GR-D73, GR-D73US, GR-D74, GR-D74US, GR-D90, GR-D90K, GR-D90U, GR-D90US, GR-D91, GR-D91US, GR-D92, GR-D93, GR-D93US, GR-D94, GR-DVA10, GR-DVA101, GR-DVA11K, GR-DVA20K, GR-DVA22K, GR-DVA23K, GR-DVA30K, GR-DVA33K, GR-DVF10, GR-DVF11K, GR-DVF202K, GR-DVF20K, GR-DVF303K, GR-DVF305K, GR-DVF505U, GR-DVL100, GR-DVL100EG, GR-DVL100EK, GR-DVL100U, GR-DVL1020, GR-DVL105, GR-DVL105U, GR-DVL107, GR-DVL107EG, GR-DVL107EK, GR-DVL107U, GR-DVL108, GR-DVL108EK, GR-DVL109, GR-DVL1170, GR-DVL120, GR-DVL120U, GR-DVL140, GR-DVL145, GR-DVL145EG, GR-DVL145EK, GR-DVL150, GR-DVL150EG, GR-DVL150EK, GR-DVL155, GR-DVL155EG, GR-DVL157, GR-DVL157EG, GR-DVL157EK, GR-DVL160, GR-DVL160EG, GR-DVL160EK, GR-DVL166, GR-DVL167, GR-DVL167EG, GR-DVL167EK, GR-DVL1800, GR-DVL1800EK, GR-DVL200, GR-DVL200U, GR-DVL205, GR-DVL207, GR-DVL210, GR-DVL210U, GR-DVL220, GR-DVL220U, GR-DVL257, GR-DVL257EK, GR-DVL300, GR-DVL3000U, GR-DVL300EG, GR-DVL300EK, GR-DVL300U, GR-DVL305, GR-DVL305U, GR-DVL307, GR-DVL307U, GR-DVL308, GR-DVL308EK, GR-DVL309, GR-DVL309EK, GR-DVL310, GR-DVL310U, GR-DVL313, GR-DVL315, GR-DVL315U, GR-DVL317, GR-DVL317U, GR-DVL320, GR-DVL320U, GR-DVL322, GR-DVL323, GR-DVL326, GR-DVL355, GR-DVL355EK, GR-DVL357, GR-DVL357EK, GR-DVL365, GR-DVL365EG, GR-DVL365EK, GR-DVL367, GR-DVL367EG, GR-DVL367EK, GR-DVL400, GR-DVL400U, GR-DVL410, GR-DVL420, GR-DVL450, GR-DVL500, GR-DVL500U, GR-DVL505, GR-DVL505U, GR-DVL507, GR-DVL507U, GR-DVL510, GR-DVL510U, GR-DVL512, GR-DVL512U, GR-DVL515, GR-DVL515U, GR-DVL517, GR-DVL517U, GR-DVL520, GR-DVL520U, GR-DVL522, GR-DVL522U, GR-DVL525, GR-DVL555, GR-DVL555EK, GR-DVL557, GR-DVL557EK, GR-DVL567, GR-DVL600, GR-DVL600U, GR-DVL607, GR-DVL610, GR-DVL707, GR-DVL707U, GR-DVL710, GR-DVL715, GR-DVL720, GR-DVL720U, GR-DVL722, GR-DVL725, GR-DVL725U, GR-DVL728, GR-DVL765, GR-DVL767, GR-DVL767EG, GR-DVL767EK, GR-DVL800, GR-DVL800U, GR-DVL805, GR-DVL805U, GR-DVL810, GR-DVL815, GR-DVL815U, GR-DVL817, GR-DVL817U, GR-DVL820, GR-DVL820U, GR-DVL822U, GR-DVL828, GR-DVL865, GR-DVL867, GR-DVL867EG, GR-DVL900, GR-DVL910, GR-DVL915, GR-DVL915U, GR-DVL920, GR-DVL920U, GR-DVL925, GR-DVL970, GR-DV1800, GR-DV1800EG, GR-DV1800EK, GR-DV200, GR-DV2000, GR-DV2000EK, GR-DV2000U, GR-DV300, GR-DV3000, GR-DV3000U, GR-DV3500, GR-DV400, GR-DV4000, GR-DV4000EK, GR-DV4000US, GR-DV500, GR-DV5000, GR-DV500E, GR-DV500K, GR-DV500U, GR-DV500US, GR-DV550K, GR-DV600, GR-DV700, GR-DV700EK, GR-DV700K, GR-DV800, GR-DV800U, GR-DV800US, GR-DV801, GR-DV801US, GR-DV900, GR-DV900K, GR-DV900U, GR-DZ7, GR-DZ7EK, GR-DZ7EX, GR-DZ7U, GR-DZ7US, GR-HD1, GR-HD1U, GR-HD1US, GR-33, GR-4000US, GR-Z7, GR-PD1, GR-VF1, GV-DV300, GY-DV300E, GY-DV300U, GY-DV301, GY-DV301E, GY-HD100, GY-HD110E, JY-HD10, JY-HD10US, JY-VS200U
VJV0010	8717825940542	7.2V	1400mAh	BN-V607	JVC	GR-DVF10EK, GR-DVL7, GR-DVL700, GR-DVL9200, GR-DVL93, GR-DVL9300, GR-DVL95, GR-DVL9500, GR-DVL9500U, GR-DVL96, GR-DVL9600, GR-DVL97, GR-DVL9700, GR-DVL98, GR-DVL9800, GR-DVL9800EG, GR-DVL9800EK, GR-DVL9800U, GR-DVM3, GR-DVM5, GR-DVM55, GR-DVM5U, GR-DVM828, GR-DVM9300, GR-DVM9700, GR-DVM9800, GR-DVMS, GR-DVMSU, GR-DV3, GR-DV33, GR-DV3U, GR-DV5, GR-DV5U, GR-DV808, GR-DVY, GV-HT1(Mini video printer), GV-HT1U
VJV0011	8717825940535	7.2V	1900mAh	BN-V514U	JVC	GR-DVM50, GR-DVM50U, GR-DVM55, GR-DVM55U, GR-DVM70, GR-DVM70U, GR-DVM75, GR-DVM75U, GR-DVM80, GR-DVM80U, GR-DVM90, GR-DVM90U, GR-DVX10, GR-DVX10EG, GR-DVX33K, GR-DVX33K-X, GR-DVX4, GR-DVX40, GR-DVX40A, GR-DVX44, GR-DVX44EG, GR-DVX48, GR-DVX49, GR-DVX5K, GR-DVX7, GR-DVX70, GR-DVX77, GR-DVX78, GR-DVX8, GR-DVX80, GR-DVX88, GR-DVX88EG, GR-DVX9, GR-DVX90, GR-DVX9EG, M50, M70

VJV0013	8717825940504	7.2V	2200mAh	BN-V416	JVC	CU-VH1, CU-VH1US, GR-D20, GR-D200, GR-D200, GR-D2000, GR-D200U, GR-D200US, GR-D201, GR-D201US, GR-D20E, GR-D20EG, GR-D21, GR-D21EK, GR-D22, GR-D220, GR-D225, GR-D225EK, GR-D228, GR-D22US, GR-D23, GR-D230, GR-D230EK, GR-D230US, GR-D231, GR-D238, GR-D24, GR-D27, GR-D30, GR-D30E, GR-D30U, GR-D30US, GR-D31, GR-D31EK, GR-D31US, GR-D33, GR-D33EK, GR-D33US, GR-D34, GR-D40, GR-D43, GR-D43EK, GR-D47, GR-D50, GR-D50U, GR-D50E, GR-D50K, GR-D51, GR-D53, GR-D54, GR-D60, GR-D60EK, GR-D61, GR-D63, GR-D63EK, GR-D65, GR-D70, GR-D70E, GR-D70EK, GR-D70K, GR-D70U, GR-D70US, GR-D71US, GR-D72, GR-D72US, GR-D73, GR-D73US, GR-D74, GR-D74US, GR-D90, GR-D90K, GR-D90U, GR-D90US, GR-D91, GR-D91US, GR-D92, GR-D93, GR-D93US, GR-D94, GR-DVA10, GR-DVA101, GR-DVA11K, GR-DVA20K, GR-DVA22K, GR-DVA23K, GR-DVA30K, GR-DVA33K, GR-DVF10, GR-DVF11K, GR-DVF202K, GR-DVF20K, GR-DVF303K, GR-DVF305K, GR-DVF505U, GR-DVL100, GR-DVL100EG, GR-DVL100EK, GR-DVL100U, GR-DVL1020, GR-DVL105, GR-DVL105U, GR-DVL107, GR-DVL107EG, GR-DVL107EK, GR-DVL107U, GR-DVL108, GR-DVL108EK, GR-DVL109, GR-DVL1170, GR-DVL120, GR-DVL120U, GR-DVL140, GR-DVL145, GR-DVL145EG, GR-DVL145EK, GR-DVL150, GR-DVL150EG, GR-DVL150EK, GR-DVL155, GR-DVL155EG, GR-DVL157, GR-DVL157EG, GR-DVL157EK, GR-DVL160, GR-DVL160EG, GR-DVL160EK, GR-DVL166, GR-DVL167, GR-DVL167EG, GR-DVL167EK, GR-DVL1800, GR-DVL1800EK, GR-DVL200, GR-DVL200U, GR-DVL205, GR-DVL207, GR-DVL210, GR-DVL210U, GR-DVL220, GR-DVL220U, GR-DVL257, GR-DVL257EK, GR-DVL300, GR-DVL3000U, GR-DVL300EG, GR-DVL300EK, GR-DVL300U, GR-DVL305, GR-DVL305U, GR-DVL307, GR-DVL307U, GR-DVL308, GR-DVL308EK, GR-DVL309, GR-DVL309EK, GR-DVL310, GR-DVL310U, GR-DVL313, GR-DVL315, GR-DVL315U, GR-DVL317, GR-DVL317U, GR-DVL320, GR-DVL320U, GR-DVL322, GR-DVL323, GR-DVL326, GR-DVL355, GR-DVL355EK, GR-DVL357, GR-DVL357EK, GR-DVL365, GR-DVL365EG, GR-DVL365EK, GR-DVL367, GR-DVL367EG, GR-DVL367EK, GR-DVL400, GR-DVL400U, GR-DVL410, GR-DVL420, GR-DVL420, GR-DVL450, GR-DVL500, GR-DVL500U, GR-DVL505, GR-DVL505U, GR-DVL507, GR-DVL507U, GR-DVL510, GR-DVL510U, GR-DVL512, GR-DVL512U, GR-DVL515, GR-DVL515U, GR-DVL517, GR-DVL517U, GR-DVL520, GR-DVL520U, GR-DVL522, GR-DVL522U, GR-DVL525, GR-DVL555, GR-DVL555EK, GR-DVL557, GR-DVL557EK, GR-DVL567, GR-DVL600, GR-DVL600U, GR-DVL607, GR-DVL610, GR-DVL707, GR-DVL707U, GR-DVL710, GR-DVL715, GR-DVL720, GR-DVL720U, GR-DVL722, GR-DVL725, GR-DVL725U, GR-DVL728, GR-DVL765, GR-DVL767, GR-DVL767EG, GR-DVL767EK, GR-DVL800, GR-DVL800U, GR-DVL805, GR-DVL805U, GR-DVL810, GR-DVL815, GR-DVL815U, GR-DVL817, GR-DVL817U, GR-DVL820, GR-DVL820U, GR-DVL822U, GR-DVL828, GR-DVL865, GR-DVL867, GR-DVL867EG, GR-DVL900, GR-DVL910, GR-DVL915, GR-DVL915U, GR-DVL920, GR-DVL920U, GR-DVL925, GR-DVL970, GR-DV1800, GR-DV1800EG, GR-DV1800EK, GR-DV200, GR-DV2000, GR-DV2000EK, GR-DV2000U, GR-DV300, GR-DV3000, GR-DV3000U, GR-DV3500, GR-DV400, GR-DV4000, GR-DV4000EK, GR-DV4000US, GR-DV500, GR-DV5000, GR-DV500E, GR-DV500K, GR-DV500U, GR-DV500US, GR-DV550K, GR-DV600, GR-DV700, GR-DV700EK, GR-DV700K, GR-DV800, GR-DV800U, GR-DV800US, GR-DV801, GR-DV801US, GR-DV900, GR-DV900K, GR-DV900U, GR-DZ7, GR-DZ7EK, GR-DZ7EX, GR-DZ7U, GR-DZ7US, GR-HD1, GR-HD1U, GR-HD1US, GR-33, GR-4000US, GR-Z7, GR-PD1, GR-VF1, GV-DV300, GY-DV300E, GY-DV300U, GY-DV301, GY-DV301E, GY-HD100, GY-HD100U, GY-HD110, GY-HD110E, GY-HD110U, GY-HD111, JY-HD10, JY-HD10US, JY-VS200U
VJV0014	8717825940559	7.2V	2800mAh	BN-V615	JVC	GR-DVF10EK, GR-DVL7, GR-DVL700, GR-DVL9200, GR-DVL93, GR-DVL9300, GR-DVL95, GR-DVL9500, GR-DVL9500U, GR-DVL96, GR-DVL9600, GR-DVL97, GR-DVL9700, GR-DVL98, GR-DVL9800, GR-DVL9800EG, GR-DVL9800KR, GR-DVL9800U, GR-DVM3, GR-DVM5, GR-DVM55, GR-DVM5U, GR-DVM828, GR-DVM9300, GR-DVM9700, GR-DVM9800, GR-DVMS, GR-DVMSU, GR-DV3, GR-DV33, GR-DV3U, GR-DV5, GR-DV5U, GR-DV808, GR-DVY, GV-HT1U

VJV0015	8717825940511	7.2V	3500mAh	BN-V428	JVC	CU-VH1, CU-VH1US, GR-D20, GR-D200, GR-D200, GR-D2000, GR-D200U, GR-D200US, GR-D201, GR-D20E, GR-D20EG, GR-D21, GR-D21EK, GR-D22, GR-D220, GR-D225, GR-D225EK, GR-D228, GR-D22US, GR-D23, GR-D230, GR-D230EK, GR-D230US, GR-D231, GR-D238, GR-D27, GR-D30, GR-D30E, GR-D30U, GR-D30US, GR-D31, GR-D31EK, GR-D31US, GR-D33, GR-D33EK, GR-D33US, GR-D34, GR-D40, GR-D43, GR-D43EK, GR-D47, GR-D50, GR-D500, GR-D50E, GR-D50K, GR-D51, GR-D53, GR-D54, GR-D60, GR-D60EK, GR-D61, GR-D63, GR-D63EK, GR-D65, GR-D70, GR-D70EK, GR-D70K, GR-D70U, GR-D70US, GR-D72, GR-D72US, GR-D73, GR-D73US, GR-D74, GR-D90, GR-D90K, GR-D90U, GR-D90US, GR-D91, GR-D91US, GR-D92, GR-D93, GR-D93US, GR-D94, GR-DVA10, GR-DVA101, GR-DVA11K, GR-DVA20K, GR-DVA22K, GR-DVA23K, GR-DVA30K, GR-DVA33K, GR-DVF10, GR-DVF11K, GR-DVF202K, GR-DVF20K, GR-DVF303K, GR-DVF305K, GR-DVF505U, GR-DVL100, GR-DVL100EG, GR-DVL100EK, GR-DVL100U, GR-DVL1020, GR-DVL1020A, GR-DVL105, GR-DVL105U, GR-DVL107, GR-DVL107EG, GR-DVL107EK, GR-DVL107U, GR-DVL108, GR-DVL108EK, GR-DVL109, GR-DVL1170, GR-DVL120, GR-DVL120A, GR-DVL120U, GR-DVL140, GR-DVL145, GR-DVL145EG, GR-DVL145EK, GR-DVL150, GR-DVL150EG, GR-DVL150EK, GR-DVL155, GR-DVL155EK, GR-DVL157, GR-DVL157EG, GR-DVL157EK, GR-DVL160, GR-DVL160EG, GR-DVL160EK, GR-DVL166, GR-DVL167, GR-DVL167EG, GR-DVL167EK, GR-DVL1800, GR-DVL1800EK, GR-DVL200, GR-DVL200U, GR-DVL205, GR-DVL207, GR-DVL210, GR-DVL210U, GR-DVL220, GR-DVL220U, GR-DVL257, GR-DVL257EK, GR-DVL300, GR-DVL3000U, GR-DVL300EG, GR-DVL300EK, GR-DVL300U, GR-DVL305, GR-DVL305U, GR-DVL307, GR-DVL307U, GR-DVL308, GR-DVL308EK, GR-DVL309, GR-DVL309EK, GR-DVL310, GR-DVL310U, GR-DVL313, GR-DVL315, GR-DVL315U, GR-DVL317, GR-DVL317U, GR-DVL320, GR-DVL320A, GR-DVL320U, GR-DVL322, GR-DVL323, GR-DVL326, GR-DVL355, GR-DVL355EK, GR-DVL357, GR-DVL357EK, GR-DVL365, GR-DVL365EG, GR-DVL365EK, GR-DVL367, GR-DVL367EG, GR-DVL367EK, GR-DVL400, GR-DVL400U, GR-DVL410, GR-DVL420, GR-DVL450, GR-DVL500, GR-DVL500U, GR-DVL505, GR-DVL505U, GR-DVL507, GR-DVL507U, GR-DVL510, GR-DVL510U, GR-DVL512, GR-DVL512U, GR-DVL515, GR-DVL515U, GR-DVL517, GR-DVL517U, GR-DVL520, GR-DVL520A, GR-DVL520U, GR-DVL522, GR-DVL522U, GR-DVL525, GR-DVL555, GR-DVL555EK, GR-DVL557, GR-DVL557EK, GR-DVL567, GR-DVL600, GR-DVL600U, GR-DVL607, GR-DVL610, GR-DVL707, GR-DVL707U, GR-DVL710, GR-DVL715, GR-DVL720, GR-DVL720U, GR-DVL722, GR-DVL725, GR-DVL725U, GR-DVL728, GR-DVL765, GR-DVL767, GR-DVL767EG, GR-DVL767EK, GR-DVL800, GR-DVL800U, GR-DVL805, GR-DVL805U, GR-DVL810, GR-DVL815, GR-DVL815U, GR-DVL817, GR-DVL817U, GR-DVL820, GR-DVL820A, GR-DVL820U, GR-DVL822, GR-DVL822U, GR-DVL828, GR-DVL865, GR-DVL867, GR-DVL867EG, GR-DVL910, GR-DVL915, GR-DVL915U, GR-DVL920, GR-DVL920U, GR-DVL925, GR-DVL970, GR-DV1800, GR-DV1800EG, GR-DV1800EK, GR-DV200, GR-DV2000, GR-DV2000EK, GR-DV2000U, GR-DV300, GR-DV3000, GR-DV3000U, GR-DV3500, GR-DV400, GR-DV4000, GR-DV4000EK, GR-DV4000U, GR-DV500, GR-DV5000, GR-DV500E, GR-DV500K, GR-DV500U, GR-DV500US, GR-DV550K, GR-DV600, GR-DV700, GR-DV700EK, GR-DV700K, GR-DV800, GR-DV800U, GR-DV800US, GR-DV801, GR-DV801US, GR-DV900, GR-DV900K, GR-DV900U, GR-DZ7, GR-DZ7US, GR-HD1, GR-HD1U, GR-HD1US, GR-33, GR-4000US, GR-Z7, GR-PD1, GR-VF1, GV-DV300, GY-DV300E, GY-DV300U, GY-DV301, GY-DV301E, GY-HD100, GY-HD100U, GY-HD101E, GY-HD110, GY-HD110E, GY-HD110U, GY-HD111, JY-HD10, JY-HD10US, JY-VS200U
VJV0016	8717825940566	7.2V	800mAh	BN-VF707U	JVC	GR-DF420, GR-DF425, GR-DF430, GR-DF430US, GR-DF450, GR-DF450U, GR-DF450US, GR-DF470, GR-DF470US, GR-DF535, GR-DF540, GR-DF540, GR-DF550, GR-DF550U, GR-DF550US, GR-DF565, GR-DF570, GR-DF570US, GR-DF577, GR-DF590, GR-D239, GR-D240, GR-D244US, GR-D245, GR-D246, GR-D247, GR-D250, GR-D250AC, GR-D250KR, GR-D250U, GR-D250US, GR-D253AG, GR-D260, GR-D270, GR-D270AC, GR-D270U, GR-D270US, GR-D271, GR-D271US, GR-D275, GR-D275U, GR-D275US, GR-D29, GR-D290, GR-D290AC, GR-D290AH, GR-D290KR, GR-D290U, GR-D290US, GR-D293, GR-D295, GR-D295US, GR-D320, GR-D320EX, GR-D325, GR-D325E, GR-D328EF, GR-D329AH, GR-D338AH, GR-D340, GR-D340E, GR-D340EK, GR-D340EX, GR-D345, GR-D345E, GR-D350, GR-D350AC, GR-D350AG, GR-D350AH, GR-D350U, GR-D350US, GR-D351, GR-D360, GR-D360E, GR-D360EX, GR-D370, GR-D370, GR-D370AC, GR-D370AH, GR-D370E, GR-D370EX, GR-D370U, GR-D370US, GR-D371US, GR-D375U, GR-D375US, GR-D390, GR-D390EK, GR-D390U, GR-D390US, GR-D393, GR-D395, GR-D395US, GR-D396, GR-D396U, GR-D425, GR-D470, GR-D570KR, GR-D640, GR-D640E, GR-D640EX, GR-D645, GR-D645E, GR-D650, GR-D650, GR-D650AC, GR-D650AH, GR-D650E, GR-D650EX, GR-X5, GR-X5AC, GR-X5E, GR-X5US, GZ-DF420, GZ-DF470, GZ-D240, GZ-D270, GZ-MG20, GZ-MG20E, GZ-MG20U, GZ-MG20US, GZ-MG21, GZ-MG21AC, GZ-MG21E, GZ-MG21EK, GZ-MG21EX, GZ-MG21U, GZ-MG21US, GZ-MG24E, GZ-MG26, GZ-MG26E, GZ-MG27, GZ-MG27AH-U, GZ-MG27E, GZ-MG27EX, GZ-MG27U, GZ-MG27US, GZ-MG30, GZ-MG30E, GZ-MG30U, GZ-MG30US, GZ-MG31, GZ-MG31AC, GZ-MG31U, GZ-MG35US, GZ-MG36, GZ-MG36E, GZ-MG37, GZ-MG37AH-U, GZ-MG37E, GZ-MG37EX, GZ-MG37U, GZ-MG37US, GZ-MG40, GZ-MG40-A, GZ-MG40E, GZ-MG40-P, GZ-MG40-S, GZ-MG40U, GZ-MG40US, GZ-MG47, GZ-MG47E, GZ-MG47EX, GZ-MG50, GZ-MG50S, GZ-MG50SAA, GZ-MG50SAC, GZ-MG50SAG, GZ-MG50SAH, GZ-MG50SAS, GZ-MG50SAB, GZ-MG50SE, GZ-MG50SEK, GZ-MG50SEX, GZ-MG50S-S, GZ-MG50SUS, GZ-MG50AH, GZ-MG50E, GZ-MG50U, GZ-MG50US, GZ-MG57, GZ-MG57AC, GZ-MG57AH-U, GZ-MG57E, GZ-MG57EK, GZ-MG57EX, GZ-MG60, GZ-MG60E, GZ-MG67, GZ-MG67AC, GZ-MG67AH-U, GZ-MG67E, GZ-MG67EX, GZ-MG67U, GZ-MG67US, GZ-MG70, GZ-MG70, GZ-MG70E, GZ-MG70US, GZ-MG77, GZ-MG77AA, GZ-MG77AC, GZ-MG77AH-U, GZ-MG77E, GZ-MG77EK, GZ-MG77EX, GZ-MG77U, GZ-MG77US

VJV0017	8717825940573	7.2V	1600mAh	BN-VF712U BN-VF714U	JVC	GR-DF420, GR-DF425, GR-DF430, GR-DF430US, GR-DF450, GR-DF450U, GR-DF450US, GR-DF470, GR-DF470US, GR-DF535, GR-DF540, GR-DF540, GR-DF550, GR-DF550U, GR-DF550US, GR-DF565, GR-DF570, GR-DF570US, GR-DF577, GR-DF590, GR-D239, GR-D240, GR-D244US, GR-D245, GR-D246, GR-D247, GR-D250, GR-D250AC, GR-D250KR, GR-D250U, GR-D250US, GR-D253AG, GR-D260, GR-D270, GR-D270AC, GR-D270U, GR-D270US, GR-D271, GR-D271US, GR-D275, GR-D275U, GR-D275US, GR-D29, GR-D290, GR-D290AC, GR-D290AH, GR-D290KR, GR-D290U, GR-D290US, GR-D293, GR-D295, GR-D295US, GR-D320, GR-D320EX, GR-D325, GR-D325E, GR-D328EF, GR-D329AH, GR-D338AH, GR-D340, GR-D340E, GR-D340EK, GR-D340EX, GR-D345, GR-D345E, GR-D350, GR-D350AC, GR-D350AG, GR-D350AH, GR-D350U, GR-D350US, GR-D351, GR-D360, GR-D360E, GR-D360EX, GR-D370, GR-D370, GR-D370AC, GR-D370AH, GR-D370E, GR-D370EX, GR-D370U, GR-D370US, GR-D371US, GR-D375U, GR-D375US, GR-D390, GR-D390EK, GR-D390U, GR-D390US, GR-D393, GR-D395, GR-D395US, GR-D396, GR-D396US, GR-D425, GR-D470, GR-D570KR, GR-D640, GR-D640E, GR-D640EX, GR-D645, GR-D645E, GR-D650, GR-D650, GR-D650AC, GR-D650AH, GR-D650E, GR-D650EX, GR-X5, GR-X5AC, GR-X5E, GR-X5US, GZ-DF420, GZ-DF470, GZ-D240, GZ-D270, GZ-MG20, GZ-MG20E, GZ-MG20U, GZ-MG20US, GZ-MG21, GZ-MG21AC, GZ-MG21E, GZ-MG21EK, GZ-MG21EX, GZ-MG21U, GZ-MG21US, GZ-MG24E, GZ-MG26, GZ-MG26E, GZ-MG27, GZ-MG27AH-U, GZ-MG27E, GZ-MG27EX, GZ-MG27U, GZ-MG27US, GZ-MG30, GZ-MG30E, GZ-MG30U, GZ-MG30US, GZ-MG31, GZ-MG31AC, GZ-MG31U, GZ-MG35US, GZ-MG36, GZ-MG36E, GZ-MG36EK, GZ-MG37, GZ-MG37AH-U, GZ-MG37E, GZ-MG37EX, GZ-MG37U, GZ-MG37US, GZ-MG40, GZ-MG40-A, GZ-MG40E, GZ-MG40-P, GZ-MG40-S, GZ-MG40U, GZ-MG40US, GZ-MG47, GZ-MG47E, GZ-MG47EX, GZ-MG50, GZ-MG50S, GZ-MG50SAA, GZ-MG50SAC, GZ-MG50SAG, GZ-MG50SAH, GZ-MG50SAS, GZ-MG50SB, GZ-MG50SE, GZ-MG50SE, GZ-MG50SEK, GZ-MG50SEX, GZ-MG50S-S, GZ-MG50SUS, GZ-MG50E, GZ-MG50U, GZ-MG50US, GZ-MG57, GZ-MG57AC, GZ-MG57AH-U, GZ-MG57E, GZ-MG57EK, GZ-MG57EX, GZ-MG60, GZ-MG60E, GZ-MG67, GZ-MG67AC, GZ-MG67AH-U, GZ-MG67E, GZ-MG67EX, GZ-MG67U, GZ-MG67US, GZ-MG70, GZ-MG70E, GZ-MG70US, GZ-MG77, GZ-MG77AA, GZ-MG77AC, GZ-MG77AH-U, GZ-MG77E, GZ-MG77EK, GZ-MG77EX, GZ-MG77U, GZ-MG77US
VJV0018	8717825940580	3.6V	2000mAh	BN-V714	JVC	GR-DVF1, GR-DVJ70, GR-DVJ70E, GR-DV1, GR-DV14, GR-DV1U, GR-DV1W, GR-DV2, GR-DV70E
VJV0019	8717825940597	7.2V	3000mAh	BN-VF733	JVC	GR-DF420, GR-DF425, GR-DF430, GR-DF430US, GR-DF450, GR-DF450U, GR-DF450US, GR-DF470, GR-DF470US, GR-DF535, GR-DF540, GR-DF540, GR-DF550, GR-DF550U, GR-DF550US, GR-DF565, GR-DF570, GR-DF570US, GR-DF577, GR-DF590, GR-D239, GR-D240, GR-D244US, GR-D245, GR-D246, GR-D247, GR-D250, GR-D250AC, GR-D250KR, GR-D250U, GR-D250US, GR-D253AG, GR-D260, GR-D270, GR-D270AC, GR-D270U, GR-D270US, GR-D271, GR-D271US, GR-D275, GR-D275U, GR-D275US, GR-D29, GR-D290, GR-D290, GR-D290AC, GR-D290AH, GR-D290KR, GR-D290U, GR-D290US, GR-D293, GR-D295, GR-D295US, GR-D320, GR-D320EX, GR-D325, GR-D325E, GR-D328EF, GR-D329AH, GR-D338AH, GR-D340, GR-D340E, GR-D340EK, GR-D340EX, GR-D345, GR-D345E, GR-D350, GR-D350AC, GR-D350AG, GR-D350AH, GR-D350U, GR-D350US, GR-D351, GR-D360, GR-D360E, GR-D360EX, GR-D370, GR-D370, GR-D370AC, GR-D370AH, GR-D370E, GR-D370EX, GR-D370U, GR-D370US, GR-D371US, GR-D375U, GR-D375US, GR-D390, GR-D390EK, GR-D390U, GR-D390US, GR-D393, GR-D395, GR-D395US, GR-D396, GR-D396US, GR-D425, GR-D470, GR-D570KR, GR-D640, GR-D640E, GR-D640EX, GR-D645, GR-D645E, GR-D650, GR-D650, GR-D650AC, GR-D650AH, GR-D650E, GR-D650EX, GR-X5, GR-X5AC, GR-X5E, GR-X5US, GZ-DF420, GZ-DF470, GZ-D240, GZ-D270, GZ-MG20, GZ-MG20E, GZ-MG20U, GZ-MG20US, GZ-MG21, GZ-MG21AC, GZ-MG21E, GZ-MG21EK, GZ-MG21EX, GZ-MG21U, GZ-MG21US, GZ-MG24E, GZ-MG26, GZ-MG26E, GZ-MG27, GZ-MG27AH-U, GZ-MG27E, GZ-MG27EX, GZ-MG27U, GZ-MG27US, GZ-MG30, GZ-MG30E, GZ-MG30U, GZ-MG30US, GZ-MG31, GZ-MG31AC, GZ-MG31U, GZ-MG35US, GZ-MG36, GZ-MG36E, GZ-MG36EK, GZ-MG37, GZ-MG37AH-U, GZ-MG37E, GZ-MG37EX, GZ-MG37U, GZ-MG37US, GZ-MG40, GZ-MG40-A, GZ-MG40E, GZ-MG40-P, GZ-MG40-S, GZ-MG40U, GZ-MG40US, GZ-MG47, GZ-MG47E, GZ-MG47EX, GZ-MG50, GZ-MG50S, GZ-MG50SAA, GZ-MG50SAC, GZ-MG50SAG, GZ-MG50SAH, GZ-MG50SAS, GZ-MG50SB, GZ-MG50SE, GZ-MG50SEK, GZ-MG50SEX, GZ-MG50S-S, GZ-MG50SUS, GZ-MG50E, GZ-MG50U, GZ-MG50US, GZ-MG57, GZ-MG57AC, GZ-MG57AH-U, GZ-MG57E, GZ-MG57EK, GZ-MG57EX, GZ-MG60, GZ-MG60E, GZ-MG67, GZ-MG67AC, GZ-MG67AH-U, GZ-MG67E, GZ-MG67EX, GZ-MG67U, GZ-MG67US, GZ-MG70, GZ-MG70E, GZ-MG70US, GZ-MG77, GZ-MG77AA, GZ-MG77AC, GZ-MG77AH-U, GZ-MG77E, GZ-MG77EK, GZ-MG77EX, GZ-MG77U, GZ-MG77US
VJV0020	8717825946636	7.2V	1200mAh	BN-V907	JVC	GR-DVAX, GR-DVAXU, GR-DVX, GR-DVX818, GR-DVXPRO, GR-DVXPROU, GR-DVXU

VJV0024	8717825943086	7.2V	850mAh	BN-VF808U	JVC	GR-DA20, GR-DA20EX, GR-DA30, GR-DA30US, GR-D720EK, GR-D720EX, GR-D721EX, GR-D726EX, GR-D740AC, GR-D750, GR-D750AC, GR-D750U, GR-D751, GR-D760EK, GR-D760EX, GR-D770, GR-D770EX, GR-D790, GR-D793, GR-D796, GR-D796US, GR-D850, GR-D851, GR-D853, GS-TD1BUS, GY-HM100, GY-HM100U, GZ-HD10, GZ-HD10US, GZ-HD230, GZ-HD260, GZ-HD3, GZ-HD30, GZ-HD300, GZ-HD300AEK, GZ-HD300AUS, GZ-HD300BEK, GZ-HD300BUS, GZ-HD300REK, GZ-HD300RUS, GZ-HD30AC, GZ-HD310, GZ-HD320, GZ-HD320BUS, GZ-HD3EK, GZ-HD3EX, GZ-HD3US, GZ-HD40, GZ-HD40AC, GZ-HD40US, GZ-HD5, GZ-HD5EX, GZ-HD5US, GZ-HD6, GZ-HD6EX, GZ-HD6US, GZ-HD7, GZ-HD7EK, GZ-HD7EX, GZ-HM1, GZ-HM110, GZ-HM1S, GZ-HM1SEK, GZ-HM1SEU, GZ-HM1SUS, GZ-HM200, GZ-HM200BAH, GZ-HM200BEK, GZ-HM400, GZ-HM400-B, GZ-HM400EU, GZ-HM400-S, GZ-HM400U, GZ-HM400US, GZ-HM80, GZ-HM90, GZ-MG120, GZ-MG130, GZ-MG130EK, GZ-MG130EX, GZ-MG130US, GZ-MG131, GZ-MG132, GZ-MG133, GZ-MG133EX, GZ-MG134, GZ-MG135, GZ-MG135EX, GZ-MG140, GZ-MG142, GZ-MG145, GZ-MG148, GZ-MG150, GZ-MG150EF, GZ-MG150US, GZ-MG155, GZ-MG155EK, GZ-MG155EX, GZ-MG157US, GZ-MG175, GZ-MG175EK, GZ-MG177, GZ-MG210, GZ-MG211, GZ-MG220, GZ-MG250, GZ-MG255, GZ-MG255AC, GZ-MG255EX, GZ-MG255US, GZ-MG260, GZ-MG261, GZ-MG262, GZ-MG275, GZ-MG275EK, GZ-MG275EX, GZ-MG330, GZ-MG330A, GZ-MG330AUS, GZ-MG330H, GZ-MG330HUS, GZ-MG330R, GZ-MG330RUS, GZ-MG335, GZ-MG335H, GZ-MG335HUS, GZ-MG335WUS, GZ-MG340BUS, GZ-MG35, GZ-MG36, GZ-MG360, GZ-MG360B, GZ-MG360BUC, GZ-MG360BUS, GZ-MG365, GZ-MG365B, GZ-MG365BUS, GZ-MG365H, GZ-MG430B, GZ-MG430HUS, GZ-MG435B, GZ-MG435HUS, GZ-MG437B, GZ-MG465B, GZ-MG465BUS, GZ-MG530, GZ-MG555, GZ-MG555US, GZ-MG575, GZ-MG575EK, GZ-MG575EX, GZ-MG610SEU, GZ-MG630, GZ-MG630AEK, GZ-MG630AUS, GZ-MG630REK, GZ-MG630RUS, GZ-MG630SEK, GZ-MG630SUS, GZ-MG645BEK, GZ-MG645BUS, GZ-MG650, GZ-MG670, GZ-MG670BUS, GZ-MG680, GZ-MG680BUS, GZ-MG730, GZ-MG730BUS, GZ-MG740, GZ-MG840, GZ-MG880, GZ-MS100, GZ-MS100RUS, GZ-MS100US, GZ-MS101, GZ-MS120, GZ-MS120AUS, GZ-MS120BUS, GZ-MS120RUS, GZ-MS123, GZ-MS130, GZ-MS130AUS, GZ-MS130BEU, GZ-MS130BUS, GZ-MS90US, GZ-MS95SEU
VJV0025	8717825943093	7.2V	1600mAh	BN-VF815U	JVC	GC-PX100, GR-DA20, GR-DA20EX, GR-DA30, GR-DA30US, GR-D720EK, GR-D720EX, GR-D721EX, GR-D726EX, GR-D740AC, GR-D750, GR-D750AC, GR-D750U, GR-D751, GR-D760EK, GR-D760EX, GR-D770, GR-D770EX, GR-D790, GR-D793, GR-D796, GR-D796US, GR-D850, GR-D851, GR-D853, GS-TD1BUS, GY-HM100, GY-HM100U, GZ-HD10, GZ-HD10US, GZ-HD230, GZ-HD260, GZ-HD3, GZ-HD30, GZ-HD300, GZ-HD300AEK, GZ-HD300AUS, GZ-HD300BEK, GZ-HD300BUS, GZ-HD300REK, GZ-HD300RUS, GZ-HD30AC, GZ-HD310, GZ-HD320, GZ-HD320BUS, GZ-HD3EK, GZ-HD3EX, GZ-HD3US, GZ-HD40, GZ-HD40AC, GZ-HD40US, GZ-HD5, GZ-HD5EX, GZ-HD5US, GZ-HD6, GZ-HD6EX, GZ-HD6US, GZ-HD7, GZ-HD7EK, GZ-HD7EX, GZ-HM1, GZ-HM110, GZ-HM1S, GZ-HM1SEK, GZ-HM1SEU, GZ-HM1SUS, GZ-HM200, GZ-HM200BAH, GZ-HM200BEK, GZ-HM400, GZ-HM400-B, GZ-HM400EU, GZ-HM400-S, GZ-HM400U, GZ-HM400US, GZ-HM80, GZ-HM90, GZ-MG120, GZ-MG130, GZ-MG130EK, GZ-MG130EX, GZ-MG130US, GZ-MG131, GZ-MG132, GZ-MG133, GZ-MG133EX, GZ-MG134, GZ-MG135, GZ-MG135EX, GZ-MG140, GZ-MG142, GZ-MG145, GZ-MG148, GZ-MG150, GZ-MG150EF, GZ-MG150US, GZ-MG155, GZ-MG155EK, GZ-MG155EX, GZ-MG157US, GZ-MG175, GZ-MG175EK, GZ-MG177, GZ-MG210, GZ-MG211, GZ-MG220, GZ-MG250, GZ-MG255, GZ-MG255AC, GZ-MG255EX, GZ-MG255US, GZ-MG260, GZ-MG261, GZ-MG262, GZ-MG275, GZ-MG275EK, GZ-MG275EX, GZ-MG330, GZ-MG330A, GZ-MG330AUS, GZ-MG330H, GZ-MG330HUS, GZ-MG330R, GZ-MG330RUS, GZ-MG335, GZ-MG335H, GZ-MG335HUS, GZ-MG335WUS, GZ-MG340BUS, GZ-MG35, GZ-MG36, GZ-MG360, GZ-MG360B, GZ-MG360BUC, GZ-MG360BUS, GZ-MG365, GZ-MG365B, GZ-MG365BUS, GZ-MG365H, GZ-MG430B, GZ-MG430HUS, GZ-MG435B, GZ-MG435HUS, GZ-MG437B, GZ-MG465B, GZ-MG465BUS, GZ-MG530, GZ-MG555, GZ-MG555US, GZ-MG575, GZ-MG575EK, GZ-MG575EX, GZ-MG610SEU, GZ-MG630, GZ-MG630AEK, GZ-MG630AUS, GZ-MG630REK, GZ-MG630RUS, GZ-MG630SEK, GZ-MG630SUS, GZ-MG645BEK, GZ-MG645BUS, GZ-MG650, GZ-MG670, GZ-MG670BUS, GZ-MG680, GZ-MG680BUS, GZ-MG730, GZ-MG730BUS, GZ-MG740, GZ-MG840, GZ-MG880, GZ-MS100, GZ-MS100RUS, GZ-MS100US, GZ-MS101, GZ-MS120, GZ-MS120AUS, GZ-MS120BUS, GZ-MS120RUS, GZ-MS123, GZ-MS130, GZ-MS130AUS, GZ-MS130BEU, GZ-MS130BUS, GZ-MS90US, GZ-MS95SEU

VJV0026	8717825943109	7.2V	2490mAh	BN-VF823U	JVC	GC-PX100, GR-DA20, GR-DA20EX, GR-DA30, GR-DA30US, GR-D720, GR-D720EK, GR-D720EX, GR-D721EX, GR-D725, GR-D726, GR-D726EX, GR-D728, GR-D740, GR-D740AC, GR-D745, GR-D746, GR-D750, GR-D750AC, GR-D750U, GR-D751, GR-D760, GR-D760EK, GR-D760EX, GR-D770, GR-D770EX, GR-D771, GR-D775, GR-D790, GR-D793, GR-D796, GR-D796US, GR-D815, GR-D818, GR-D825, GR-D850, GR-D851, GR-D853, GR-D860, GR-PD1, GS-TD1 (3D), GS-TD1BUS, GY-HM100, GY-HM100U, GZ-HD10, GZ-HD10US, GZ-HD230, GZ-HD260, GZ-HD3, GZ-HD30, GZ-HD300, GZ-HD300AEK, GZ-HD300AUS, GZ-HD300BEK, GZ-HD300BUS, GZ-HD300REK, GZ-HD300RUS, GZ-HD30AC, GZ-HD310, GZ-HD320, GZ-HD320BUS, GZ-HD3EK, GZ-HD3EX, GZ-HD3US, GZ-HD40, GZ-HD40AC, GZ-HD40US, GZ-HD5, GZ-HD5EX, GZ-HD5US, GZ-HD6, GZ-HD6EX, GZ-HD6US, GZ-HD7, GZ-HD7EK, GZ-HD7EX, GZ-HM1, GZ-HM110, GZ-HM1S, GZ-HM1SEK, GZ-HM1SEU, GZ-HM1SUS, GZ-HM200, GZ-HM200BAH, GZ-HM200BEK, GZ-HM400, GZ-HM400-B, GZ-HM400EU, GZ-HM400-S, GZ-HM400U, GZ-HM400US, GZ-HM80, GZ-HM90, GZ-MG120, GZ-MG130, GZ-MG130EK, GZ-MG130EX, GZ-MG130US, GZ-MG131, GZ-MG132, GZ-MG133, GZ-MG133EX, GZ-MG134, GZ-MG135, GZ-MG135EX, GZ-MG140, GZ-MG142, GZ-MG145, GZ-MG148, GZ-MG150, GZ-MG150EF, GZ-MG150US, GZ-MG155, GZ-MG155EK, GZ-MG155EX, GZ-MG157US, GZ-MG175, GZ-MG175EK, GZ-MG177, GZ-MG210, GZ-MG211, GZ-MG220, GZ-MG250, GZ-MG255, GZ-MG255AC, GZ-MG255EX, GZ-MG255US, GZ-MG260, GZ-MG261, GZ-MG262, GZ-MG275, GZ-MG275EK, GZ-MG275EX, GZ-MG330, GZ-MG330A, GZ-MG330AUS, GZ-MG330H, GZ-MG330HUS, GZ-MG330R, GZ-MG330RUS, GZ-MG331, GZ-MG335, GZ-MG335H, GZ-MG335HUS, GZ-MG335WUS, GZ-MG340BUS, GZ-MG35, GZ-MG36, GZ-MG360, GZ-MG360B, GZ-MG360BUC, GZ-MG360BUS, GZ-MG365, GZ-MG365B, GZ-MG365BUS, GZ-MG365H, GZ-MG430B, GZ-MG430HUS, GZ-MG435, GZ-MG435B, GZ-MG435HUS, GZ-MG437B, GZ-MG465, GZ-MG465B, GZ-MG465BUS, GZ-MG530, GZ-MG555, GZ-MG555US, GZ-MG575, GZ-MG575EK, GZ-MG575EX, GZ-MG610SEU, GZ-MG630, GZ-MG630AEK, GZ-MG630AUS, GZ-MG630REK, GZ-MG630RUS, GZ-MG630SEK, GZ-MG630SUS, GZ-MG645, GZ-MG645BEK, GZ-MG645BUS, GZ-MG650, GZ-MG670, GZ-MG670BUS, GZ-MG680, GZ-MG680BUS, GZ-MG730, GZ-MG730BUS, GZ-MG740, GZ-MG840, GZ-MG880, GZ-MS100, GZ-MS100RUS, GZ-MS100US, GZ-MS101, GZ-MS120, GZ-MS120AUS, GZ-MS120BUS, GZ-MS120RUS, GZ-MS123, GZ-MS130, GZ-MS130AUS, GZ-MS130BEU, GZ-MS130BUS, GZ-MS90, GZ-MS90US, GZ-MS95SE, GZ-MS95SEU
VJV0027	8718226221315	7.2V	800mAh	BN-VF908U	JVC	GZ-X900, GZ-X900EK, GZ-X900EU, GZ-X900U
VJV0028	8718226229748	3.7V	1200mAh	BN-VG212U	JVC	GZ-V500, GZ-V505, GZ-V515, GZ-V570, GZ-VX700, GZ-VX715, GZ-VX815
VJV0030	8718503022741	3.7V	860mAh	BN-VG107 BN-VG108	JVC	GZ-E105, GZ-E105BE, GZ-E15, GZ-E15BEU, GZ-E205, GZ-E205BEU, GZ-E205WEUGZ-E305, GZ-E305, GZ-EX215, GZ-EX215BEU, GZ-EX215WEU, GZ-EX315BEU, GZ-EX515, GZ-GX1, GZ-GX1BEU, GZ-HD300, GZ-HD500, GZ-HD520, GZ-HD620, GZ-HM30, GZ-HM300, GZ-HM330, GZ-HM335, GZ-HM430, GZ-HM435, GZ-HM440, GZ-HM445, GZ-HM455, GZ-HM550, GZ-HM650, GZ-HM655, GZ-HM845, GZ-HM960, GZ-MG750, GZ-MS110, GZ-MS150, GZ-MS210, GZ-MS215, GZ-MS230, GZ-MS250
VJV0031	8718503022758	3.7V	1250mAh	BN-VG114	JVC	GZ-E105, GZ-E105BE, GZ-E15, GZ-E15BEU, GZ-E205, GZ-E205BEU, GZ-E205WEUGZ-E305, GZ-E305, GZ-EX215, GZ-EX215BEU, GZ-EX215WEU, GZ-EX315BEU, GZ-EX515, GZ-GX1, GZ-GX1BEU, GZ-HD300, GZ-HD500, GZ-HD520, GZ-HD620, GZ-HM30, GZ-HM300, GZ-HM330, GZ-HM335, GZ-HM430, GZ-HM435, GZ-HM440, GZ-HM445, GZ-HM455, GZ-HM550, GZ-HM650, GZ-HM655, GZ-HM845, GZ-HM960, GZ-MG750, GZ-MS110, GZ-MS150, GZ-MS210, GZ-MS215, GZ-MS230, GZ-MS250
VJV0032	8718503022765	3.7V	2600mAh	BN-VG121	JVC	GZ-E105, GZ-E105BE, GZ-E15, GZ-E15BEU, GZ-E205, GZ-E205BEU, GZ-E205WEUGZ-E305, GZ-E305, GZ-EX215, GZ-EX215BEU, GZ-EX215WEU, GZ-EX315BEU, GZ-EX515, GZ-GX1, GZ-GX1BEU, GZ-HD300, GZ-HD500, GZ-HD520, GZ-HD620, GZ-HM30, GZ-HM300, GZ-HM330, GZ-HM335, GZ-HM430, GZ-HM435, GZ-HM440, GZ-HM445, GZ-HM455, GZ-HM550, GZ-HM650, GZ-HM655, GZ-HM845, GZ-HM960, GZ-MG750, GZ-MS110, GZ-MS150, GZ-MS210, GZ-MS215, GZ-MS230, GZ-MS250
VJV0033	8718503022772	3.7V	4400mAh	BN-VG138	JVC	GZ-E105, GZ-E105BE, GZ-E15, GZ-E15BEU, GZ-E205, GZ-E205BEU, GZ-E205WEUGZ-E305, GZ-E305, GZ-EX215, GZ-EX215BEU, GZ-EX215WEU, GZ-EX315BEU, GZ-EX515, GZ-GX1, GZ-GX1BEU, GZ-HD300, GZ-HD500, GZ-HD520, GZ-HD620, GZ-HM30, GZ-HM300, GZ-HM330, GZ-HM335, GZ-HM430, GZ-HM435, GZ-HM440, GZ-HM445, GZ-HM455, GZ-HM550, GZ-HM650, GZ-HM655, GZ-HM845, GZ-HM960, GZ-MG750, GZ-MS110, GZ-MS150, GZ-MS210, GZ-MS215, GZ-MS230, GZ-MS250
VJV0034	8718503026886	7.4V	5200mAh	SSL-JVC50	JVC	GY-HM600, GY-HM650, GY-HMQ10, GY-LS300
VJV0035	8718503026893	7.4V	7800mAh	SSL-JVC75 + USB OUTPUT	JVC	GY-HM600, GY-HM650, GY-HMQ10, GY-LS300

VPA0001	8717825940979	7.4V	5400mAh	VW-VBG6	Panasonic	AG-DC15, AG-DV1DC, AG-DVC15, AG-DVC60, AG-DVX100 PRO, AG-HVX200, DZ-MV200A, DZ-MV200E, DZ-MV208E, DZ-MV230A, DZ-MV230E, DZ-MV250, DZ-MV270A, DZ-MV270E, HDC-Z10000, NV-DA1, NV-DA1B, NV-DS11, NV-DS12B, NV-DS15, NV-DS150, NV-DS150B, NV-DS25, NV-DS27, NV-DS28, NV-DS29, NV-DS3, NV-DS30, NV-DS33, NV-DS35, NV-DS37, NV-DS38, NV-DS50, NV-DS55, NV-DS60B, NV-DS65B, NV-DS77, NV-DS77B, NV-DS8, NV-DS88, NV-DS89, NV-DS99, NV-DS990, NV-EX1, NV-EX1B, NV-EX21, NV-EX3, NV-GS1, NV-GS11, NV-GS12, NV-GS14, NV-GS15, NV-GS20, NV-GS3, NV-GS4, NV-GS5, NV-GS9, NV-GX7, NV-MX1, NV-MX1000, NV-MX2, NV-MX2000, NV-MX2500, NV-MX300, NV-MX3000, NV-MX350, NV-MX5, NV-MX500, NV-MX5000, NV-MX7, NV-MX8, NV-MG3, NV-RX22, NV-RX33, NV-RX66, PV-BP8, PV-DBP8, PV-DC102, PV-DC103, PV-DC152, PV-DC202, PV-DC203, PV-DC252, PV-DC352, PV-DC402, PV-DC52, PV-DC53, PV-DC602, PV-DC702, PV-DC73, PV-DC852, PV-DC901, PV-DC952, PV-DC953, PV-DVP8A, PV-DV100, PV-DV100K, PV-DV101, PV-DV102, PV-DV103, PV-DV200, PV-DV200K, PV-DV201, PV-DV202, PV-DV203, PV-DV351, PV-DV400, PV-DV400K, PV-DV401, PV-DV402, PV-DV51, PV-DV52, PV-DV53, PV-DV600, PV-DV600K, PV-DV601, PV-DV602, PV-DV701, PV-DV702, PV-DV710, PV-DV73, PV-DV800, PV-DV800K, PV-DV851, PV-DV852, PV-DV900, PV-DV901, PV-DV951, PV-DV952, PV-DV953, PV-VM202, VDR-M10, VDR-M20, DZ-MV100, DZ-MV100A, DZ-MV100E, DZ-MV200, DZ-MV200A, DZ-MV200E, DZ-MV208, DZ-MV208E, DZ-MV230
VPA0009	8717825945103	7.2V	2500mAh	CGA-D16S	Panasonic	AG-DV1DC, AG-DVC15, AG-DVC30, AG-DVC32, AG-DVC60, AG-DVC60E, AG-DVC62, AG-DVC7, AG-DVC80, AG-DVX100, AG-DVX1000, AG-DVX100A, AG-DVX100AE, AG-DVX100AP, AG-DVX100B, AG-DVX100BE, AG-DVX100BP, AG-DVX102A, AG-DVX102B, AG-EZ50U, AG-HVX200, AG-HVX200P, DZ-MX5000, NV-C1, NV-C2, NV-C3, NV-C5, NV-C7, NV-DA1, NV-DA1B, NV-DA1EG, NV-DA1EN, NV-DA1ENA, NV-DB1, NV-D89, NV-DS11, NV-DS11EN, NV-DS11ENA, NV-DS11ENC, NV-DS12, NV-DS12B, NV-DS12EG, NV-DS15, NV-DS150, NV-DS150B, NV-DS15A, NV-DS15B, NV-DS15EG, NV-DS15EN, NV-DS15ENC, NV-DS200, NV-DS25, NV-DS25A, NV-DS25EG, NV-DS25EN, NV-DS27, NV-DS27B, NV-DS28, NV-DS28A, NV-DS28B, NV-DS29, NV-DS29EG, NV-DS3, NV-DS30, NV-DS30A, NV-DS30EG, NV-DS33, NV-DS33EN, NV-DS35, NV-DS37, NV-DS37B, NV-DS38, NV-DS38A, NV-DS38B, NV-DS38EG, NV-DS50, NV-DS50A, NV-DS55, NV-DS60, NV-DS60A, NV-DS60EG, NV-DS60EG-S, NV-DS65, NV-DS65A, NV-DS65A-S, NV-DS65B, NV-DS65EG, NV-DS68, NV-DS68EG, NV-DS7, NV-DS7/NW, NV-DS77, NV-DS77B, NV-DS77EG, NV-DS77EN, NV-DS77ENA, NV-DS8, NV-DS80K, NV-DS88, NV-DS88A, NV-DS88EG, NV-DS88K, NV-DS89, NV-DS89EG, NV-DS8EG, NV-DS9, NV-DS99, NV-DS990, NV-DS990EG, NV-DS99EN, NV-DS99ENA, NV-EX1, NV-EX1B, NV-EX1EG, NV-EX1EN, NV-EX1ENA, NV-EX21, NV-EX21A, NV-EX21EG, NV-EX3, NV-EX3EG, NV-GS1, NV-GS11, NV-GS15, NV-GS15EB, NV-GS15GC-S, NV-GS1B, NV-GS1EG, NV-GS3, NV-GS33, NV-GS3B, NV-GS3EG, NV-GS4, NV-GS4B, NV-GS4EG, NV-GS5, NV-GS5B, NV-GS5EG, NV-GS5K, NV-GS7K, NV-GX7, NV-GX7EG, NV-GX7K, NV-M20, NV-MX1, NV-MX1000, NV-MX1B, NV-MX2, NV-MX2000, NV-MX2500, NV-MX2B, NV-MX2EG, NV-MX300, NV-MX3000, NV-MX300A, NV-MX300EG, NV-MX300EN, NV-MX340, NV-MX350, NV-MX350A, NV-MX350EG, NV-MX3A, NV-MX3EN, NV-MX5, NV-MX500, NV-MX5000, NV-MX500B, NV-MX500EG, NV-MX5B, NV-MX7, NV-MX7A, NV-MX7B, NV-MX7DEN, NV-MX8, NV-MX8B, NV-MD9000, NV-MG3, NV-RX33EG, NV-RX66EG, AJ-PCS060G(Portable Hard Disk Unit), PV-BP8, PV-DBP8, PV-DBP8A, PV-DC152, PV-DC252, PV-DC352, PV-D401, PV-DVP8-A, PV-DV100, PV-DV100K, PV-DV101, PV-DV102, PV-DV103, PV-DV121, PV-DV151, PV-DV200, PV-DV200K, PV-DV201, PV-DV201-K, PV-DV202, PV-DV203, PV-DV221, PV-DV351, PV-DV400, PV-DV400K, PV-DV401, PV-DV402, PV-DV51, PV-DV52, PV-DV53, PV-DV600, PV-DV600K, PV-DV601, PV-DV601D, PV-DV602, PV-DV700, PV-DV701, PV-DV702, PV-DV702K, PV-DV73, PV-DV800, PV-DV800K, PV-DV801, PV-DV851, PV-DV851D, PV-DV852, PV-DV900, PV-DV901, PV-DV910, PV-DV951, PV-DV952, PV-DV953, PV-GS11, PV-GS12, PV-GS13, PV-GS14, PV-GS15, PV-GS2, PV-GS9, PV-VM202, VDR-M10, VDR-M20, DZ-MV100, DZ-MV100A, DZ-MV100E, DZ-MV200, DZ-MV200A, DZ-MV200E, DZ-MV208, DZ-MV208E, DZ-MV230, DZ-MV230A, DZ-MV230E, DZ-MV238E, DZ-MV250, DZ-MV270, DZ-MV270A, DZ-MV270E

VPA0022	8717825940986	7.2V	3700mAh	CGA-D28S	Panasonic	AG-DV1DC, AG-DVC15, AG-DVC30, AG-DVC32, AG-DVC60, AG-DVC60E, AG-DVC62, AG-DVC7, AG-DVC80, AG-DVX100, AG-DVX1000, AG-DVX100A, AG-DVX100AE, AG-DVX100AP, AG-DVX100B, AG-DVX100BE, AG-DVX100BP, AG-DVX102A, AG-DVX102B, AG-EZ50U, AG-HVX200, AG-HVX200P, DZ-MX5000, NV-C1, NV-C2, NV-C3, NV-C5, NV-C7, NV-DA1, NV-DA1B, NV-DA1EG, NV-DA1EN, NV-DA1ENA, NV-DB1, NV-D89, NV-DS11, NV-DS11EN, NV-DS11ENA, NV-DS11ENC, NV-DS12, NV-DS12B, NV-DS12EG, NV-DS15, NV-DS150, NV-DS150B, NV-DS15A, NV-DS15B, NV-DS15EG, NV-DS15EN, NV-DS15ENC, NV-DS200, NV-DS25, NV-DS25A, NV-DS25EG, NV-DS25EN, NV-DS27, NV-DS27B, NV-DS28, NV-DS28A, NV-DS28B, NV-DS29, NV-DS29EG, NV-DS3, NV-DS30, NV-DS30A, NV-DS30EG, NV-DS33, NV-DS33EN, NV-DS35, NV-DS37, NV-DS37B, NV-DS38, NV-DS38A, NV-DS38B, NV-DS38EG, NV-DS50, NV-DS50A, NV-DS55, NV-DS60, NV-DS60A, NV-DS60EG, NV-DS60EG-S, NV-DS65, NV-DS65A, NV-DS65A-S, NV-DS65B, NV-DS65EG, NV-DS68, NV-DS68EG, NV-DS7, NV-DS7/NW, NV-DS77, NV-DS77B, NV-DS77EG, NV-DS77EN, NV-DS77ENA, NV-DS8, NV-DS80K, NV-DS88, NV-DS88A, NV-DS88EG, NV-DS88K, NV-DS88A, NV-DS88EG, NV-DS88K, NV-DS89, NV-DS9, NV-DS99, NV-DS990, NV-DS990EG, NV-DS99EN, NV-DS99ENA, NV-EX1, NV-EX1B, NV-EX1EG, NV-EX1EN, NV-EX1ENA, NV-EX21, NV-EX21A, NV-EX21EG, NV-EX3, NV-EX3EG, NV-GS1, NV-GS11, NV-GS15, NV-GS15EB, NV-GS15GC-S, NV-GS1B, NV-GS1EG, NV-GS3, NV-GS33, NV-GS3B, NV-GS3EG, NV-GS4, NV-GS4B, NV-GS4EG, NV-GS5, NV-GS5B, NV-GS5EG, NV-GS5K, NV-GS7K, NV-GX7, NV-GX7EG, NV-GX7K, NV-M20, NV-MX1, NV-MX1000, NV-MX1B, NV-MX2, NV-MX2000, NV-MX2500, NV-MX2B, NV-MX2EG, NV-MX300, NV-MX3000, NV-MX300A, NV-MX300EG, NV-MX300EN, NV-MX340, NV-MX350, NV-MX350A, NV-MX350EG, NV-MX3A, NV-MX3EN, NV-MX5, NV-MX500, NV-MX5000, NV-MX500B, NV-MX500EG, NV-MX5B, NV-MX7, NV-MX7A, NV-MX7B, NV-MX7DEN, NV-MX8, NV-MX8B, NV-MD9000, NV-MG3, NV-RX33EG, NV-RX66EG, AJ-PCS060G(Portable Hard Disk Unit), PV-BP8, PV-DBP8, PV-DBP8A, PV-DC152, PV-DC252, PV-DC352, PV-D401, PV-DVP8-A, PV-DV100, PV-DV100K, PV-DV101, PV-DV102, PV-DV103, PV-DV121, PV-DV151, PV-DV200, PV-DV200K, PV-DV201, PV-DV201-K, PV-DV202, PV-DV203, PV-DV221, PV-DV351, PV-DV400, PV-DV400K, PV-DV401, PV-DV402, PV-DV51, PV-DV52, PV-DV53, PV-DV600, PV-DV600K, PV-DV601, PV-DV601D, PV-DV602, PV-DV700, PV-DV701, PV-DV702, PV-DV702K, PV-DV73, PV-DV800, PV-DV800K, PV-DV801, PV-DV851, PV-DV851D, PV-DV852, PV-DV900, PV-DV901, PV-DV910, PV-DV951, PV-DV952, PV-DV953, PV-GS11, PV-GS12, PV-GS13, PV-GS14, PV-GS15, PV-GS2, PV-GS9, PV-VM202, VDR-M10, VDR-M20, DZ-MV100, DZ-MV100A, DZ-MV100E, DZ-MV200, DZ-MV200A, DZ-MV200E, DZ-MV208E, DZ-MV230, DZ-MV230A, DZ-MV230E, DZ-MV238E, DZ-MV250, DZ-MV270, DZ-MV270A, DZ-MV270E
VPA0026	8717825942669	7.2V	1250mAh	VW-VBG130E	Panasonic	AG-HSC1U, HDC-DX1, HDC-DX1EG-S, HDC-DX1GK, HDC-DX1-S, HDC-DX3, HDC-HS100, HDC-HS100GK, HDC-HS20, HDC-HS200, HDC-HS250, HDC-HS300, HDC-HS700, HDC-HS700K, HDC-HS9, HDC-HS9EG-S, HDC-HS9GK, HDC-SD1, HDC-SD10, HDC-SD100, HDC-SD100GK, HDC-SD1-S, HDC-SD20, HDC-SD200, HDC-SD3, HDC-SD5, HDC-SD5BNDL, HDC-SD5EG-K, HDC-SD5EG-S, HDC-SD5GC-K, HDC-SD5GK, HDC-SD600, HDC-SD7, HDC-SD700, HDC-SD9, HDC-SD9EG-K, HDC-SD9EG-S, HDC-SD9GK, HDC-SDT750, HDC-SDT750K, HDC-SX5, HDC-SX5EB-S, HDC-SX5EG-S, HDC-SX5GCS-S, HDC-SX5GK, HDC-TM10, HDC-TM10S, HDC-TM20, HDC-TM200, HDC-TM30, HDC-TM300, HDC-TM350, HDC-TM650, HDC-TM700, HDC-TM700K, HDC-TM750, NV-GS320, NV-GS330, NV-GS500, NV-GS90, NV-GS98GK, PV-GS320, PV-GS500, PV-GS90, SDR-H258GK, SDR-H40, SDR-H48GK, SDR-H50, SDR-H60, SDR-H68GK, SDR-H80, SDR-H90, VDR-D310, VDR-D50, VDR-D58GK, Lumix DMC-L10, Lumix DMC-L10K, Lumix DMC-L10KEB-K, Lumix DMC-L10KEG-K
VPA0027	8717825942621	7.2V	2500mAh	VW-VBG260E VW-VBG070A/E	Panasonic	AG-HMC70, AG-HSC1U, HDC-DX1, HDC-DX1EG-S, HDC-DX1GK, HDC-DX1-S, HDC-DX3, HDC-HS100, HDC-HS100GK, HDC-HS20, HDC-HS200, HDC-HS250, HDC-HS300, HDC-HS700, HDC-HS700K, HDC-HS9, HDC-HS9EG-S, HDC-HS9GK, HDC-SD1, HDC-SD10, HDC-SD100, HDC-SD100GK, HDC-SD1-S, HDC-SD20, HDC-SD200, HDC-SD3, HDC-SD5, HDC-SD5EG-K, HDC-SD5EG-S, HDC-SD5GC-K, HDC-SD5GK, HDC-SD600, HDC-SD7, HDC-SD700, HDC-SD9, HDC-SD9EG-K, HDC-SD9EG-S, HDC-SD9GK, HDC-SDT750, HDC-SDT750K, HDC-SX5, HDC-SX5EB-S, HDC-SX5EG-S, HDC-SX5GCS-S, HDC-SX5GK, HDC-TM10, HDC-TM10S, HDC-TM20, HDC-TM200, HDC-TM30, HDC-TM300, HDC-TM350, HDC-TM650, HDC-TM700, HDC-TM700K, HDC-TM750, NV-GS320, NV-GS330, NV-GS500, NV-GS90, NV-GS98GK, PV-GS320, PV-GS500, PV-GS90, SDR-H258GK, SDR-H40, SDR-H50, SDR-H60, SDR-H80, SDR-H90, VDR-D310, VDR-D50, VDR-D58GK
VPA0028	8718226229663	7.2V	1250mAh	VW-VBN130	Panasonic	HDC-HS800, HDC-HS900, HDC-SD800, HDC-SD900, HDC-TM900, HC-X800, HC-X810, HC-X900, HC-X920
VPA0029	8718226229670	7.2V	2500mAh	VW-VBN260	Panasonic	HDC-HS800, HDC-HS900, HDC-SD800, HDC-SD900, HDC-TM900, HC-X800, HC-X810, HC-X900, HC-X920
VPA0030	8718226229687	3.6V	1800mAh	VW-VBK180	Panasonic	HC-V700, HDC-HS60, HDC-HS80, HDC-SD40, HDC-SD60, HDC-SD80, HDC-SD90, HDC-TM40, HDC-TM80, HDC-TM90, SDR-H100, SDR-H101, SDR-S50, SDR-S70, SDR-S71, SDR-T70, SDR-T71, SDR-T76
VPA0031	8718226229694	3.6V	3600mAh	VW-VBK360	Panasonic	HC-V700, HDC-HS60, HDC-HS80, HDC-SD40, HDC-SD60, HDC-SD80, HDC-SD90, HDC-TM40, HDC-TM80, HDC-TM90, SDR-H100, SDR-H101, SDR-S70, SDR-S71, SDR-T70, SDR-T71, SDR-T76
VPA0032	8718226229809	3.6V	700mAh	VW-VBX070	Panasonic	HX-DC1, HX-DC10, HX-WA1
VPA0033	8718226229816	3.6V	880mAh	VW-VBX090	Panasonic	HX-WA2, HX-WA20, HX-WA30
VPA0034	8718503023106	3.6V	900mAh	VW-VBY100	Panasonic	HC-V110, HC-V130, HC-V201
VPA0035	8718503026909	7.2V	5200mAh	VW-VBD58	Panasonic	AG-AC8, AG-AC90, AJ-PX270, HC-X1000

VPA0036	8718503027777	3.6V	2020mAh	VW-VBT190	Panasonic	HC-V110, HC-V110K, HC-V130, HC-V160, HC-V180, HC-V210, HC-V250, HC-V270, HC-V380, HC-V510, HC-V520, HC-V520K, HC-V520M, HC-V550, HC-V710, HC-V720, HC-V720K, HC-V720M, HC-V750, HC-VX870, HC-VX980, HC-VXF990, HC-W570, HC-W850, HC-W970
VPA0037	8718503027784	3.6V	4040mAh	VW-VBT380	Panasonic	HC-V110, HC-V110K, HC-V130, HC-V160, HC-V180, HC-V210, HC-V250, HC-V270, HC-V380, HC-V510, HC-V520, HC-V520K, HC-V520M, HC-V550, HC-V710, HC-V720, HC-V720K, HC-V720M, HC-V750, HC-VX870, HC-VX980, HC-VXF990, HC-W570, HC-W850, HC-W970
VSA0001	8717825941860	7.4V	1500mAh	SB-LSM160	Samsung	SC-DC163, SC-DC164, SC-DC165, SC-DC563, SC-DC564, SC-DC565, SC-D263, SC-D351, SC-D352, SC-D353, SC-D355, SC-D362, SC-D363, SC-D364, SC-D365, SC-D366, SC-D453, SC-D455, SC-D457, SC-D6550, SC-D953, SC-D955, SC-D963, SC-D965, SC-D966, SC-351, SC-352, SC-352i, SC-353i, SC-354, SC-355, SC-357, VM-DC160, VM-DC560, VM-DC560K, VP-DC161, VP-DC161i, VP-DC161W, VP-DC161WB, VP-DC161WBi, VP-DC161Wi, VP-DC163, VP-DC163i, VP-DC165, VP-DC165W, VP-DC165WB, VP-DC165WBi, VP-DC165Wi, VP-DC171, VP-DC171W, VP-DC173, VP-DC175WB, VP-DC563, VP-DC563i, VP-DC565, VP-DC565WBi, VP-DC565Wi, VP-DC575, VP-DC575WB, VP-DC575WB/XEU, VP-D161, VP-D351, VP-D351i, VP-D352, VP-D352i, VP-D353, VP-D353i, VP-D354, VP-D354i, VP-D355, VP-D355i, VP-D361, VP-D361i, VP-D361W, VP-D361Wi, VP-D362, VP-D362i, VP-D363, VP-D363i, VP-D364W, VP-D364Wi, VP-D365Wi, VP-D371, VP-D451, VP-D452, VP-D453, VP-D453i, VP-D454, VP-D455, VP-D455i, VP-D461B, VP-D461i, VP-D463B, VP-D463i, VP-D467i, VP-D552, VP-D557, VP-D563, VP-D650, VP-D651, VP-D653, VP-D655, VP-D953, VP-D955, VP-D957, VP-D959, VP-D963, VP-D963i, VP-D964i, VP-D964W, VP-D965i, VP-D965W, VP-D965Wi, VP361, VP362, VP363, VP364, VP366, VP461, VP463, VP467, VP651, VP653, VP655, VP963, VP965
VSA0002	8717825941891	3.7V	850mAh	SB-P90A	Samsung	VM-M102, VM-M105, VM-M110, VP-M102, VP-M102B, VP-M102S, VP-M105, VP-M105B, VP-M105R, VP-M105S, VP-M110, VP-M110B, VP-M110L, VP-M110R, VP-M110S, VP-M2050, VP-M2050B, VP-M2050S, VP-M2100, VP-M2100B, VP-M2100S, VP-M2200B, VP-M2200S, VP-X105, VP-X105L, VP-X110, VP-X110L
VSA0007	8717825941884	7.4V	800mAh	SB-LSM80	Samsung	SC-DC163, SC-DC164, SC-DC165, SC-DC171, SC-DC175, SC-DC563, SC-DC564, SC-DC565, SC-DC575, SC-D173(U), SC-D263, SC-D351, SC-D352, SC-D353, SC-D355, SC-D362, SC-D363, SC-D364, SC-D365, SC-D366, SC-D371, SC-D372, SC-D375(H), SC-D453, SC-D455, SC-D457, SC-D6550, SC-D953, SC-D955, SC-D963, SC-D965, SC-D975, SC-351, SC-352, SC-352i, SC-353i, SC-354, SC-355, SC-357, VM-DC160, VM-DC560, VM-DC560K, VP-DC161, VP-DC161i, VP-DC161W, VP-DC161WB, VP-DC161WBi, VP-DC161Wi, VP-DC163, VP-DC163i, VP-DC165, VP-DC165W, VP-DC165WB, VP-DC165WBi, VP-DC165Wi, VP-DC171, VP-DC171(i), VP-DC171Bi, VP-DC171W, VP-DC171WB, VP-DC171Wi, VP-DC172W, VP-DC173(i), VP-DC175W(i), VP-DC175WB, VP-DC563, VP-DC563i, VP-DC565, VP-DC565WBi, VP-DC565Wi, VP-DC575, VP-DC575WB, VP-DC575Wi, VP-D161, VP-D351, VP-D351i, VP-D352, VP-D352i, VP-D353, VP-D353i, VP-D354, VP-D354i, VP-D355, VP-D355i, VP-D361, VP-D361i, VP-D361W, VP-D361Wi, VP-D362, VP-D362i, VP-D363, VP-D363i, VP-D364W, VP-D364Wi, VP-D365Wi, VP-D371, VP-D371W, VP-D372WH, VP-D375W, VP-D451, VP-D452, VP-D453, VP-D453i, VP-D454, VP-D455, VP-D455i, VP-D461Bi, VP-D463Bi, VP-D467i, VP-D552, VP-D557, VP-D563, VP-D650, VP-D651, VP-D653, VP-D655, VP-D953, VP-D955, VP-D957, VP-D959, VP-D963, VP-D963i, VP-D964W, VP-D964Wi, VP-D965i, VP-D965W, VP-D965Wi, VP361, VP362, VP363, VP364, VP366, VP461, VP463, VP467, VP651, VP653, VP655, VP963, VP965
VSA0008	8717825941754	3.7V	1650mAh	SLB-1437	Samsung	Digimax V3, Digimax V4, Digimax V40, Digimax V4000, Digimax V5, Digimax V50, Digimax V6, Digimax V70
VSA0009	8717825941761	7.4V	1500mAh	SB-L110	Samsung	MD80566, SC-D101, SC-D103, SC-D105, SC-D107, SC-D180, SC-D20, SC-D200, SC-D21, SC-D22, SC-D23, SC-D230, SC-D24, SC-D250, SC-D27, SC-D270, SC-D29, SC-D303, SC-D305, SC-D307, SC-D31, SC-D323, SC-D325, SC-D327, SC-D33, SC-D34, SC-D39, SC-D530, SC-D530T, SC-D590, SC-D590T, SC-D6040, SC-D6050, SC-D6550, SC-D67, SC-D70, SC-D71, SC-D73, SC-D75, SC-D77, SC-D80, SC-D86, SC-D87, SC-D903, SC-D907, SC-D93, SC-D99, VM-A600, VM-A630, VM-A637H, VM-A650, VM-A6600, VM-A670, VM-A930, VM-A990, VM-B1300, VM-B1300T, VM-B1700, VM-B1700T, VM-B1900, VM-B1900R, VM-B1900T, VM-B3710, VM-B3770, VM-B3775, VM-B710, VM-B730, VM-B770, VM-B97HS, VM-B990, VM-B990H, VM-B995A, VM-C1500, VM-C2000, VM-C630, VM-C670, VM-C690, VM-C730, VM-C790, VM-C860, VM-C870, VM-C890, VM-DH100, VM-D630, VM-D730, VM-D7400B, VM-D7400S, VM-D7500, VM-D790, VM-D797E, VP-D10, VP-D101, VP-D101i, VP-D102D, VP-D102Di, VP-D103, VP-D103i, VP-D105, VP-D105i, VP-D107, VP-D107i, VP-D10i, VP-D11, VP-D11i, VP-D130, VP-D130i, VP-D15, VP-D15i, VP-D19, VP-D190, VP-D190i, VP-D190MS, VP-D190MSi, VP-D20, VP-D200, VP-D200i, VP-D20i, VP-D21, VP-D21i, VP-D23, VP-D230, VP-D230i, VP-D23i, VP-D24, VP-D24i, VP-D250, VP-D250i, VP-D26, VP-D26i, VP-D270, VP-D270i, VP-D30, VP-D300, VP-D301, VP-D301i, VP-D303, VP-D303D, VP-D303Di, VP-D303i, VP-D305, VP-D305i, VP-D307, VP-D307i, VP-D30i, VP-D31, VP-D31i, VP-D323, VP-D323i, VP-D325, VP-D325i, VP-D327, VP-D327i, VP-D33, VP-D33i, VP-D34, VP-D340, VP-D340i, VP-D34i, VP-D380, VP-D380i, VP-D39, VP-D39i, VP-D530, VP-D530i, VP-D530R, VP-D530T, VP-D530Ti, VP-D55, VP-D590, VP-D590i, VP-D590Ri, VP-D590T, VP-D590Ti, VP-D60, VP-D6040, VP-D6040i, VP-D6040S, VP-D6040Si, VP-D6050, VP-D6050i, VP-D6050S, VP-D6050Si, VP-D63, VP-D65, VP-D6550, VP-D67, VP-D70, VP-D70i, VP-D73, VP-D73i, VP-D75, VP-D75i, VP-D76, VP-D76i, VP-D77, VP-D77i, VP-D7L, VP-D80, VP-D80i, VP-D81, VP-D81i, VP-D82, VP-D82i, VP-D83, VP-D83i, VP-D85, VP-D87, VP-D87D, VP-D87Di, VP-D87i, VP-D903, VP-D903D, VP-D903Di, VP-D903i, VP-D905, VP-D905i, VP-D907, VP-D907D, VP-D907Di, VP-D907i, VP-D93, VP-D93i, VP-D97, VP-D97i, VP-D99, VP-D99i

VSA0011	8717825941785	7.4V	2000mAh	SB-L160	Samsung	SC-L520, SC-L530, SC-L550, SC-L600, SC-L610, SC-L630, SC-L650, SC-L700, SC-L710, SC-L750, SC-L770, SC-L810, SC-L860, SC-L870, SC-L901, SC-L903, SC-L906, SC-L907, SC-W61, SC-W62, SC-W71, SC-W73, SC-W80, SC-W87, SC-W97, VM-A110, VM-A2300, VM-A300, VM-A320, VM-A3400T, VM-A350, VM-A400, VM-A5500, VM-B110, VM-B300, VM-B310, VM-B350, VM-B360, VM-B5700, VM-C170, VM-C300, VM-C3700, VP-L2000, VP-L3000, VP-L4000, VP-L500, VP-L520, VP-L530, VP-L550, VP-L600, VP-L600B, VP-L610, VP-L610B, VP-L610D, VP-L630, VP-L650, VP-L700, VP-L700U, VP-L710, VP-L750, VP-L750D, VP-L770, VP-L800, VP-L800U, VP-L850, VP-L850D, VP-L860, VP-L870, VP-L900, VP-L906, VP-L907, VP-L907i, VP-M50, VP-M51, VP-M52, VP-M53, VP-M54, VP-SD20, VP-W60, VP-W60B, VP-W61, VP-W61D, VP-W63, VP-W70, VP-W70U, VP-W71, VP-W75, VP-W75D, VP-W76, VP-W80, VP-W800U, VP-W80U, VP-W87, VP-W87D, VP-W90, VP-W95D, VP-W97
VSA0016	8717825941839	7.4V	2300mAh	SB-LSM320	Samsung	SC-DC163, SC-DC164, SC-DC165, SC-DC563, SC-DC564, SC-DC565, SC-D263, SC-D351, SC-D352, SC-D353, SC-D355, SC-D362, SC-D363, SC-D364, SC-D365, SC-D366, SC-D453, SC-D455, SC-D457, SC-D6550, SC-D953, SC-D955, SC-D963, SC-D965, SC-351, SC-352, SC-352i, SC-353i, SC-354, SC-355, SC-357, VM-DC160, VM-DC560, VM-DC560K, VP-DC161, VP-DC161i, VP-DC161W, VP-DC161WB, VP-DC161WBi, VP-DC161Wi, VP-DC163, VP-DC163i, VP-DC165, VP-DC165W, VP-DC165WB, VP-DC165WBi, VP-DC165Wi, VP-DC171, VP-DC171W, VP-DC173, VP-DC175WB, VP-DC563, VP-DC563i, VP-DC565, VP-DC565WBi, VP-DC565Wi, VP-DC575, VP-DC575WB, VP-DC575WB/XEU, VP-D161, VP-D351, VP-D351i, VP-D352, VP-D352i, VP-D353, VP-D353i, VP-D354, VP-D354i, VP-D355, VP-D355i, VP-D361, VP-D361i, VP-D361W, VP-D361Wi, VP-D362, VP-D362i, VP-D363, VP-D363i, VP-D364W, VP-D364Wi, VP-D365Wi, VP-D371, VP-D451, VP-D452, VP-D453, VP-D453i, VP-D454, VP-D455, VP-D455i, VP-D461B, VP-D461i, VP-D463B, VP-D463i, VP-D467i, VP-D552, VP-D557, VP-D563, VP-D650, VP-D651, VP-D653, VP-D655, VP-D953, VP-D955, VP-D957, VP-D959, VP-D963, VP-D963i, VP-D964i, VP-D964W, VP-D965i, VP-D965W, VP-D965Wi, VP361, VP362, VP363, VP364, VP366, VP461, VP463, VP467, VP651, VP653, VP655, VP963, VP965
VSA0018	8717825941853	7.4V	800mAh	IA-BP85ST	Samsung	HMX-H100, HMX-H100N, HMX-H100P, HMX-H104, HMX-H104BP, HMX-H105, HMX-H105BP, HMX-H106, HMX-H106SP, SC-HMX10, SC-HMX10A, SC-HMX10C, SC-HMX10CN, SC-HMX10ED, SC-HMX10N, SC-HMX20, SC-HMX20C, SC-MX10, SC-MX10A, SC-MX10P, SC-MX10R, SC-MX20, SC-MX20B, SC-MX20C, SC-MX20CH, SC-MX20E, SC-MX20EL, SC-MX20ER, SC-MX20H, SC-MX20L, SC-MX20R, SMX-F30, SMX-F30BP, SMX-F30SP, SMX-F33, SMX-F33BP, SMX-F33LP, SMX-F33RP, SMX-F33SP, SMX-F34, SMX-F34BP, SMX-F34LP, SMX-F34RP, SMX-F34SP, ST200F, VP-HMX08, VP-HMX10, VP-HMX10C, VP-HMX20C, VP-MX10, VP-MX10A, VP-MX10AH, VP-MX10AU, VP-MX20, VP-MX20R, VP-MX25
VSA0019	8717825942225	7.4V	900mAh	IA-BP80W	Samsung	SC-D381, SC-D382, SC-D383, SC-D385, SC-DX103, SC-DX205, VP-D381, VP-D382, VP-D391, VP-DX100, VP-DX100i, VP-DX102, VP-DX105i, VP-DX200, VP-DX200XEU
VSA0020	8717825942126	3.7V	950mAh	SLB-10A	Samsung	ES50, ES55, ES60, HZ10W, HZ15W, L100, L110, L200, L210, L310W, M100, M110, M310W, NV9, IT100, PL50, PL51, PL55, PL60, PL65, PL70, P1000, P800, SL102, SL202, SL420, SL502, SL620, SL720, SL820, TL9, WB150F, WB200F, WB250F, WB350F, WB500, WB550, WB700, WB750, WB800F, WB850F, HMX-U10, HMX-U10BN, HMX-U10EN, HMX-U10RN, HMX-U10SN, HMX-U10UN

VSA0022	8717825945585	3.7V	1100mAh	IA-BH125C	Samsung	Lumix DMC-FS1, Lumix DMC-FS2, Lumix DMC-FX01, Lumix DMC-FX01-A, Lumix DMC-FX01BB, Lumix DMC-FX01BS, Lumix DMC-FX01EB-K, Lumix DMC-FX01EB-S, Lumix DMC-FX01EB-W, Lumix DMC-FX01EF-A, Lumix DMC-FX01EF-K, Lumix DMC-FX01EF-S, Lumix DMC-FX01EF-W, Lumix DMC-FX01EG, Lumix DMC-FX01EG-A, Lumix DMC-FX01EG-K, Lumix DMC-FX01EG-S, Lumix DMC-FX01GK, Lumix DMC-FX01-K, Lumix DMC-FX01-P, Lumix DMC-FX01-S, Lumix DMC-FX01-W, Lumix DMC-FX07, Lumix DMC-FX07EF, Lumix DMC-FX07EF-S, Lumix DMC-FX07EG, Lumix DMC-FX07EGM, Lumix DMC-FX07K, Lumix DMC-FX10, Lumix DMC-FX100EF-K, Lumix DMC-FX100EF-N, Lumix DMC-FX100EF-S, Lumix DMC-FX100EG, Lumix DMC-FX100EG-K, Lumix DMC-FX100EG-S, Lumix DMC-FX100GK, Lumix DMC-FX10A, Lumix DMC-FX10A, Lumix DMC-FX10EB-K, Lumix DMC-FX10EB-S, Lumix DMC-FX10EB-W, Lumix DMC-FX10EG, Lumix DMC-FX10EG-A, Lumix DMC-FX10EG-S, Lumix DMC-FX10P, Lumix DMC-FX10S, Lumix DMC-FX12, Lumix DMC-FX12EB-K, Lumix DMC-FX12EB-S, Lumix DMC-FX12EF-S, Lumix DMC-FX12EG, Lumix DMC-FX12EG-K, Lumix DMC-FX12EG-S, Lumix DMC-FX12GK, Lumix DMC-FX12K, Lumix DMC-FX12S, Lumix DMC-FX150, Lumix DMC-FX150EFK, Lumix DMC-FX150K, Lumix DMC-FX150S, Lumix DMC-FX180, Lumix DMC-FX180GK, Lumix DMC-FX180K, Lumix DMC-FX180N, Lumix DMC-FX180S, Lumix DMC-FX3, Lumix DMC-FX3EF, Lumix DMC-FX3EF-S, Lumix DMC-FX3EG, Lumix DMC-FX3EGM, Lumix DMC-FX3EG-S, Lumix DMC-FX3K, Lumix DMC-FX3S, Lumix DMC-FX50, Lumix DMC-FX50EF, Lumix DMC-FX50EG, Lumix DMC-FX50EGM, Lumix DMC-FX50K, Lumix DMC-FX8, Lumix DMC-FX8-A, Lumix DMC-FX8BS, Lumix DMC-FX8EBB, Lumix DMC-FX8EG-A, Lumix DMC-FX8EG-K, Lumix DMC-FX8EG-P, Lumix DMC-FX8EG-S, Lumix DMC-FX8GK, Lumix DMC-FX8GN, Lumix DMC-FX8-K, Lumix DMC-FX8-P, Lumix DMC-FX8-S, Lumix DMC-FX9, Lumix DMC-FX9BB, Lumix DMC-FX9BS, Lumix DMC-FX9EB-K, Lumix DMC-FX9EBS, Lumix DMC-FX9EB-S, Lumix DMC-FX9EF-K, Lumix DMC-FX9EF-S, Lumix DMC-FX9EG, Lumix DMC-FX9EG-K, Lumix DMC-FX9EG-R, Lumix DMC-FX9EG-S, Lumix DMC-FX9GK, Lumix DMC-FX9GN, Lumix DMC-FX9-H, Lumix DMC-FX9-K, Lumix DMC-FX9-R, Lumix DMC-FX9-S, Lumix DMC-LX1, Lumix DMC-LX1BS, Lumix DMC-LX1EG-K, Lumix DMC-LX1EG-S, Lumix DMC-LX1GK, Lumix DMC-LX1GN, Lumix DMC-LX1-K, Lumix DMC-LX1K-B, Lumix DMC-LX1-S, Lumix DMC-LX1S-B, Lumix DMC-LX2, Lumix DMC-LX2EF, Lumix DMC-LX2EF-S, Lumix DMC-LX2EG, Lumix DMC-LX2EG-K, Lumix DMC-LX2EGM, Lumix DMC-LX2EG-S, Lumix DMC-LX2K, Lumix DMC-LX2S, Lumix DMC-LX3, Lumix DMC-LX3EF-K, Lumix DMC-LX3GK, Lumix DMC-LX3K, Lumix DMC-LX3S, HMX-R10, HMX-R10BP, Finepix F20, FinePix F40fd, FinePix F45fd, FinePix F47fd, C-LUX1, D-LUX 4, D-LUX2, D-LUX3, Caplio GR Digital, Caplio GR Digital II, Caplio GX100, Caplio R3, Caplio R30, Caplio R4, Caplio R40, Caplio R5, GR Digital III, GR Digital IV, G600, G700, G700SE, GX200, WG-M1, C-LUX1, D-LUX 4, D-LUX2, D-LUX3, Finepix F20, FinePix F40fd, FinePix F45fd, FinePix F47fd, HMX-R10, HMX-R10BP, Lumix DMC-FS1, Lumix DMC-FS2, Lumix DMC-FX01, Lumix DMC-FX01-A, Lumix DMC-FX01BB, Lumix DMC-FX01BS, Lumix DMC-FX01EB-K, Lumix DMC-FX01EB-S, Lumix DMC-FX01EB-W, Lumix DMC-FX01EF-A, Lumix DMC-FX01EF-K, Lumix DMC-FX01EF-S, Lumix DMC-FX01EF-W, Lumix DMC-FX01EG, Lumix DMC-FX01EG-A, Lumix DMC-FX01EG-K, Lumix DMC-FX01EG-S, Lumix DMC-FX01GK, Lumix DMC-FX01-K, Lumix DMC-FX01-P, Lumix DMC-FX01-S, Lumix DMC-FX01-W, Lumix DMC-FX07, Lumix DMC-FX07EF, Lumix DMC-FX07EF-S, Lumix DMC-FX07EG, Lumix DMC-FX07EGM, Lumix DMC-FX07K, Lumix DMC-FX10, Lumix DMC-FX100EF-K, Lumix DMC-FX100EF-N, Lumix DMC-FX100EF-S, Lumix DMC-FX100EG, Lumix DMC-FX100EG-K, Lumix DMC-FX100EG-S, Lumix DMC-FX100GK, Lumix DMC-FX10A, Lumix DMC-FX10EB-K, Lumix DMC-FX10EB-S, Lumix DMC-FX10EB-W, Lumix DMC-FX10EG, Lumix DMC-FX10EG-A, Lumix DMC-FX10EG-S, Lumix DMC-FX10P, Lumix DMC-FX10S, Lumix DMC-FX12, Lumix DMC-FX12EB-K, Lumix DMC-FX12EB-S, Lumix DMC-FX12EF-S, Lumix DMC-FX12EG, Lumix DMC-FX12EG-K, Lumix DMC-FX12EG-S, Lumix DMC-FX12GK, Lumix DMC-FX12K, Lumix DMC-FX12S, Lumix DMC-FX150, Lumix DMC-FX150EFK, Lumix DMC-FX150K, Lumix DMC-FX150S, Lumix DMC-FX180, Lumix DMC-FX180GK, Lumix DMC-FX180K, Lumix DMC-FX180N, Lumix DMC-FX180S, Lumix DMC-FX3, Lumix DMC-FX3EF, Lumix DMC-FX3EF-S, Lumix DMC-FX3EG, Lumix DMC-FX3EGM, Lumix DMC-FX3EG-S, Lumix DMC-FX3K, Lumix DMC-FX3S, Lumix DMC-FX50, Lumix DMC-FX50EF, Lumix DMC-FX50EG, Lumix DMC-FX50EGM, Lumix DMC-FX50K, Lumix DMC-FX8, Lumix DMC-FX8-A, Lumix DMC-FX8BS, Lumix DMC-FX8EBB, Lumix DMC-FX8EG-A, Lumix DMC-FX8EG-K, Lumix DMC-FX8EG-P, Lumix DMC-FX8EG-S, Lumix DMC-FX8GK, Lumix DMC-FX8GN, Lumix DMC-FX8-K, Lumix DMC-FX8-P, Lumix DMC-FX8-S, Lumix DMC-FX9, Lumix DMC-FX9BB, Lumix DMC-FX9BS, Lumix DMC-FX9EB-K, Lumix DMC-FX9EBS, Lumix DMC-FX9EB-S, Lumix DMC-FX9EF-K, Lumix DMC-FX9EF-S, Lumix DMC-FX9EG, Lumix DMC-FX9EG-K, Lumix DMC-FX9EG-R, Lumix DMC-FX9EG-S, Lumix DMC-FX9GK, Lumix DMC-FX9GN, Lumix DMC-FX9-H, Lumix DMC-FX9-K, Lumix DMC-FX9-R, Lumix DMC-FX9-S, Lumix DMC-LX1, Lumix DMC-LX1BS, Lumix DMC-LX1EG-K, Lumix DMC-LX1EG-S, Lumix DMC-LX1GK, Lumix DMC-LX1GN, Lumix DMC-LX1-K, Lumix DMC-LX1K-B, Lumix DMC-LX1-S, Lumix DMC-LX1S-B, Lumix DMC-LX2, Lumix DMC-LX2EF, Lumix DMC-LX2EF-S, Lumix DMC-LX2EG, Lumix DMC-LX2EG-K, Lumix DMC-LX2EGM, Lumix DMC-LX2EG-S, Lumix DMC-LX2K, Lumix DMC-LX2S, Lumix DMC-LX3, Lumix DMC-LX3EF-K, Lumix DMC-LX3GK, Lumix DMC-LX3K, Lumix DMC-LX3S, X90
VSA0023	8717825945561	3.7V	1200mAh	IA-BH130	Samsung	HMX-U15, HMX-U20, HMX-U20BP, HMX-W200, HMX-W200RP, HMX-W200TP, SMX-C10, SMX-C14, SMX-C20, SMX-C20BP, SMX-C24, SMX-K40, SMX-K44BP, SMX-K45
VSA0024	8717825945677	3.8V	1050mAh	SLB-11A	Samsung	HZ25W, HZ30W, HZ35W, CL65, CL80, EX1, ST1000, ST5000, ST5500, TL240, TL320, TL350, TL500, WB100, WB1000, WB2000, WB5000, WB5500, WB600, WB650, WB660, WB700
VSA0025	8718226222152	3.7V	900mAh	BP-90A	Samsung	HMX-E10, HMX-E10BN, HMX-E10BP, HMX-E10BP/EDC, HMX-E10OP, HMX-E10OP/EDC, HMX-E10WP, HMX-P100

VSA0027	8718226222312	3.7V	2150mAh	IA-BP210E	Samsung	HMX-F80, HMX-H200, HMX-H203, HMX-H204, HMX-H205, HMX-H220, HMX-H300, HMX-H303, HMX-H304, HMX-H305, HMX-H320, HMX-S10, HMX-S15, HMX-S16, SMX-F40, SMX-F400, SMX-F43, SMX-F44, SMX-F50, SMX-F500, SMX-F53, SMX-F530, SMX-F54, SMX-F70
VSA0028	8718226226525	3.7V	4000mAh	IA-BP420E	Samsung	HMX-F80, HMX-H200, HMX-H203, HMX-H204, HMX-H205, HMX-H220, HMX-H300, HMX-H303, HMX-H304, HMX-H305, HMX-H320, HMX-S10, HMX-S15, HMX-S16, SMX-F40, SMX-F400, SMX-F43, SMX-F44, SMX-F50, SMX-F500, SMX-F53, SMX-F530, SMX-F54, SMX-F70
VSA0029	8718226229755	3.7V	880mAh	IA-BP88A	Samsung	DV300F
VSA0030	8718503021096	3.7V	1150mAh	IA-BP105R	Samsung	HMX-H200, HMX-H203, HMX-H204, HMX-H205, HMX-H220, HMX-H300, HMX-H303, HMX-H304, HMX-H305, HMX-H320, HMX-S10, HMX-S15, HMX-S16, SMX-F40, SMX-F400, SMX-F43, SMX-F44, SMX-F50, SMX-F500, SMX-F53, SMX-F530, SMX-F54, SMX-F70
VSA0031	8718503021102	3.7V	2060mAh	IA-BP210R	Samsung	HMX-H200, HMX-H203, HMX-H204, HMX-H205, HMX-H220, HMX-H300, HMX-H303, HMX-H304, HMX-H305, HMX-H320, HMX-S10, HMX-S15, HMX-S16, SMX-F40, SMX-F400, SMX-F43, SMX-F44, SMX-F50, SMX-F500, SMX-F53, SMX-F530, SMX-F54, SMX-F70
VSA0032	8718226229830	3.7V	1250mAh	IA-BP125A	Samsung	HMX-M20, HMX-M20BP, HMX-M20SN, HMX-M20SP, HMX-Q10, HMX-Q100, HMX-Q10BN, HMX-Q10BP, HMX-Q10PP, HMX-Q10UN, HMX-Q130, HMX-Q20, HMX-T10, HMX-T10BN, HMX-T10BP, HMX-T10ON, HMX-T10WN, HMX-T10WP
VSH0009	8717825941662	3.6V	3000mAh	BT-H21 BT-H22	Sharp	VL-A10, VL-A10E, VL-A10H, VL-A10U, VL-A110U, VL-A111, VL-A111H, VL-A111S, VL-A111U, VL-A40U, VL-A45U, VL-AD200U, VL-AD260U, VL-AH130U, VL-AH131, VL-AH131H, VL-AH131U, VL-AH1500, VL-AH150U, VL-AH151, VL-AH1510, VL-AH151H, VL-AH151U, VL-AH160U, VL-AH161U, VL-AH30, VL-AH30H, VL-AH30U, VL-AH50, VL-AH500U, VL-AH50E, VL-AH50H, VL-AH50U, VL-AH60U, L-E680, VL-E307, VL-E33U, VL-E34, VL-E34H, VL-E34U, VL-E37, VL-E37U, VL-E39, VL-E39U, VL-E46U, VL-E47, VL-E47U, VL-E49, VL-E49U, VL-E600U, VL-E610, VL-E610H, VL-E610U, VL-E620, VL-E620U, VL-E630, VL-E630H, VL-E630U, VL-E650U, VL-E66, VL-E660, VL-E660U, VL-E665U, VL-E66H, VL-E66U, VL-E680H, VL-E680U, VL-E685U, VL-E700U, VL-E720, VL-E720H, VL-E720U, VL-E750U, VL-E760, VL-E760H, VL-E760U, VL-E765U, VL-E77U, VL-E780, VL-E780H, VL-E780U, VL-E785U, VL-E950E, VL-E96E, VL-E980E, VL-E98E, VL-H420, VL-H770, VL-H800U, VL-H850, VL-H850U, VL-L65U, VL-S1H, VL-SE10, VL-SE10H, VL-SE10U, VL-SE20U, VL-SE50U, VL-SW50, VL-SW50E, VL-SW50U, VL-SW980
VSH0015	8717825941693	7.4V	2800mAh	BT-L241 BT-L441	Sharp	VL-AH30U, VL-AX1, VL-AX1E, VL-AX1H, VL-AX1S, VL-AX1U, VL-DC3, VL-DC3E, VL-DC3H, VL-DC5, VL-DC50, VL-DX10, VL-EX3, VL-G1K, VL-G870, VL-H870, VL-H870U, VL-H875, VL-H875U, VL-H880, VL-H880U, VL-H890, VL-H890U, VL-H94, VL-H94E, VL-H96, VL-H96E, VL-H996, VL-ME10, VL-ME100, VL-ME100E, VL-ME100H, VL-ME100S, VL-ME10E, VL-ME10H, VL-ME10S, VL-ME10U, VL-MR1, VL-MS1, VL-MX1, VL-NZ10, VL-PD1S, VL-PD3, VL-PD3A, VL-PD3AE, VL-PD3AS, VL-PD3E, VL-PD3H, VL-PD3S, VL-PD3U, VL-PD5, VL-PD5S, VL-PD6, VL-PD6E, VL-PD6H, VL-PD6S, VL-PD7, VL-R3K, VL-SD20, VL-SD20E, VL-SD20H, VL-SD20S, VL-SD20U, VL-SD450, VL-SD650, VL-WD250, VL-WD250E, VL-WD250H, VL-WD250S, VL-WD250U, VL-WD255U, VL-WD260U, VL-WD450, VL-WD450E, VL-WD450H, VL-WD450S, VL-WD450U, VL-WD650, VL-WD650E, VL-WD650S, VL-WD650U
VSJ0001	8718503027647	3.7V	750mAh	SJCAM SJ4000 / SJ5000	SJCAM	SJ4000, SJ5000

VSO0002	8717825941549	6V	1300mAh	NP-55	Sony	DVM-131, DVM-131X, DVM-210N, DVM-210P, MVC-2000, MVC-5000, CCD-EB55, CCD-F1330, CCD-F150, CCD-F201, CCD-F250, CCD-F280, CCD-F288BR, CCD-F30, CCD-F300, CCD-F301, CCD-F302, CCD-F31, CCD-F32, CCD-F33, CCD-F330, CCD-F335, CCD-F34, CCD-F340, CCD-F35, CCD-F350, CCD-F350E, CCD-F355E, CCD-F36, CCD-F360, CCD-F365, CCD-F370E, CCD-F375E, CCD-F38, CCD-F380, CCD-F385, CCD-F385E, CCD-F388BR, CCD-F390, CCD-F390E, CCD-F40, CCD-F401, CCD-F402, CCD-F45, CCD-F450, CCD-F450E, CCD-F455E, CCD-F46, CCD-F475, CCD-F50, CCD-F500, CCD-F500E, CCD-F501, CCD-F55, CCD-F550, CCD-F550E, CCD-F555, CCD-F555E, CCD-F56, CCD-F57, CCD-F70, CCD-F701, CCD-F72, CCD-F73, CCD-F75, CCD-F77, CCD-F900, CCD-FTR45, CCD-FTR55, CCD-FTR65, CCD-FTR75, CCD-FX200E, CCD-FX210, CCD-FX230, CCD-FX240, CCD-FX280E, CCD-FX3, CCD-FX300, CCD-FX300E, CCD-FX310, CCD-FX311, CCD-FX320, CCD-FX330, CCD-FX340, CCD-FX400, CCD-FX400E, CCD-FX410, CCD-FX411, CCD-FX420, CCD-FX425, CCD-FX430, CCD-FX435, CCD-FX470, CCD-FX500, CCD-FX510, CCD-FX510E, CCD-FX511, CCD-FX520, CCD-FX525, CCD-FX530, CCD-FX600, CCD-FX620, CCD-FX630, CCD-FX640, CCD-FX700, CCD-FX700E, CCD-FX710, CCD-FX720, CCD-FX730, CCD-FX730V, CCD-FX810, CCD-FX830VE, CCD-G100ST, CCD-GV200, CCD-GV300, CCD-M7, CCD-M77, CCD-M7U, CCD-M7V, CCD-20061, CCD-335E, CCD-35, CCD-366BR, CCD-380, CCD-390, CCD-400, CCD-50E, CCD-550, CCD-850, CCD-FPKTRV8, CCD-FV01, CCD-SC6E, CCD-SC8E, CCD-SP5, CCD-SP54, CCD-SP5G, CCD-SP5Y, CCD-SP7, CCD-SP9, CCD-TR100, CCD-TR101, CCD-TR105, CCD-TR105E, CCD-TR150, CCD-TR2000, CCD-TR202, CCD-TR202E, CCD-TR21, CCD-TR23, CCD-TR250E, CCD-TR28, CCD-TR30, CCD-TR303, CCD-TR305, CCD-TR305E, CCD-TR30S, CCD-TR31, CCD-TR323, CCD-TR323E, CCD-TR33, CCD-TR330, CCD-TR330E, CCD-TR333, CCD-TR333E, CCD-TR353E, CCD-TR36, CCD-TR380E, CCD-TR385E, CCD-TR4, CCD-TR40, CCD-TR400, CCD-TR403, CCD-TR420, CCD-TR420E, CCD-TR44, CCD-TR440, CCD-TR440E, CCD-TR450, CCD-TR45E, CCD-TR45WH, CCD-TR490E, CCD-TR5, CCD-TR50, CCD-TR501E, CCD-TR502E, CCD-TR503E, CCD-TR505, CCD-TR505K, CCD-TR506, CCD-TR506E, CCD-TR507, CCD-TR50E, CCD-TR51, CCD-TR514, CCD-TR530, CCD-TR54, CCD-TR55, CCD-TR550, CCD-TR55E, CCD-TR580E, CCD-TR590E, CCD-TR6, CCD-TR60, CCD-TR600, CCD-TR606E, CCD-TR60E, CCD-TR61, CCD-TR614, CCD-TR620E, CCD-TR64, CCD-TR65, CCD-TR66, CCD-TR7, CCD-TR70, CCD-TR700, CCD-TR705, CCD-TR705E, CCD-TR707, CCD-TR707E, CCD-TR70E, CCD-TR71, CCD-TR714, CCD-TR72, CCD-TR720E, CCD-TR73, CCD-TR74, CCD-TR740E, CCD-TR75, CCD-TR750, CCD-TR750E, CCD-TR75BR, CCD-TR75E, CCD-TR78, CCD-TR8, CCD-TR805, CCD-TR805E, CCD-TR808, CCD-TR81, CCD-TR814, CCD-TR82, CCD-TR83, CCD-TR84, CCD-TR86, CCD-TR88, CCD-TR880, CCD-TR880E, CCD-TR9, CCD-TR900, CCD-TR91, CCD-TR916, CCD-TR93, CCD-TR94, CCD-TR96, CCD-TR98, CCD-TR99, CCD-TRV10, CCD-TRV100, CCD-TRV10E, CCD-TRV11, CCD-TRV112, CCD-TRV119, CCD-TRV11E, CCD-TRV12, CCD-TRV14E, CCD-TRV19, CCD-TRV21, CCD-TRV211, CCD-TRV212, CCD-TRV21E, CCD-TRV22, CCD-TRV24E, CCD-TRV29, CCD-TRV30, CCD-TRV30E, CCD-TRV31, CCD-TRV312, CCD-TRV32, CCD-TRV33, CCD-TRV34, CCD-TRV40, CCD-TRV44, CCD-TRV44E, CCD-TRV512, CCD-TRV52, CCD-TRV53, CCD-TRV60, CCD-TRV70, CCD-TRV73, CCD-V101, CCD-V11, CCD-V2006i, CCD-V22, CCD-V301, CCD-V330E, CCD-V340E, CCD-V4, CCD-V401, CCD-V4330E, CCD-V500, CCD-V5000, CCD-V5000E, CCD-V55, CCD-V550, CCD-V600, CCD-V6000, CCD-V600E, CCD-V601, CCD-V700, CCD-V700E, CCD-V701, CCD-V800, CCD-V800E, CCD-V801, CCD-V88, CCD-V88E, CCD-V9, CCD-V900, CCD-V900E, CCD-V90E, CCD-V95E, CCD-V99, CCD-V9E, CCD-VX1, CCD-VX3, EVC-9100, EVC-X7, GV-5K, GV-8, GV-9, GV-9E, GV-U5, XV-M30, XV-MH30
VSO0006	8717825941457	7.4V	700mAh	NP-FP50	Sony	DCR-DVD103, DCR-DVD105, DCR-DVD105E, DCR-DVD202, DCR-DVD202E, DCR-DVD203, DCR-DVD203E, DCR-DVD205, DCR-DVD205E, DCR-DVD304, DCR-DVD304E, DCR-DVD305, DCR-DVD305E, DCR-DVD403, DCR-DVD403E, DCR-DVD404, DCR-DVD404E, DCR-DVD405, DCR-DVD405E, DCR-DVD505, DCR-DVD505E, DCR-DVD602, DCR-DVD602E, DCR-DVD603, DCR-DVD605, DCR-DVD605E, DCR-DVD653, DCR-DVD653E, DCR-DVD703, DCR-DVD703E, DCR-DVD705, DCR-DVD705E, DCR-DVD755, DCR-DVD755E, DCR-DVD803, DCR-DVD803E, DCR-DVD805, DCR-DVD805E, DCR-DVD905, DCR-DVD905E, DCR-DVD92, DCR-DVD92E, DCR-HC16, DCR-HC16E, DCR-HC17, DCR-HC17E, DCR-HC18, DCR-HC18E, DCR-HC19, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC21E, DCR-HC22, DCR-HC22E, DCR-HC23, DCR-HC23E, DCR-HC24, DCR-HC24E, DCR-HC26, DCR-HC26E, DCR-HC28, DCR-HC3 PRO, DCR-HC30, DCR-HC30E, DCR-HC30G, DCR-HC30L, DCR-HC30S, DCR-HC32, DCR-HC32E, DCR-HC33E, DCR-HC35, DCR-HC35E, DCR-HC36, DCR-HC36E, DCR-HC39, DCR-HC39E, DCR-HC40, DCR-HC40E, DCR-HC40S, DCR-HC40W, DCR-HC41, DCR-HC42, DCR-HC42E, DCR-HC43, DCR-HC43E, DCR-HC44, DCR-HC44E, DCR-HC46, DCR-HC46E, DCR-HC65, DCR-HC85, DCR-HC85E, DCR-HC94, DCR-HC94E, DCR-HC96, DCR-HC96E, DCR-30, DCR-SR100, DCR-SR100E, DCR-SR30E, DCR-SR40, DCR-SR40E, DCR-SR50, DCR-SR50E, DCR-SR60, DCR-SR60E, DCR-SR70E, DCR-SR80, DCR-SR80E, DCR-SR90E, HDR-HC3
VSO0007	8717825941488	3.6V	1400mAh	NP-FS10 NP-FS11	Sony	CCD-CR1, CCD-CR1, CCD-CR1E, Cyber-shot DSC-F505, Cyber-shot DSC-F505K, Cyber-shot DSC-F505V, Cyber-shot DSC-F55, Cyber-shot DSC-F55DX, Cyber-shot DSC-F55E, Cyber-shot DSC-F55K, Cyber-shot DSC-F55V, Cyber-shot DSC-P1, Cyber-shot DSC-P20, Cyber-shot DSC-P30, Cyber-shot DSC-P50, Cyber-shot DSC-P505, Cyber-shot DSC-P51, Cyber-shot DSC-P55, DCR-PC1, DCR-PC1E, DCR-PC2, DCR-PC2E, DCR-PC3, DCR-PC3E, DCR-PC4, DCR-PC4E, DCR-PC5, DCR-PC5E, DCR-TRV1VE

VSO0008	8717825941464	7.2V	1400mAh	NP-FP70 NP-FP71	Sony	DCR-DVD103, DCR-DVD105, DCR-DVD105E, DCR-DVD202, DCR-DVD202E, DCR-DVD203, DCR-DVD203E, DCR-DVD205, DCR-DVD205E, DCR-DVD304, DCR-DVD304E, DCR-DVD305, DCR-DVD305E, DCR-DVD403, DCR-DVD403E, DCR-DVD404, DCR-DVD404E, DCR-DVD405, DCR-DVD405E, DCR-DVD505, DCR-DVD505E, DCR-DVD602, DCR-DVD602E, DCR-DVD603, DCR-DVD605, DCR-DVD605E, DCR-DVD653, DCR-DVD653E, DCR-DVD703, DCR-DVD703E, DCR-DVD705, DCR-DVD705E, DCR-DVD755, DCR-DVD755E, DCR-DVD803, DCR-DVD803E, DCR-DVD805, DCR-DVD805E, DCR-DVD905, DCR-DVD905E, DCR-DVD92, DCR-DVD92E, DCR-HC16, DCR-HC16E, DCR-HC17, DCR-HC17E, DCR-HC18, DCR-HC18E, DCR-HC19, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC21E, DCR-HC22, DCR-HC22E, DCR-HC23, DCR-HC23E, DCR-HC24, DCR-HC24E, DCR-HC26, DCR-HC26E, DCR-HC28, DCR-HC3 PRO, DCR-HC30, DCR-HC30E, DCR-HC30G, DCR-HC30L, DCR-HC30S, DCR-HC32, DCR-HC32E, DCR-HC33E, DCR-HC35, DCR-HC35E, DCR-HC36, DCR-HC36E, DCR-HC39, DCR-HC39E, DCR-HC40, DCR-HC40E, DCR-HC40S, DCR-HC40W, DCR-HC41, DCR-HC42, DCR-HC42E, DCR-HC43, DCR-HC43E, DCR-HC44, DCR-HC44E, DCR-HC46, DCR-HC46E, DCR-HC65, DCR-HC85, DCR-HC85E, DCR-HC94, DCR-HC94E, DCR-HC96, DCR-HC96E, DCR-30, DCR-SR100, DCR-SR100E, DCR-SR30E, DCR-SR40, DCR-SR40E, DCR-SR50, DCR-SR50E, DCR-SR60, DCR-SR60E, DCR-SR70E, DCR-SR80, DCR-SR80E, DCR-SR90E, HDR-HC3
VSO0009	8717825941587	6V	3800mAh	NP-68 NP-77	Sony	MVC-2000, MVC-5000, CCD-EB55, CCD-F1330, CCD-F150, CCD-F201, CCD-F250, CCD-F280, CCD-F288BR, CCD-F30, CCD-F300, CCD-F301, CCD-F302, CCD-F31, CCD-F32, CCD-F33, CCD-F330, CCD-F335, CCD-F34, CCD-F340, CCD-F35, CCD-F350, CCD-F350E, CCD-F355E, CCD-F36, CCD-F360, CCD-F365, CCD-F370E, CCD-F375E, CCD-F38, CCD-F380, CCD-F385, CCD-F385E, CCD-F388BR, CCD-F390, CCD-F390E, CCD-F40, CCD-F401, CCD-F402, CCD-F45, CCD-F450, CCD-F450E, CCD-F455E, CCD-F46, CCD-F475, CCD-F50, CCD-F500, CCD-F500E, CCD-F501, CCD-F55, CCD-F550, CCD-F550E, CCD-F555, CCD-F555E, CCD-F56, CCD-F57, CCD-F70, CCD-F701, CCD-F72, CCD-F73, CCD-F75, CCD-F77, CCD-F900, CCD-FTR45, CCD-FTR55, CCD-FTR65, CCD-FTR75, CCD-FX200E, CCD-FX210, CCD-FX230, CCD-FX240, CCD-FX280E, CCD-FX3, CCD-FX300, CCD-FX300E, CCD-FX310, CCD-FX311, CCD-FX320, CCD-FX330, CCD-FX340, CCD-FX400, CCD-FX400E, CCD-FX410, CCD-FX411, CCD-FX420, CCD-FX425, CCD-FX430, CCD-FX435, CCD-FX470, CCD-FX500, CCD-FX510, CCD-FX510E, CCD-FX511, CCD-FX520, CCD-FX525, CCD-FX530, CCD-FX600, CCD-FX620, CCD-FX630, CCD-FX640, CCD-FX700, CCD-FX700E, CCD-FX710, CCD-FX720, CCD-FX730, CCD-FX730V, CCD-FX810, CCD-FX830VE, CCD-G100ST, CCD-GV200, CCD-GV300, CCD-M7, CCD-M77, CCD-M7U, CCD-M7V, CCD-20061, CCD-335E, CCD-35, CCD-366BR, CCD-380, CCD-390, CCD-400, CCD-50E, CCD-550, CCD-850, CCD-FPKTRV8, CCD-FV01, CCD-SC6E, CCD-SC8E, CCD-SP5, CCD-SP54, CCD-SP5G, CCD-SP5Y, CCD-SP7, CCD-SP9, CCD-TR100, CCD-TR101, CCD-TR105, CCD-TR105E, CCD-TR150, CCD-TR2000, CCD-TR202, CCD-TR202E, CCD-TR21, CCD-TR23, CCD-TR250E, CCD-TR28, CCD-TR30, CCD-TR303, CCD-TR305, CCD-TR305E, CCD-TR30S, CCD-TR31, CCD-TR323, CCD-TR323E, CCD-TR33, CCD-TR330, CCD-TR330E, CCD-TR333, CCD-TR333E, CCD-TR353E, CCD-TR36, CCD-TR380E, CCD-TR385E, CCD-TR4, CCD-TR40, CCD-TR400, CCD-TR403, CCD-TR420, CCD-TR420E, CCD-TR44, CCD-TR440, CCD-TR440E, CCD-TR450, CCD-TR45E, CCD-TR45WH, CCD-TR490E, CCD-TR5, CCD-TR50, CCD-TR501E, CCD-TR502E, CCD-TR503E, CCD-TR505, CCD-TR505K, CCD-TR506, CCD-TR506E, CCD-TR507, CCD-TR50E, CCD-TR51, CCD-TR514, CCD-TR530, CCD-TR54, CCD-TR55, CCD-TR550, CCD-TR55E, CCD-TR580E, CCD-TR590E, CCD-TR6, CCD-TR60, CCD-TR600, CCD-TR606E, CCD-TR60E, CCD-TR61, CCD-TR614, CCD-TR620E, CCD-TR64, CCD-TR65, CCD-TR66, CCD-TR7, CCD-TR70, CCD-TR700, CCD-TR705, CCD-TR705E, CCD-TR707, CCD-TR707E, CCD-TR70E, CCD-TR71, CCD-TR714, CCD-TR72, CCD-TR720E, CCD-TR73, CCD-TR74, CCD-TR740E, CCD-TR75, CCD-TR750, CCD-TR750E, CCD-TR75BR, CCD-TR75E, CCD-TR78, CCD-TR8, CCD-TR805, CCD-TR805E, CCD-TR808, CCD-TR81, CCD-TR814, CCD-TR82, CCD-TR83, CCD-TR84, CCD-TR86, CCD-TR88, CCD-TR880, CCD-TR880E, CCD-TR9, CCD-TR900, CCD-TR91, CCD-TR916, CCD-TR93, CCD-TR94, CCD-TR96, CCD-TR98, CCD-TR99, CCD-TRV10, CCD-TRV100, CCD-TRV10E, CCD-TRV11, CCD-TRV112, CCD-TRV119, CCD-TRV11E, CCD-TRV12, CCD-TRV14E, CCD-TRV19, CCD-TRV21, CCD-TRV211, CCD-TRV212, CCD-TRV21E, CCD-TRV22, CCD-TRV24E, CCD-TRV29, CCD-TRV30, CCD-TRV30E, CCD-TRV31, CCD-TRV312, CCD-TRV32, CCD-TRV33, CCD-TRV34, CCD-TRV40, CCD-TRV44, CCD-TRV44E, CCD-TRV512, CCD-TRV52, CCD-TRV53, CCD-TRV60, CCD-TRV70, CCD-TRV73, CCD-V101, CCD-V11, CCD-V2006i, CCD-V22, CCD-V301, CCD-V330E, CCD-V340E, CCD-V4, CCD-V401, CCD-V4330E, CCD-V500, CCD-V5000, CCD-V5000E, CCD-V55, CCD-V550, CCD-V600, CCD-V6000, CCD-V600E, CCD-V601, CCD-V700, CCD-V700E, CCD-V701, CCD-V800, CCD-V800E, CCD-V801, CCD-V88, CCD-V88E, CCD-V9, CCD-V900, CCD-V900E, CCD-V90E, CCD-V95E, CCD-V99, CCD-V9E, CCD-VX1, CCD-VX3, EVC-9100, EVC-X7, GV-5K, GV-8, GV-9, GV-9E, GV-U5, XV-M30, XV-MH30
VSO0013	8717825941495	3.6V	2400mAh	NP-FS20 NP-FS21 NP-FS22 NP-F	Sony	DCR-PC1, DCR-PC1E, DCR-PC2, DCR-PC2E, DCR-PC3, DCR-PC3E, DCR-PC4, DCR-PC4E, DCR-PC5, DCR-PC5E, DCR-PC5L, DCR-TRV1VE

VSO0014	8717825941471	7.2V	2500mAh	NP-FP90	Sony	DCR-DVD103, DCR-DVD105, DCR-DVD105E, DCR-DVD202, DCR-DVD202E, DCR-DVD203, DCR-DVD203E, DCR-DVD205, DCR-DVD205E, DCR-DVD304, DCR-DVD304E, DCR-DVD305, DCR-DVD305E, DCR-DVD403, DCR-DVD403E, DCR-DVD404, DCR-DVD404E, DCR-DVD405, DCR-DVD405E, DCR-DVD505, DCR-DVD505E, DCR-DVD602, DCR-DVD602E, DCR-DVD603, DCR-DVD605, DCR-DVD605E, DCR-DVD653, DCR-DVD653E, DCR-DVD703, DCR-DVD703E, DCR-DVD705, DCR-DVD705E, DCR-DVD755, DCR-DVD755E, DCR-DVD803, DCR-DVD803E, DCR-DVD805, DCR-DVD805E, DCR-DVD905, DCR-DVD905E, DCR-DVD92, DCR-DVD92E, DCR-HC16, DCR-HC16E, DCR-HC17, DCR-HC17E, DCR-HC18, DCR-HC18E, DCR-HC19, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC21E, DCR-HC22, DCR-HC22E, DCR-HC23, DCR-HC23E, DCR-HC24, DCR-HC24E, DCR-HC26, DCR-HC26E, DCR-HC28, DCR-HC3 PRO, DCR-HC30, DCR-HC30E, DCR-HC30G, DCR-HC30L, DCR-HC30S, DCR-HC32, DCR-HC32E, DCR-HC33E, DCR-HC35, DCR-HC35E, DCR-HC36, DCR-HC36E, DCR-HC39, DCR-HC39E, DCR-HC40, DCR-HC40E, DCR-HC40S, DCR-HC40W, DCR-HC41, DCR-HC42, DCR-HC42E, DCR-HC43, DCR-HC43E, DCR-HC44, DCR-HC44E, DCR-HC46, DCR-HC46E, DCR-HC65, DCR-HC85, DCR-HC85E, DCR-HC94, DCR-HC94E, DCR-HC96, DCR-HC96E, DCR-30, DCR-SR100, DCR-SR100E, DCR-SR30E, DCR-SR40, DCR-SR40E, DCR-SR50, DCR-SR50E, DCR-SR60, DCR-SR60E, DCR-SR70E, DCR-SR80, DCR-SR80E, DCR-SR90E, HDR-HC3
VSO0017	8717825941433	7.2V	3000mAh	NP-FM70 NP-QM71	Sony	CCD-TR108, CCD-TR208, CCD-TR408, CCD-TR748, CCD-TR748E, CCD-TRV106K, CCD-TRV107, CCD-TRV108, CCD-TRV108E, CCD-TRV116, CCD-TRV118, CCD-TRV126, CCD-TRV128, CCD-TRV138, CCD-TRV140, CCD-TRV18, CCD-TRV19, CCD-TRV20, CCD-TRV208, CCD-TRV208E, CCD-TRV218, CCD-TRV218E, CCD-TRV228, CCD-TRV228E, CCD-TRV238, CCD-TRV238E, CCD-TRV240, CCD-TRV245, CCD-TRV25, CCD-TRV27, CCD-TRV308, CCD-TRV318, CCD-TRV328, CCD-TRV338, CCD-TRV340, CCD-TRV345, CCD-TRV408, CCD-TRV408E, CCD-TRV418, CCD-TRV418E, CCD-TRV425, CCD-TRV428, CCD-TRV428E, CCD-TRV438E, CCD-TRV50, CCD-TRV608, CCD-TRV730, CCD-TRV740, CCD-TRV840, CCD-TRV950, CCD-TRV96K, DCR-DVD100, DCR-DVD100E, DCR-DVD101, DCR-DVD101E, DCR-DVD200, DCR-DVD200E, DCR-DVD201, DCR-DVD201E, DCR-DVD300, DCR-DVD301, DCR-DVD91, DCR-DVD91E, DCR-HC1, DCR-HC1 PRO, DCR-HC14, DCR-HC14E, DCR-HC15, DCR-HC15E, DCR-HC88, DCR-PC100, DCR-PC101, DCR-PC101E, DCR-PC101K, DCR-PC103, DCR-PC103E, DCR-PC104, DCR-PC104E, DCR-PC105, DCR-PC105E, DCR-PC105K, DCR-PC110, DCR-PC110E, DCR-PC115, DCR-PC115E, DCR-PC120, DCR-PC120BT, DCR-PC120E, DCR-PC300K, DCR-PC330, DCR-PC330E, DCR-PC6, DCR-PC6E, DCR-PC8, DCR-PC8E, DCR-PC9, DCR-PC9E, DCR-TR238, DCR-TRV10, DCR-TRV108, DCR-TRV10E, DCR-TRV11, DCR-TRV116, DCR-TRV116E, DCR-TRV118E, DCR-TRV11E, DCR-TRV12, DCR-TRV12E, DCR-TRV14, DCR-TRV140, DCR-TRV140E, DCR-TRV140U, DCR-TRV145, DCR-TRV145E, DCR-TRV14E, DCR-TRV15, DCR-TRV150, DCR-TRV15E, DCR-TRV16, DCR-TRV16E, DCR-TRV17, DCR-TRV17E, DCR-TRV17K, DCR-TRV18, DCR-TRV18E, DCR-TRV18K, DCR-TRV19, DCR-TRV19E, DCR-TRV20, DCR-TRV208, DCR-TRV20E, DCR-TRV215, DCR-TRV218, DCR-TRV22, DCR-TRV228, DCR-TRV22E, DCR-TRV22K, DCR-TRV230, DCR-TRV230E, DCR-TRV235, DCR-TRV235E, DCR-TRV238, DCR-TRV238E, DCR-TRV239, DCR-TRV239E, DCR-TRV24, DCR-TRV240, DCR-TRV240E, DCR-TRV240K, DCR-TRV245, DCR-TRV245E, DCR-TRV24E, DCR-TRV25, DCR-TRV250, DCR-TRV250E, DCR-TRV255, DCR-TRV255E, DCR-TRV25E, DCR-TRV260, DCR-TRV265, DCR-TRV265E, DCR-TRV27, DCR-TRV270, DCR-TRV270E, DCR-TRV27E, DCR-TRV280, DCR-TRV285, DCR-TRV285E, DCR-TRV30, DCR-TRV300K, DCR-TRV30E, DCR-TRV325, DCR-TRV33, DCR-TRV330, DCR-TRV330E, DCR-TRV33E, DCR-TRV33K, DCR-TRV340, DCR-TRV340E, DCR-TRV345, DCR-TRV345E, DCR-TRV350, DCR-TRV351, DCR-TRV355, DCR-TRV355E, DCR-TRV360, DCR-TRV361, DCR-TRV38, DCR-TRV39, DCR-TRV40, DCR-TRV408, DCR-TRV40E, DCR-TRV418, DCR-TRV428, DCR-TRV430, DCR-TRV430E, DCR-TRV438, DCR-TRV460, DCR-TRV460E, DCR-TRV480, DCR-TRV480E, DCR-TRV50, DCR-TRV50E, DCR-TRV530, DCR-TRV530E, DCR-TRV6, DCR-TRV60, DCR-TRV60E, DCR-TRV6E, DCR-TRV70, DCR-TRV70K, DCR-TRV725, DCR-TRV730, DCR-TRV730E, DCR-TRV738, DCR-TRV738E, DCR-TRV740, DCR-TRV740E, DCR-TRV748, DCR-TRV75, DCR-TRV75E, DCR-TRV8, DCR-TRV80, DCR-TRV80E, DCR-TRV828, DCR-TRV828E, DCR-TRV830, DCR-TRV830E, DCR-TRV840, DCR-TRV8K, DCR-TRV940, DCR-TRV940E, DCR-TRV950, DCR-TRV950E, DCR-TV480, DSR-PDX10, GV-D1000(Video Walkman), HDR-HC1, HDR-HC1E, HDR-SR1, HDR-SR1e, HDR-UX1, HDR-UX1e, HVR-A1U PRO, HVR-AV1, HVL-IRM(Infrared Light), HVL-ML20M (Underwater Video Light)
VSO0018	8717825941501	3.6V	3500mAh	NP-FS31	Sony	DCR-PC1, DCR-PC1E, DCR-PC2, DCR-PC2E, DCR-PC3, DCR-PC3E, DCR-PC4, DCR-PC4E, DCR-PC5, DCR-PC5E, DCR-PC5L, DCR-TRV1VE

VSO0019	8717825941341	7.2V	4000mAh	NP-F750 NP-F730 VW-VBD2E	Sony	<p>CCD-RV100, CCD-RV200, CCD-SC5, CCD-SC5/E, CCD-SC55, CCD-SC6, CCD-SC65, CCD-SC7, CCD-SC7/E, CCD-SC8/E, CCD-SC9, CCD-TR1, CCD-TR11, CCD-TR1100, CCD-TR1100E, CCD-TR12, CCD-TR18, CCD-TR18E, CCD-TR1E, CCD-TR2, CCD-TR200, CCD-TR205, CCD-TR215, CCD-TR2200, CCD-TR2200E, CCD-TR2300, CCD-TR2300E, CCD-TR280PK, CCD-TR290PK, CCD-TR3, CCD-TR300, CCD-TR3000, CCD-TR3000E, CCD-TR3100, CCD-TR3100E, CCD-TR311E, CCD-TR315, CCD-TR315E, CCD-TR317, CCD-TR3200, CCD-TR3200E, CCD-TR3300, CCD-TR3300E, CCD-TR411, CCD-TR411E, CCD-TR412E, CCD-TR413, CCD-TR414, CCD-TR415E, CCD-TR416, CCD-TR417, CCD-TR417E, CCD-TR425, CCD-TR425E, CCD-TR427, CCD-TR427E, CCD-TR500, CCD-TR511, CCD-TR511E, CCD-TR512E, CCD-TR515, CCD-TR515E, CCD-TR516, CCD-TR516E, CCD-TR517, CCD-TR57, CCD-TR610, CCD-TR617, CCD-TR617E, CCD-TR618, CCD-TR618E, CCD-TR640, CCD-TR640E, CCD-TR67, CCD-TR7000, CCD-TR710, CCD-TR713, CCD-TR713E, CCD-TR716, CCD-TR717, CCD-TR717E, CCD-TR718, CCD-TR718E, CCD-TR728, CCD-TR728E, CCD-TR730E, CCD-TR76, CCD-TR760E, CCD-TR810E, CCD-TR818, CCD-TR820, CCD-TR825, CCD-TR840, CCD-TR840E, CCD-TR845, CCD-TR845E, CCD-TR87, CCD-TR910, CCD-TR913, CCD-TR913E, CCD-TR917, CCD-TR918, CCD-TR918E, CCD-TR930, CCD-TR940, CCD-TR950, CCD-TR950E, CCD-TR97, CCD-TRT97, CCD-TRV101, CCD-TRV120, CCD-TRV130, CCD-TRV15, CCD-TRV16, CCD-TRV16E, CCD-TRV201, CCD-TRV215, CCD-TRV25, CCD-TRV26E, CCD-TRV27E, CCD-TRV28, CCD-TRV3, CCD-TRV3000, CCD-TRV310, CCD-TRV315, CCD-TRV318, CCD-TRV32, CCD-TRV330, CCD-TRV35, CCD-TRV36, CCD-TRV36E, CCD-TRV37, CCD-TRV37E, CCD-TRV4, CCD-TRV41, CCD-TRV416, CCD-TRV427, CCD-TRV43, CCD-TRV45K, CCD-TRV46, CCD-TRV46E, CCD-TRV47, CCD-TRV47E, CCD-TRV48, CCD-TRV48E, CCD-TRV49, CCD-TRV51, CCD-TRV517, CCD-TRV54E, CCD-TRV56E, CCD-TRV57, CCD-TRV57E, CCD-TRV58, CCD-TRV59, CCD-TRV59E, CCD-TRV615, CCD-TRV62, CCD-TRV620, CCD-TRV63, CCD-TRV64, CCD-TRV65, CCD-TRV66, CCD-TRV66E, CCD-TRV66K, CCD-TRV67, CCD-TRV67E, CCD-TRV68, CCD-TRV69, CCD-TRV71, CCD-TRV715, CCD-TRV716, CCD-TRV717, CCD-TRV72, CCD-TRV720, CCD-TRV728, CCD-TRV75, CCD-TRV77, CCD-TRV78, CCD-TRV78E, CCD-TRV80PK, CCD-TRV81, CCD-TRV815, CCD-TRV82, CCD-TRV85, CCD-TRV85K, CCD-TRV86PK, CCD-TRV87, CCD-TRV87E, CCD-TRV88, CCD-TRV9, CCD-TRV90, CCD-TRV900, CCD-TRV91, CCD-TRV92, CCD-TRV93, CCD-TRV930, CCD-TRV94, CCD-TRV940, CCD-TRV94E, CCD-TRV95, CCD-TRV95E, CCD-TRV95K, CCD-TRV98, CCD-TRV98E, CCD-TRV99, CVX-V18NS(Nightshot Camers), CVX-V18NSP(Nightshot Camers), DCR-PC115, DCR-PD150, DCR-PD170, DCR-TR7 Series, DCR-TR7000, DCR-TR7000E, DCR-TR700D, DCR-TR7100, DCR-TR7100E, DCR-TR8000, DCR-TR8000E, DCR-TR8100, DCR-TR8100E, DCR-TRU47E, DCR-TRV103, DCR-TRV110, DCR-TRV110E, DCR-TRV110K, DCR-TRV120, DCR-TRV120E, DCR-TRV125, DCR-TRV125E, DCR-TRV130, DCR-TRV130E, DCR-TRV203, DCR-TRV210, DCR-TRV210E, DCR-TRV220K, DCR-TRV310, DCR-TRV310E, DCR-TRV310K, DCR-TRV315, DCR-TRV320, DCR-TRV320E, DCR-TRV410, DCR-TRV420, DCR-TRV420E, DCR-TRV49E, DCR-TRV5, DCR-TRV510, DCR-TRV520, DCR-TRV520E, DCR-TRV525, DCR-TRV58E, DCR-TRV620, DCR-TRV620E, DCR-TRV620K, DCR-TRV7, DCR-TRV720, DCR-TRV720E, DCR-TRV735K, DCR-TRV820, DCR-TRV820E, DCR-TRV820K, DCR-TRV890, DCR-TRV9, DCR-TRV900, DCR-TRV900E, DCR-TRV935K, DCR-TV900, DCR-TV900E, DCR-TVX1000, DCR-TVX2000, DCR-TVX700, DCR-TVX9000, DCR-VX2000, DCR-VX2000E, DCR-VX2001, DCR-VX2100, DCR-VX2100E, DCR-VX700, DCR-VX9 Series, DCR-VX9000, DSR-200, DSR-DU1(Video Disk Unit), DSR-PD100, DSR-PD100A, DSR-PD100AP, DSR-PD150, DSR-PD170, DSR-PD190P, DSR-V10(Video Walkman), DSR-V10P(Video Walkman), GV-A100(Video Walkman), GV-A500, GV-A500E, GV-A700(Video Walkman), GV-D200(Video Walkman), GV-D300, GV-D300(Video Walkman), GV-D800(Video Walkman), GV-D900, GV-D900(Video Walkman), HDR-AX2000E, HDR-FX1, HDR-FX7, HDR-FX7E, HDR-Z1E, HVR-HD1000U, HVR-M10 PRO, HVR-M10C(videocassette recorder), HVR-M10E(videocassette recorder), HVR-M10N(videocassette recorder), HVR-M10P(videocassette recorder), HVR-M10U(videocassette recorder), HVR-V1J, HVR-V1U, HVR-Z1, HVR-Z1C, HVR-Z1E, HVR-Z1J, HVR-Z1N, HVR-Z1P, HVR-Z1U, HVR-Z5J, MVC-FDR1(Digital Mavica), MVC-FDR1E(Digital Mavica), MVC-FDR3(Digital Mavica), MVC-FDR3E(Digital Mavica), HVL-ML20 (Marine Light), EVO-250 (Video Recorder), MPK-DVF4, PBD-D50(DVD Player), PBD-V30(DVD Player), PLM-100(Glasstron), PLM-50(Glasstron), PLM-A35(Glasstron), PLM-A55(Glasstron), Q002-HDR1, UPX-2000(Printer), HVL-20DW (Video Light), HVL-20DW2(Video Light)</p>
---------	---------------	------	---------	------------------------------	------	--

VSO0020	8717825941440	7.2V	4200mAh	NP-FM90 NP-FM91 NP-QM90 N	Sony	<p>CCD-TR108, CCD-TR208, CCD-TR408, CCD-TR748, CCD-TR748E, CCD-TRV106K, CCD-TRV107, CCD-TRV108, CCD-TRV108E, CCD-TRV116, CCD-TRV118, CCD-TRV126, CCD-TRV128, CCD-TRV138, CCD-TRV140, CCD-TRV18, CCD-TRV19, CCD-TRV20, CCD-TRV208, CCD-TRV208E, CCD-TRV218, CCD-TRV218E, CCD-TRV228, CCD-TRV228E, CCD-TRV238, CCD-TRV238E, CCD-TRV240, CCD-TRV245, CCD-TRV25, CCD-TRV27, CCD-TRV308, CCD-TRV318, CCD-TRV328, CCD-TRV338, CCD-TRV340, CCD-TRV345, CCD-TRV408, CCD-TRV408E, CCD-TRV418, CCD-TRV418E, CCD-TRV425, CCD-TRV428, CCD-TRV428E, CCD-TRV438E, CCD-TRV50, CCD-TRV608, CCD-TRV730, CCD-TRV740, CCD-TRV840, CCD-TRV950, CCD-TRV96K, DCR-DVD100, DCR-DVD100E, DCR-DVD101, DCR-DVD101E, DCR-DVD200, DCR-DVD200E, DCR-DVD201, DCR-DVD201E, DCR-DVD300, DCR-DVD301, DCR-DVD91, DCR-DVD91E, DCR-HC1, DCR-HC1 PRO, DCR-HC14, DCR-HC14E, DCR-HC15, DCR-HC15E, DCR-HC88, DCR-PC100, DCR-PC101, DCR-PC101E, DCR-PC101K, DCR-PC103, DCR-PC103E, DCR-PC104, DCR-PC104E, DCR-PC105, DCR-PC105E, DCR-PC105K, DCR-PC110, DCR-PC110E, DCR-PC115, DCR-PC115E, DCR-PC120, DCR-PC120BT, DCR-PC120E, DCR-PC300K, DCR-PC330, DCR-PC330E, DCR-PC6, DCR-PC6E, DCR-PC8, DCR-PC8E, DCR-PC9, DCR-PC9E, DCR-TR238, DCR-TRV10, DCR-TRV108, DCR-TRV10E, DCR-TRV11, DCR-TRV116, DCR-TRV116E, DCR-TRV118E, DCR-TRV11E, DCR-TRV12, DCR-TRV12E, DCR-TRV14, DCR-TRV140, DCR-TRV140E, DCR-TRV140U, DCR-TRV145, DCR-TRV145E, DCR-TRV14E, DCR-TRV15, DCR-TRV150, DCR-TRV15E, DCR-TRV16, DCR-TRV16E, DCR-TRV17, DCR-TRV17E, DCR-TRV17K, DCR-TRV18, DCR-TRV18E, DCR-TRV18K, DCR-TRV19, DCR-TRV19E, DCR-TRV20, DCR-TRV208, DCR-TRV20E, DCR-TRV215, DCR-TRV218, DCR-TRV22, DCR-TRV228, DCR-TRV22E, DCR-TRV22K, DCR-TRV230, DCR-TRV230E, DCR-TRV235, DCR-TRV235E, DCR-TRV238, DCR-TRV238E, DCR-TRV239, DCR-TRV239E, DCR-TRV24, DCR-TRV240, DCR-TRV240E, DCR-TRV240K, DCR-TRV245, DCR-TRV245E, DCR-TRV24E, DCR-TRV25, DCR-TRV250, DCR-TRV250E, DCR-TRV255, DCR-TRV255E, DCR-TRV25E, DCR-TRV260, DCR-TRV265, DCR-TRV265E, DCR-TRV27, DCR-TRV270, DCR-TRV270E, DCR-TRV27E, DCR-TRV280, DCR-TRV285, DCR-TRV285E, DCR-TRV30, DCR-TRV300K, DCR-TRV30E, DCR-TRV325, DCR-TRV33, DCR-TRV330, DCR-TRV330E, DCR-TRV33E, DCR-TRV33K, DCR-TRV340, DCR-TRV340E, DCR-TRV345, DCR-TRV345E, DCR-TRV350, DCR-TRV351, DCR-TRV355, DCR-TRV355E, DCR-TRV360, DCR-TRV361, DCR-TRV38, DCR-TRV39, DCR-TRV40, DCR-TRV408, DCR-TRV40E, DCR-TRV418, DCR-TRV428, DCR-TRV430, DCR-TRV430E, DCR-TRV438, DCR-TRV460, DCR-TRV460E, DCR-TRV480, DCR-TRV480E, DCR-TRV50, DCR-TRV50E, DCR-TRV530, DCR-TRV530E, DCR-TRV6, DCR-TRV60, DCR-TRV60E, DCR-TRV6E, DCR-TRV70, DCR-TRV70K, DCR-TRV725, DCR-TRV730, DCR-TRV730E, DCR-TRV738, DCR-TRV738E, DCR-TRV740, DCR-TRV740E, DCR-TRV748, DCR-TRV75, DCR-TRV75E, DCR-TRV8, DCR-TRV80, DCR-TRV80E, DCR-TRV828, DCR-TRV828E, DCR-TRV830, DCR-TRV830E, DCR-TRV840, DCR-TRV8K, DCR-TRV940, DCR-TRV940E, DCR-TRV950, DCR-TRV950E, DCR-TV480, DSR-PDX10, GV-D1000(Video Walkman), HDR-HC1, HDR-HC1E, HDR-SR1, HDR-SR1e, HDR-UX1, HDR-UX1e, HVR-A1U PRO, HVR-AV1, HVL-IRM(Infrared Light), HVL-ML20M (Underwater Video Light)</p>
---------	---------------	------	---------	---------------------------------	------	--

VSO0023	8717825942256	6.8V	750mAh	NP-FH50 (met info chip)	Sony	<p>A230, A330, A380, Alpha DSLR-A230, Alpha DSLR-A290, Alpha DSLR-A330, Alpha DSLR-A380, Alpha DSLR-A390, DSLR-A230, DSLR-A330, DSLR-A380, Cyber-shot DSC-HX1, Cyber-shot DSC-HX100V, Cyber-shot DSC-HX200V, DCR-DVD103, DCR-DVD105, DCR-DVD105E, DCR-DVD106, DCR-DVD106E, DCR-DVD108, DCR-DVD109, DCR-DVD109E, DCR-DVD110, DCR-DVD110E, DCR-DVD115, DCR-DVD115E, DCR-DVD150, DCR-DVD202E, DCR-DVD203, DCR-DVD203E, DCR-DVD205, DCR-DVD205E, DCR-DVD304E, DCR-DVD305, DCR-DVD305E, DCR-DVD306, DCR-DVD306E, DCR-DVD308, DCR-DVD308E, DCR-DVD310, DCR-DVD310E, DCR-DVD403, DCR-DVD403E, DCR-DVD404E, DCR-DVD405, DCR-DVD405E, DCR-DVD406, DCR-DVD406E, DCR-DVD407E, DCR-DVD408, DCR-DVD410, DCR-DVD410E, DCR-DVD450, DCR-DVD505, DCR-DVD505E, DCR-DVD506, DCR-DVD506E, DCR-DVD508, DCR-DVD510, DCR-DVD510E, DCR-DVD602, DCR-DVD602E, DCR-DVD605, DCR-DVD605E, DCR-DVD610, DCR-DVD653, DCR-DVD653E, DCR-DVD703, DCR-DVD703E, DCR-DVD705, DCR-DVD705E, DCR-DVD708, DCR-DVD708E, DCR-DVD710, DCR-DVD755, DCR-DVD755E, DCR-DVD803, DCR-DVD803E, DCR-DVD805, DCR-DVD805E, DCR-DVD808E, DCR-DVD810, DCR-DVD905, DCR-DVD905E, DCR-DVD908E, DCR-DVD910, DCR-DVD92, DCR-DVD92E, DCR-HC16, DCR-HC16E, DCR-HC17, DCR-HC17E, DCR-HC18, DCR-HC18E, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC21E, DCR-HC22E, DCR-HC23E, DCR-HC24E, DCR-HC26, DCR-HC26E, DCR-HC27, DCR-HC27E, DCR-HC28, DCR-HC28E, DCR-HC30, DCR-HC30E, DCR-HC30G, DCR-HC30L, DCR-HC30S, DCR-HC32, DCR-HC32E, DCR-HC33E, DCR-HC35E, DCR-HC36, DCR-HC36E, DCR-HC37, DCR-HC37E, DCR-HC38, DCR-HC38E, DCR-HC39E, DCR-HC40, DCR-HC40E, DCR-HC40S, DCR-HC40W, DCR-HC41, DCR-HC42, DCR-HC42E, DCR-HC43E, DCR-HC44E, DCR-HC45, DCR-HC45E, DCR-HC46, DCR-HC46E, DCR-HC47, DCR-HC47E, DCR-HC48, DCR-HC48E, DCR-HC5, DCR-HC51, DCR-HC51E, DCR-HC52, DCR-HC52E, DCR-HC53, DCR-HC53E, DCR-HC62, DCR-HC62E, DCR-HC65, DCR-HC85, DCR-HC85E, DCR-HC94E, DCR-HC96, DCR-HC96E, DCR-30, DCR-SR100, DCR-SR100E, DCR-SR190, DCR-SR190E, DCR-SR200, DCR-SR200C, DCR-SR200E, DCR-SR210, DCR-SR210E, DCR-SR220, DCR-SR220D, DCR-SR290, DCR-SR290E, DCR-SR300, DCR-SR300C, DCR-SR300E, DCR-SR30E, DCR-SR32, DCR-SR32E, DCR-SR35, DCR-SR35E, DCR-SR36, DCR-SR36E, DCR-SR37, DCR-SR38, DCR-SR40, DCR-SR40E, DCR-SR42, DCR-SR42A, DCR-SR42E, DCR-SR45, DCR-SR47E, DCR-SR50, DCR-SR50E, DCR-SR52, DCR-SR52E, DCR-SR55, DCR-SR55E, DCR-SR57, DCR-SR60, DCR-SR60E, DCR-SR62, DCR-SR62E, DCR-SR65, DCR-SR65, DCR-SR70E, DCR-SR72, DCR-SR72E, DCR-SR75, DCR-SR75E, DCR-SR77, DCR-SR80, DCR-SR80E, DCR-SR82, DCR-SR82C, DCR-SR82E, DCR-SR85, DCR-SR90E, DCR-SX30, DCR-SX31, DCR-SX50, HDR-CX100, HDR-CX100E, HDR-CX105E, HDR-CX106E, HDR-CX11E, HDR-CX12, HDR-CX12E, HDR-CX300, HDR-CX500, HDR-CX500V, HDR-CX505VE, HDR-CX520, HDR-CX520V, HDR-CX520VE, HDR-CX6, HDR-CX6EK, HDR-CX6R, HDR-CX7, HDR-CX7K/E, HDR-HC3, HDR-HC3E, HDR-HC3HK1, HDR-HC5, HDR-HC5E, HDR-HC7, HDR-HC7E, HDR-HC9, HDR-HC9/E, HDR-HC9E, HDR-SR10, HDR-SR10/E, HDR-SR10D, HDR-SR10E, HDR-SR11, HDR-SR11/E, HDR-SR11E, HDR-SR12, HDR-SR12/E, HDR-SR12E, HDR-SR5, HDR-SR5C, HDR-SR5E, HDR-SR7, HDR-SR7E, HDR-SR8, HDR-SR8E, HDR-TG1, HDR-TG1/E, HDR-TG1E, HDR-TG3, HDR-TG3E, HDR-TG5V, HDR-TG7, HDR-UX10, HDR-UX19, HDR-UX19E, HDR-UX20, HDR-UX20/E, HDR-UX3, HDR-UX3E, HDR-UX5, HDR-UX5E, HDR-UX7, HDR-UX7E, HDR-UX9, HDR-UX9E, HDR-XR100, HDR-XR105E, HDR-XR106E, HDR-XR200VE, HDR-XR500VE, HDR-XR520VE, HD422</p>
---------	---------------	------	--------	-------------------------	------	---

VSO0024	8717825942195	6.8V	1500mAh	NP-FH70 (met info chip)	Sony	DCR-DVD103, DCR-DVD105, DCR-DVD105E, DCR-DVD106, DCR-DVD106E, DCR-DVD108, DCR-DVD109, DCR-DVD109E, DCR-DVD110, DCR-DVD110E, DCR-DVD115, DCR-DVD115E, DCR-DVD150, DCR-DVD202E, DCR-DVD203, DCR-DVD203E, DCR-DVD205, DCR-DVD205E, DCR-DVD304E, DCR-DVD305, DCR-DVD305E, DCR-DVD306, DCR-DVD306E, DCR-DVD308, DCR-DVD308E, DCR-DVD310, DCR-DVD310E, DCR-DVD403, DCR-DVD403E, DCR-DVD404E, DCR-DVD405, DCR-DVD405E, DCR-DVD406, DCR-DVD406E, DCR-DVD407E, DCR-DVD408, DCR-DVD410, DCR-DVD410E, DCR-DVD450, DCR-DVD505, DCR-DVD505E, DCR-DVD506, DCR-DVD506E, DCR-DVD508, DCR-DVD510, DCR-DVD510E, DCR-DVD602, DCR-DVD602E, DCR-DVD605, DCR-DVD605E, DCR-DVD610, DCR-DVD653, DCR-DVD653E, DCR-DVD703, DCR-DVD703E, DCR-DVD705, DCR-DVD705E, DCR-DVD708, DCR-DVD708E, DCR-DVD710, DCR-DVD755, DCR-DVD755E, DCR-DVD803, DCR-DVD803E, DCR-DVD805, DCR-DVD805E, DCR-DVD808E, DCR-DVD810, DCR-DVD905, DCR-DVD905E, DCR-DVD908E, DCR-DVD910, DCR-DVD92, DCR-DVD92E, DCR-HC16, DCR-HC16E, DCR-HC17, DCR-HC17E, DCR-HC18, DCR-HC18E, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC21E, DCR-HC22E, DCR-HC23E, DCR-HC24E, DCR-HC26, DCR-HC26E, DCR-HC27, DCR-HC27E, DCR-HC28, DCR-HC28E, DCR-HC30, DCR-HC30E, DCR-HC30G, DCR-HC30L, DCR-HC30S, DCR-HC32, DCR-HC32E, DCR-HC33E, DCR-HC35E, DCR-HC36, DCR-HC36E, DCR-HC37, DCR-HC37E, DCR-HC38, DCR-HC38E, DCR-HC39E, DCR-HC40, DCR-HC40E, DCR-HC40S, DCR-HC40W, DCR-HC41, DCR-HC42, DCR-HC42E, DCR-HC43E, DCR-HC44E, DCR-HC45, DCR-HC45E, DCR-HC46, DCR-HC46E, DCR-HC47, DCR-HC47E, DCR-HC48, DCR-HC48E, DCR-HC5, DCR-HC51, DCR-HC51E, DCR-HC52, DCR-HC52E, DCR-HC53, DCR-HC53E, DCR-HC62, DCR-HC62E, DCR-HC65, DCR-HC85, DCR-HC85E, DCR-HC94E, DCR-HC96, DCR-HC96E, DCR-30, DCR-SR100, DCR-SR100E, DCR-SR190, DCR-SR190E, DCR-SR200, DCR-SR200C, DCR-SR200E, DCR-SR210, DCR-SR210E, DCR-SR220, DCR-SR220D, DCR-SR290, DCR-SR290E, DCR-SR300, DCR-SR300C, DCR-SR300E, DCR-SR30E, DCR-SR32, DCR-SR32E, DCR-SR33E, DCR-SR35, DCR-SR35E, DCR-SR36, DCR-SR36E, DCR-SR37, DCR-SR38, DCR-SR40, DCR-SR40E, DCR-SR42, DCR-SR42A, DCR-SR42E, DCR-SR45, DCR-SR47E, DCR-SR50, DCR-SR50E, DCR-SR52, DCR-SR52E, DCR-SR55, DCR-SR55E, DCR-SR57, DCR-SR60, DCR-SR60E, DCR-SR62, DCR-SR62E, DCR-SR65, DCR-SR65, DCR-SR70E, DCR-SR72, DCR-SR72E, DCR-SR75, DCR-SR75E, DCR-SR77, DCR-SR80, DCR-SR80E, DCR-SR82, DCR-SR82C, DCR-SR82E, DCR-SR85, DCR-SR90E, DCR-SX30, DCR-SX31, DCR-SX50, HDR-CX100, HDR-CX100E, HDR-CX105E, HDR-CX106E, HDR-CX11E, HDR-CX12, HDR-CX12E, HDR-CX300, HDR-CX500, HDR-CX500V, HDR-CX505VE, HDR-CX520, HDR-CX520V, HDR-CX520VE, HDR-CX6, HDR-CX6EK, HDR-CX6R, HDR-CX7, HDR-CX7K/E, HDR-HC3, HDR-HC3E, HDR-HC3HK1, HDR-HC5, HDR-HC5E, HDR-HC7, HDR-HC7E, HDR-HC9, HDR-HC9/E, HDR-HC9E, HDR-SR10, HDR-SR10/E, HDR-SR10D, HDR-SR10E, HDR-SR11, HDR-SR11/E, HDR-SR11E, HDR-SR12, HDR-SR12/E, HDR-SR12E, HDR-SR5, HDR-SR5C, HDR-SR5E, HDR-SR7, HDR-SR7E, HDR-SR8, HDR-SR8E, HDR-TG3, HDR-TG7, HDR-UX10, HDR-UX19, HDR-UX19E, HDR-UX20, HDR-UX20/E, HDR-UX3, HDR-UX3E, HDR-UX5, HDR-UX5E, HDR-UX7, HDR-UX7E, HDR-UX9, HDR-UX9E, HDR-XR100, HDR-XR100E, HDR-XR105E, HDR-XR106E, HDR-XR200E, HDR-XR200V, HDR-XR200VE, HDR-XR500E, HDR-XR500V, HDR-XR500VE, HDR-XR520E, HDR-XR520V, HDR-XR520VE, HD422
---------	---------------	------	---------	-------------------------	------	---

VSO0025	8717825942201	6.8V	3300mAh	NP-FH100 (met info chip)	Sony	DCR-DVD103, DCR-DVD105, DCR-DVD105E, DCR-DVD106, DCR-DVD106E, DCR-DVD108, DCR-DVD109, DCR-DVD109E, DCR-DVD110, DCR-DVD110E, DCR-DVD115, DCR-DVD115E, DCR-DVD150, DCR-DVD202E, DCR-DVD203, DCR-DVD203E, DCR-DVD205, DCR-DVD205E, DCR-DVD304E, DCR-DVD305, DCR-DVD305E, DCR-DVD306, DCR-DVD306E, DCR-DVD308, DCR-DVD308E, DCR-DVD310, DCR-DVD310E, DCR-DVD403, DCR-DVD403E, DCR-DVD404E, DCR-DVD405, DCR-DVD405E, DCR-DVD406, DCR-DVD406E, DCR-DVD407E, DCR-DVD408, DCR-DVD410, DCR-DVD410E, DCR-DVD450, DCR-DVD505, DCR-DVD505E, DCR-DVD506, DCR-DVD506E, DCR-DVD508, DCR-DVD510, DCR-DVD510E, DCR-DVD602, DCR-DVD602E, DCR-DVD605, DCR-DVD605E, DCR-DVD610, DCR-DVD653, DCR-DVD653E, DCR-DVD703, DCR-DVD703E, DCR-DVD705, DCR-DVD705E, DCR-DVD708, DCR-DVD708E, DCR-DVD710, DCR-DVD755, DCR-DVD755E, DCR-DVD803, DCR-DVD803E, DCR-DVD805, DCR-DVD805E, DCR-DVD808E, DCR-DVD810, DCR-DVD905, DCR-DVD905E, DCR-DVD908E, DCR-DVD910, DCR-DVD92, DCR-DVD92E, DCR-HC16, DCR-HC16E, DCR-HC17, DCR-HC17E, DCR-HC18, DCR-HC18E, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC21E, DCR-HC22E, DCR-HC23E, DCR-HC24E, DCR-HC26, DCR-HC26E, DCR-HC27, DCR-HC27E, DCR-HC28, DCR-HC28E, DCR-HC30, DCR-HC30E, DCR-HC30G, DCR-HC30L, DCR-HC30S, DCR-HC32, DCR-HC32E, DCR-HC33E, DCR-HC35E, DCR-HC36, DCR-HC36E, DCR-HC37, DCR-HC37E, DCR-HC38, DCR-HC38E, DCR-HC39E, DCR-HC40, DCR-HC40E, DCR-HC40S, DCR-HC40W, DCR-HC41, DCR-HC42, DCR-HC42E, DCR-HC43E, DCR-HC44E, DCR-HC45, DCR-HC45E, DCR-HC46, DCR-HC46E, DCR-HC47, DCR-HC47E, DCR-HC48, DCR-HC48E, DCR-HC5, DCR-HC51, DCR-HC51E, DCR-HC52, DCR-HC52E, DCR-HC53, DCR-HC53E, DCR-HC62, DCR-HC62E, DCR-HC65, DCR-HC85, DCR-HC85E, DCR-HC94E, DCR-HC96, DCR-HC96E, DCR-30, DCR-SR100, DCR-SR100E, DCR-SR190, DCR-SR190E, DCR-SR200, DCR-SR200C, DCR-SR200E, DCR-SR210, DCR-SR210E, DCR-SR220, DCR-SR220D, DCR-SR290, DCR-SR290E, DCR-SR300, DCR-SR300C, DCR-SR300E, DCR-SR30E, DCR-SR32, DCR-SR32E, DCR-SR35, DCR-SR35E, DCR-SR36, DCR-SR36E, DCR-SR37, DCR-SR38, DCR-SR40, DCR-SR40E, DCR-SR42, DCR-SR42A, DCR-SR42E, DCR-SR45, DCR-SR47E, DCR-SR50, DCR-SR50E, DCR-SR52, DCR-SR52E, DCR-SR55, DCR-SR55E, DCR-SR57, DCR-SR60, DCR-SR60E, DCR-SR62, DCR-SR62E, DCR-SR65, DCR-SR65, DCR-SR70E, DCR-SR72, DCR-SR72E, DCR-SR75, DCR-SR75E, DCR-SR77, DCR-SR80, DCR-SR80E, DCR-SR82, DCR-SR82C, DCR-SR82E, DCR-SR85, DCR-SR90E, DCR-SX30, DCR-SX31, DCR-SX50, HDR-CX100, HDR-CX100E, HDR-CX105E, HDR-CX106E, HDR-CX11E, HDR-CX12, HDR-CX12E, HDR-CX300, HDR-CX500, HDR-CX500V, HDR-CX505VE, HDR-CX520, HDR-CX520V, HDR-CX520VE, HDR-CX6, HDR-CX6EK, HDR-CX6R, HDR-CX7, HDR-CX7K/E, HDR-HC3, HDR-HC3E, HDR-HC3HK1, HDR-HC5, HDR-HC5E, HDR-HC7, HDR-HC7E, HDR-HC9, HDR-HC9/E, HDR-HC9E, HDR-SR10, HDR-SR10/E, HDR-SR10D, HDR-SR10E, HDR-SR11, HDR-SR11/E, HDR-SR11E, HDR-SR12, HDR-SR12/E, HDR-SR12E, HDR-SR5, HDR-SR5C, HDR-SR5E, HDR-SR7, HDR-SR7E, HDR-SR8, HDR-SR8E, HDR-TG3, HDR-TG7, HDR-UX10, HDR-UX19, HDR-UX19E, HDR-UX20, HDR-UX20/E, HDR-UX3, HDR-UX3E, HDR-UX5, HDR-UX5E, HDR-UX7, HDR-UX7E, HDR-UX9, HDR-UX9E, HDR-XR100, HDR-XR100E, HDR-XR105E, HDR-XR106E, HDR-XR200E, HDR-XR200V, HDR-XR200VE, HDR-XR500E, HDR-XR500V, HDR-XR500VE, HDR-XR520E, HDR-XR520V, HDR-XR520VE, HD422
VSO0026	8717825942003	7.2V	1600mAh	NP-FM500H	Sony	DSLR a560, DSLR a580, DSLR-A100, DSLR-A100/B, DSLR-A100H, DSLR-A100K, DSLR-A100K/B, DSLR-A100W, DSLR-A100W/B, DSLR-A200, DSLR-A200K, DSLR-A200W, DSLR-A300, DSLR-A300K, DSLR-A300K/N, DSLR-A300X, DSLR-A350, DSLR-A350H, DSLR-A350K, DSLR-A350X, DSLR-A450, DSLR-A450L, DSLR-A450Y, DSLR-A500, DSLR-A500L, DSLR-A500Y, DSLR-A550, DSLR-A550L, DSLR-A550Y, DSLR-A560, DSLR-A57, DSLR-A58, DSLR-A580, DSLR-A580L, DSLR-A580Y, DSLR-A700, DSLR-A700K, DSLR-A700P, DSLR-A700Z, DSLR-A77 II, DSLR-A850, DSLR-A850Q, DSLR-A900, SLT-A58K, SLT-A65VL, SLT-A77V, SLT-A77VK, SLT-A77VQ, SLT-A77 II

VSO0028	8717825942799	7.2V	7400mAh	NP-F970	Sony	<p>NPFM500H, NPFM55H, NP-FM500H, NP-FM55H, MK-180T, CCD-RV100, CCD-RV200, CCD-SC5, CCD-SC5/E, CCD-SC6, CCD-SC65, CCD-SC7, CCD-SC7/E, CCD-SC8/E, CCD-SC9, CCD-TR1, CCD-TR11, CCD-TR1100E, CCD-TR12, CCD-TR18, CCD-TR18E, CCD-TR1E, CCD-TR2, CCD-TR200, CCD-TR205, CCD-TR215, CCD-TR2200E, CCD-TR2300, CCD-TR2300E, CCD-TR280PK, CCD-TR290PK, CCD-TR3, CCD-TR300, CCD-TR3000, CCD-TR3000E, CCD-TR3100E, CCD-TR311E, CCD-TR315, CCD-TR315E, CCD-TR317, CCD-TR3200E, CCD-TR3300, CCD-TR3300E, CCD-TR411E, CCD-TR412E, CCD-TR413, CCD-TR414, CCD-TR415E, CCD-TR416, CCD-TR417, CCD-TR417E, CCD-TR425E, CCD-TR427, CCD-TR427E, CCD-TR500, CCD-TR511E, CCD-TR512E, CCD-TR515E, CCD-TR516, CCD-TR516E, CCD-TR517, CCD-TR57, CCD-TR610, CCD-TR617, CCD-TR617E, CCD-TR618, CCD-TR618E, CCD-TR640E, CCD-TR67, CCD-TR710, CCD-TR713E, CCD-TR716, CCD-TR717, CCD-TR717E, CCD-TR718, CCD-TR718E, CCD-TR728, CCD-TR728E, CCD-TR730E, CCD-TR76, CCD-TR760E, CCD-TR810E, CCD-TR818, CCD-TR840E, CCD-TR845E, CCD-TR87, CCD-TR910, CCD-TR913E, CCD-TR917, CCD-TR918, CCD-TR918E, CCD-TR930, CCD-TR940, CCD-TR950E, CCD-TR97, CCD-TR97, CCD-TRV15, CCD-TRV16, CCD-TRV16E, CCD-TRV201, CCD-TRV215, CCD-TRV25, CCD-TRV26E, CCD-TRV27E, CCD-TRV3000, CCD-TRV315, CCD-TRV35, CCD-TRV36, CCD-TRV36E, CCD-TRV37, CCD-TRV37E, CCD-TRV4, CCD-TRV41, CCD-TRV43, CCD-TRV45K, CCD-TRV46, CCD-TRV46E, CCD-TRV47, CCD-TRV47E, CCD-TRV48, CCD-TRV48E, CCD-TRV49, CCD-TRV51, CCD-TRV517, CCD-TRV54E, CCD-TRV56E, CCD-TRV57, CCD-TRV57E, CCD-TRV58, CCD-TRV59, CCD-TRV59E, CCD-TRV615, CCD-TRV62, CCD-TRV63, CCD-TRV65, CCD-TRV66, CCD-TRV66E, CCD-TRV66K, CCD-TRV67, CCD-TRV67E, CCD-TRV68, CCD-TRV715, CCD-TRV715, CCD-TRV716, CCD-TRV72, CCD-TRV720, CCD-TRV75, CCD-TRV78, CCD-TRV78E, CCD-TRV80PK, CCD-TRV81, CCD-TRV815, CCD-TRV82, CCD-TRV85, CCD-TRV85K, CCD-TRV86PK, CCD-TRV87, CCD-TRV87E, CCD-TRV88, CCD-TRV90, CCD-TRV91, CCD-TRV92, CCD-TRV93, CCD-TRV930, CCD-TRV940, CCD-TRV94E, CCD-TRV95, CCD-TRV95E, CCD-TRV95K, CCD-TRV98, CCD-TRV98E, CCD-TRV99, CVX-V18NS(Nightshot Camers), CVX-V18NSP(Nightshot Camers), DCR-TR7 Series, DCR-TR7000, DCR-TR7000E, DCR-TR7100E, DCR-TR8000, DCR-TR8000E, DCR-TR8100, DCR-TR8100E, DCR-TRU47E, DCR-TRV103, DCR-TRV110, DCR-TRV110E, DCR-TRV110K, DCR-TRV120, DCR-TRV120E, DCR-TRV125, DCR-TRV125E, DCR-TRV130, DCR-TRV130E, DCR-TRV203, DCR-TRV210, DCR-TRV210E, DCR-TRV220K, DCR-TRV310, DCR-TRV310E, DCR-TRV310K, DCR-TRV315, DCR-TRV320, DCR-TRV320E, DCR-TRV420, DCR-TRV420E, DCR-TRV49E, DCR-TRV5, DCR-TRV510, DCR-TRV520, DCR-TRV520E, DCR-TRV525, DCR-TRV58E, DCR-TRV620, DCR-TRV620E, DCR-TRV620K, DCR-TRV7, DCR-TRV720, DCR-TRV720E, DCR-TRV735K, DCR-TRV820, DCR-TRV820E, DCR-TRV820K, DCR-TRV9, DCR-TRV900, DCR-TRV900E, DCR-TRV935K, DCR-TV900, DCR-TV900E, DCR-VX2000, DCR-VX2000E, DCR-VX2001, DCR-VX2100, DCR-VX2100E, DCR-VX9 Series, DCR-VX9000, DSR-200, DSR-DU1(Video Disk Unit), DSR-PD100, DSR-PD100A, DSR-PD100AP, DSR-PD190P, DSR-V10(Video Walkman), DSR-V10P(Video Walkman), GV-A100(Video Walkman), GV-A500, GV-A500E, GV-A700(Video Walkman), GV-D200(Video Walkman), GV-D300(Video Walkman), GV-D800(Video Walkman), GV-D900(Video Walkman), HDR-AX2000, HDR-AX2000E, HDR-FX1, HDR-FX7, HDR-FX7E, HVR-HD1000U, HVR-M10C(videocassette recorder), HVR-M10E(videocassette recorder), HVR-M10N(videocassette recorder), HVR-M10P(videocassette recorder), HVR-M10U(videocassette recorder), HVR-V1J, HVR-V1U, HVR-Z1, HVR-Z1C, HVR-Z1E, HVR-Z1J, HVR-Z1N, HVR-Z1P, HVR-Z1U, HVR-Z5J, MVC-FDR1(Digital Mavica), MVC-FDR1E(Digital Mavica), MVC-FDR3(Digital Mavica), MVC-FDR3E(Digital Mavica), HVL-ML20 (Marine Light), EVO-250 (Video Recorder), MPK-DVF4, PBD-D50(DVD Player), PBD-V30(DVD Player), PLM-100(Glasstron), PLM-50(Glasstron), PLM-A35(Glasstron), PLM-A55(Glasstron), Q002-HDR1, UPX-2000(Printer), HVL-20DW (Video Light), HVL-20DW2(Video Light)</p>
---------	---------------	------	---------	---------	------	--

VSO0029	8718226220981	6.8V	850mAh	NP-FV50 (met info chip)	Sony	DCR-DVD103, DCR-DVD105, DCR-DVD105E, DCR-DVD106, DCR-DVD106E, DCR-DVD108, DCR-DVD108E, DCR-DVD109, DCR-DVD109E, DCR-DVD110E, DCR-DVD115E, DCR-DVD202E, DCR-DVD203, DCR-DVD203E, DCR-DVD205, DCR-DVD205E, DCR-DVD304E, DCR-DVD305, DCR-DVD305E, DCR-DVD306, DCR-DVD306E, DCR-DVD308, DCR-DVD310E, DCR-DVD403, DCR-DVD403E, DCR-DVD404E, DCR-DVD405, DCR-DVD405E, DCR-DVD406, DCR-DVD407E, DCR-DVD408, DCR-DVD408E, DCR-DVD410E, DCR-DVD450E, DCR-DVD505, DCR-DVD505E, DCR-DVD506, DCR-DVD506E, DCR-DVD508, DCR-DVD508E, DCR-DVD510E, DCR-DVD602, DCR-DVD602E, DCR-DVD605, DCR-DVD605E, DCR-DVD610, DCR-DVD650E, DCR-DVD653, DCR-DVD653E, DCR-DVD703, DCR-DVD703E, DCR-DVD705, DCR-DVD705E, DCR-DVD708, DCR-DVD708E, DCR-DVD710, DCR-DVD755, DCR-DVD755E, DCR-DVD803, DCR-DVD803E, DCR-DVD805, DCR-DVD805E, DCR-DVD808E, DCR-DVD810, DCR-DVD850E, DCR-DVD905, DCR-DVD905E, DCR-DVD908E, DCR-DVD910, DCR-DVD92, DCR-DVD92E, DCR-HC16, DCR-HC16E, DCR-HC17, DCR-HC17E, DCR-HC18, DCR-HC18E, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC21E, DCR-HC22E, DCR-HC23E, DCR-HC24E, DCR-HC26, DCR-HC26E, DCR-HC27, DCR-HC27E, DCR-HC28, DCR-HC28E, DCR-HC30, DCR-HC30E, DCR-HC30G, DCR-HC30L, DCR-HC30S, DCR-HC32, DCR-HC32E, DCR-HC33E, DCR-HC35E, DCR-HC36, DCR-HC36E, DCR-HC37, DCR-HC37E, DCR-HC38, DCR-HC38E, DCR-HC39E, DCR-HC40, DCR-HC40E, DCR-HC40S, DCR-HC40W, DCR-HC41, DCR-HC42, DCR-HC42E, DCR-HC43E, DCR-HC44E, DCR-HC45, DCR-HC45E, DCR-HC46, DCR-HC46E, DCR-HC47, DCR-HC47E, DCR-HC48, DCR-HC48E, DCR-HC51E, DCR-HC52, DCR-HC53E, DCR-HC62, DCR-HC62E, DCR-HC65, DCR-HC85, DCR-HC85E, DCR-HC94E, DCR-HC96, DCR-HC96E, DCR-30, DCR-SR100, DCR-SR100E, DCR-SR10D, DCR-SR15, DCR-SR15E, DCR-SR190E, DCR-SR200, DCR-SR200C, DCR-SR200E, DCR-SR20E, DCR-SR210E, DCR-SR220, DCR-SR220D, DCR-SR290E, DCR-SR300, DCR-SR300C, DCR-SR300E, DCR-SR30E, DCR-SR32E, DCR-SR33, DCR-SR33E, DCR-SR34, DCR-SR35E, DCR-SR36E, DCR-SR37E, DCR-SR38E, DCR-SR40, DCR-SR40E, DCR-SR42, DCR-SR42A, DCR-SR42E, DCR-SR45, DCR-SR47E, DCR-SR50, DCR-SR50E, DCR-SR52E, DCR-SR53, DCR-SR55E, DCR-SR57E, DCR-SR58, DCR-SR58E, DCR-SR60, DCR-SR60E, DCR-SR62, DCR-SR62E, DCR-SR65, DCR-SR68/R, DCR-SR68E, DCR-SR68S, DCR-SR70E, DCR-SR72E, DCR-SR73, DCR-SR75E, DCR-SR77E, DCR-SR78, DCR-SR78E, DCR-SR80, DCR-SR80E, DCR-SR82, DCR-SR82C, DCR-SR82E, DCR-SR85, DCR-SR87, DCR-SR88, DCR-SR90E, DCR-SX15, DCR-SX15E, DCR-SX20EK, DCR-SX30E, DCR-SX31E, DCR-SX33, DCR-SX33E, DCR-SX34, DCR-SX34E, DCR-SX41, DCR-SX43R, DCR-SX44, DCR-SX45, DCR-SX45B, DCR-SX45E, DCR-SX45EB, DCR-SX45EL, DCR-SX45ER, DCR-SX45L, DCR-SX45R, DCR-SX45S, DCR-SX50E, DCR-SX53, DCR-SX53E, DCR-SX63, DCR-SX65, DCR-SX65B, DCR-SX65E, DCR-SX65S, DCR-SX73, DCR-SX73E, DCR-SX83, DCR-SX85, DCR-SX85E, DCR-SX85S, DCR-SX85S, HDE-SX43E, HDE-SX65E, DCR-CX100, HDR-CX100E, HDR-CX105E, HDR-CX105VE, HDR-CX106E, HDR-CX106VE, HDR-CX110, HDR-CX110/L, HDR-CX110/R, HDR-CX110B, HDR-CX115, HDR-CX115E, HDR-CX115VE, HDR-CX116, HDR-CX116E, HDR-CX116VE, HDR-CX11E, HDR-CX11VE, HDR-CX12, HDR-CX120, HDR-CX12E, HDR-CX130, HDR-CX130B, HDR-CX130E, HDR-CX130EB, HDR-CX130EL, HDR-CX130ER, HDR-CX130R, HDR-CX150, HDR-CX155, HDR-CX155E, HDR-CX155VE, HDR-CX160, HDR-CX160B, HDR-CX160E, HDR-CX170, HDR-CX180, HDR-CX180E, HDR-CX180EB, HDR-CX180EL, HDR-CX180ER, HDR-CX180ES, HDR-CX190E, HDR-CX200E, HDR-CX210E, HDR-CX220E, HDR-CX250E, HDR-CX260VE, HDR-CX260E, HDR-CX280E, HDR-CX300, HDR-CX300E, HDR-CX305, HDR-CX305E, HDR-CX305VE, HDR-CX330, HDR-CX350, HDR-CX350E, HDR-CX350V, HDR-CX350VE, HDR-CX360E, HDR-CX360V, HDR-CX360VE, HDR-CX370V, HDR-CX410VE, HDR-CX500, HDR-CX500V, HDR-CX505VE, HDR-CX520, HDR-CX520V, HDR-CX520VE, HDR-CX550, HDR-CX550E, HDR-CX550V, HDR-CX550VE, HDR-CX560V, HDR-CX560VE, HDR-CX570VE, HDR-CX6, HDR-CX690E, HDR-CX6EK, HDR-CX7, HDR-CX700E, HDR-CX700V, HDR-CX700VE, HDR-CX730E, HDR-CX740VE, HDR-CX7K/E, HDR-CX900E, HDR-HC3, HDR-HC3E, HDR-HC3HK1, HDR-HC5, HDR-HC5E, HDR-HC7, HDR-HC7E, HDR-HC9, HDR-HC9/E, HDR-HC9E, HDR-PJ10, HDR-PJ10E, HDR-PJ10E, HDR-PJ20, HDR-PJ200E, HDR-PJ220E, HDR-PJ260VE, HDR-PJ30E, HDR-PJ30V, HDR-PJ30VE, HDR-PJ40V, HDR-PJ420VE, HDR-PJ50, HDR-PJ50E, HDR-PJ50V, HDR-PJ50VE, HDR-PJ530E, HDR-PJ580VE, HDR-PJ650, HDR-PJ780, HDR-PJ810, HDR-SR10, HDR-SR10/E, HDR-SR10D, HDR-SR10E, HDR-SR11, HDR-SR11/E, HDR-SR11E, HDR-SR12, HDR-SR12/E, HDR-SR12E, HDR-SR5, HDR-SR5C, HDR-SR5E, HDR-SR7, HDR-SR7E, HDR-SR8, HDR-SR8E, HDR-SX-43L, HDR-SX43S, HDR-SX-65L, HDR-SX65R, HDR-TD10, HDR-TD10E, HDR-TG1, HDR-TG1/E, HDR-TG1E, HDR-TG3E, HDR-TG5V, HDR-UX10, HDR-UX19E, HDR-UX20, HDR-UX20/E, HDR-UX3E, HDR-UX5, HDR-UX5E, HDR-UX7, HDR-UX7E, HDR-UX9E, HDR-UX9E, HDR-XR100, HDR-XR105E, HDR-XR106, HDR-XR106E, HDR-XR150, HDR-XR155E, HDR-XR160, HDR-XR160E, HDR-XR200VE, HDR-XR260VE, HDR-XR350, HDR-XR350E, HDR-XR350V, HDR-XR350VE, HDR-XR500V, HDR-XR500VE, HDR-XR5200VE, HDR-XR520V, HDR-XR550, HDR-XR550E, HDR-XR550V, HDR-XR550VE, NEX-VG10, NEX-VG10E
---------	---------------	------	--------	-------------------------	------	--

VSO0030	8718226221674	6.8V	1700mAh	NP-FV70 (met info chip)	Sony	DCR-DVD105E, DCR-DVD106E, DCR-DVD108E, DCR-DVD109E, DCR-DVD110E, DCR-DVD115E, DCR-DVD202E, DCR-DVD203E, DCR-DVD205E, DCR-DVD304E, DCR-DVD305E, DCR-DVD306E, DCR-DVD308E, DCR-DVD310E, DCR-DVD403E, DCR-DVD404E, DCR-DVD405E, DCR-DVD406E, DCR-DVD408E, DCR-DVD410E, DCR-DVD450E, DCR-DVD505E, DCR-DVD506E, DCR-DVD508E, DCR-DVD650E, DCR-DVD850E, DCR-DVD92E, DCR-HC16E, DCR-HC17E, DCR-HC18E, DCR-HC19E, DCR-HC20E, DCR-HC22E, DCR-HC23E, DCR-HC24E, DCR-HC26E, DCR-HC27E, DCR-HC28E, DCR-HC30E, DCR-HC32E, DCR-HC35E, DCR-HC36E, DCR-HC37E, DCR-HC38E, DCR-HC39E, DCR-HC40E, DCR-HC42E, DCR-HC44E, DCR-HC45E, DCR-HC46E, DCR-HC47E, DCR-HC48E, DCR-HC51E, DCR-HC53E, DCR-HC62E, DCR-HC85E, DCR-HC94E, DCR-HC96E, DCR-SR100E, DCR-SR15, DCR-SR15E, DCR-SR190E, DCR-SR200E, DCR-SR20E, DCR-SR290E, DCR-SR300E, DCR-SR30E, DCR-SR32E, DCR-SR33, DCR-SR33E, DCR-SR34, DCR-SR35E, DCR-SR36E, DCR-SR37E, DCR-SR38E, DCR-SR40E, DCR-SR42E, DCR-SR50E, DCR-SR52E, DCR-SR53, DCR-SR55E, DCR-SR57E, DCR-SR58, DCR-SR58E, DCR-SR60E, DCR-SR62E, DCR-SR68/R, DCR-SR68E, DCR-SR68S, DCR-SR70E, DCR-SR72E, DCR-SR73, DCR-SR75E, DCR-SR77E, DCR-SR78, DCR-SR78E, DCR-SR80E, DCR-SR82E, DCR-SR87, DCR-SR88, DCR-SR90E, DCR-SX15, DCR-SX15E, DCR-SX20EK, DCR-SX30E, DCR-SX31E, DCR-SX33, DCR-SX33E, DCR-SX34, DCR-SX34E, DCR-SX41, DCR-SX43R, DCR-SX44, DCR-SX45, DCR-SX45B, DCR-SX45E, DCR-SX45EB, DCR-SX45EL, DCR-SX45ER, DCR-SX45L, DCR-SX45R, DCR-SX45S, DCR-SX50E, DCR-SX53, DCR-SX53E, DCR-SX63, DCR-SX65, DCR-SX65B, DCR-SX65E, DCR-SX65S, DCR-SX73, DCR-SX73E, DCR-SX83, DCR-SX85, DCR-SX85E, DCR-SX85S, HDE-SX43E, HDE-SX65E, HDR-CX105VE, HDR-CX106VE, HDR-CX110, HDR-CX110/L, HDR-CX110/R, HDR-CX110B, HDR-CX115, HDR-CX115E, HDR-CX115VE, HDR-CX116, HDR-CX116E, HDR-CX116VE, HDR-CX11VE, HDR-CX120, HDR-CX130, HDR-CX130B, HDR-CX130E, HDR-CX130EB, HDR-CX130EL, HDR-CX130ER, HDR-CX130R, HDR-CX150, HDR-CX155, HDR-CX155E, HDR-CX155VE, HDR-CX160, HDR-CX160B, HDR-CX160E, HDR-CX170, HDR-CX180, HDR-CX180E, HDR-CX180EB, HDR-CX180EL, HDR-CX180ER, HDR-CX180ES, HDR-CX190E, HDR-CX200E, HDR-CX210E, HDR-CX220E, HDR-CX250E, HDR-CX260E, HDR-CX280E, HDR-CX300, HDR-CX300E, HDR-CX305, HDR-CX305E, HDR-CX305VE, HDR-CX350, HDR-CX350E, HDR-CX350V, HDR-CX350VE, HDR-CX360E, HDR-CX360V, HDR-CX360VE, HDR-CX370V, HDR-CX500V, HDR-CX505VE, HDR-CX520V, HDR-CX520VE, HDR-CX550, HDR-CX550E, HDR-CX550V, HDR-CX550VE, HDR-CX560V, HDR-CX560VE, HDR-CX570VE, HDR-CX690E, HDR-CX6EK, HDR-CX700E, HDR-CX700V, HDR-CX700VE, HDR-CX730E, HDR-CX740VE, HDR-CX900E, HDR-HC3E, HDR-HC5E, HDR-HC7E, HDR-HC9, HDR-HC9E, HDR-PJ10, HDR-PJ10E, HDR-PJ20, HDR-PJ200E, HDR-PJ220E, HDR-PJ260VE, HDR-PJ30E, HDR-PJ30V, HDR-PJ30VE, HDR-PJ40V, HDR-PJ420VE, HDR-PJ50, HDR-PJ50E, HDR-PJ50V, HDR-PJ50VE, HDR-PJ580VE, HDR-PJ650, HDR-PJ780, HDR-SR10E, HDR-SR11E, HDR-SR12E, HDR-SR5E, HDR-SR7E, HDR-SR8E, HDR-SX-43L, HDR-SX43S, HDR-SX-65L, HDR-SX65R, HDR-TD10, HDR-TD10E, HDR-UX19E, HDR-UX3E, HDR-UX5E, HDR-UX7E, HDR-UX9E, HDR-XR100, HDR-XR105E, HDR-XR106, HDR-XR106E, HDR-XR150, HDR-XR155E, HDR-XR160, HDR-XR160E, HDR-XR200VE, HDR-XR260VE, HDR-XR350, HDR-XR350E, HDR-XR350V, HDR-XR350VE, HDR-XR500V, HDR-XR500VE, HDR-XR5200VE, HDR-XR520V, HDR-XR550, HDR-XR550E, HDR-XR550V, HDR-XR550VE, NEX-VG10, NEX-VG10E, NEX-VG20E
---------	---------------	------	---------	-------------------------	------	---

VSO0031	8718226221681	6.8V	2900mAh	NP-FV100 (met info chip)	Sony	DCR-DVD105E, DCR-DVD106E, DCR-DVD108E, DCR-DVD109E, DCR-DVD110E, DCR-DVD115E, DCR-DVD202E, DCR-DVD203E, DCR-DVD205E, DCR-DVD304E, DCR-DVD305E, DCR-DVD306E, DCR-DVD308E, DCR-DVD310E, DCR-DVD403E, DCR-DVD404E, DCR-DVD405E, DCR-DVD406E, DCR-DVD408E, DCR-DVD410E, DCR-DVD450E, DCR-DVD505E, DCR-DVD506E, DCR-DVD508E, DCR-DVD650E, DCR-DVD850E, DCR-DVD92E, DCR-HC16E, DCR-HC17E, DCR-HC18E, DCR-HC19E, DCR-HC20E, DCR-HC22E, DCR-HC23E, DCR-HC24E, DCR-HC26E, DCR-HC27E, DCR-HC28E, DCR-HC30E, DCR-HC32E, DCR-HC35E, DCR-HC36E, DCR-HC37E, DCR-HC38E, DCR-HC39E, DCR-HC40E, DCR-HC42E, DCR-HC44E, DCR-HC45E, DCR-HC46E, DCR-HC47E, DCR-HC48E, DCR-HC51E, DCR-HC53E, DCR-HC62E, DCR-HC85E, DCR-HC94E, DCR-HC96E, DCR-SR100E, DCR-SR15, DCR-SR15E, DCR-SR190E, DCR-SR200E, DCR-SR20E, DCR-SR290E, DCR-SR300E, DCR-SR30E, DCR-SR32E, DCR-SR33, DCR-SR33E, DCR-SR34, DCR-SR35E, DCR-SR36E, DCR-SR37E, DCR-SR38E, DCR-SR40E, DCR-SR42E, DCR-SR50E, DCR-SR52E, DCR-SR53, DCR-SR55E, DCR-SR57E, DCR-SR58, DCR-SR58E, DCR-SR60E, DCR-SR62E, DCR-SR68/R, DCR-SR68E, DCR-SR68S, DCR-SR70E, DCR-SR72E, DCR-SR73, DCR-SR75E, DCR-SR77E, DCR-SR78, DCR-SR78E, DCR-SR80E, DCR-SR82E, DCR-SR87, DCR-SR88, DCR-SR90E, DCR-SX15, DCR-SX15E, DCR-SX20EK, DCR-SX30E, DCR-SX31E, DCR-SX33, DCR-SX33E, DCR-SX34, DCR-SX34E, DCR-SX41, DCR-SX43R, DCR-SX44, DCR-SX45, DCR-SX45B, DCR-SX45E, DCR-SX45EB, DCR-SX45EL, DCR-SX45ER, DCR-SX45L, DCR-SX45R, DCR-SX45S, DCR-SX50E, DCR-SX53, DCR-SX53E, DCR-SX63, DCR-SX65, DCR-SX65B, DCR-SX65E, DCR-SX65S, DCR-SX73, DCR-SX73E, DCR-SX83, DCR-SX85, DCR-SX85E, DCR-SX85S, HDE-SX43E, HDE-SX65E, HDR-CX105VE, HDR-CX106VE, HDR-CX110, HDR-CX110/L, HDR-CX110/R, HDR-CX110B, HDR-CX115, HDR-CX115E, HDR-CX115VE, HDR-CX116, HDR-CX116E, HDR-CX116VE, HDR-CX11VE, HDR-CX120, HDR-CX130, HDR-CX130B, HDR-CX130E, HDR-CX130EB, HDR-CX130EL, HDR-CX130ER, HDR-CX130R, HDR-CX150, HDR-CX155, HDR-CX155E, HDR-CX155VE, HDR-CX160, HDR-CX160B, HDR-CX160E, HDR-CX170, HDR-CX180, HDR-CX180E, HDR-CX180EB, HDR-CX180EL, HDR-CX180ER, HDR-CX180ES, HDR-CX190E, HDR-CX200E, HDR-CX210E, HDR-CX220E, HDR-CX250E, HDR-CX260E, HDR-CX280E, HDR-CX300, HDR-CX305, HDR-CX305E, HDR-CX305VE, HDR-CX350, HDR-CX350E, HDR-CX350V, HDR-CX350VE, HDR-CX360E, HDR-CX360V, HDR-CX360VE, HDR-CX370V, HDR-CX500V, HDR-CX505VE, HDR-CX520V, HDR-CX520VE, HDR-CX550, HDR-CX550E, HDR-CX550V, HDR-CX550VE, HDR-CX560V, HDR-CX560VE, HDR-CX570VE, HDR-CX690E, HDR-CX6EK, HDR-CX700E, HDR-CX700V, HDR-CX700VE, HDR-CX730E, HDR-CX740VE, HDR-CX900E, HDR-HC3E, HDR-HC5E, HDR-HC7E, HDR-HC9, HDR-HC9E, HDR-PJ10, HDR-PJ10E, HDR-PJ20, HDR-PJ200E, HDR-PJ220E, HDR-PJ260VE, HDR-PJ30E, HDR-PJ30V, HDR-PJ30VE, HDR-PJ40V, HDR-PJ420VE, HDR-PJ50, HDR-PJ50E, HDR-PJ50V, HDR-PJ50VE, HDR-PJ580VE, HDR-PJ650, HDR-PJ780, HDR-SR10E, HDR-SR11E, HDR-SR12E, HDR-SR5E, HDR-SR7E, HDR-SR8E, HDR-SX-43L, HDR-SX43S, HDR-SX-65L, HDR-SX65R, HDR-TD10, HDR-TD10E, HDR-UX19E, HDR-UX3E, HDR-UX5E, HDR-UX7E, HDR-UX9E, HDR-XR100, HDR-XR105E, HDR-XR106, HDR-XR106E, HDR-XR150, HDR-XR155E, HDR-XR160, HDR-XR160E, HDR-XR200VE, HDR-XR260VE, HDR-XR350, HDR-XR350E, HDR-XR350V, HDR-XR350VE, HDR-XR500V, HDR-XR500VE, HDR-XR5200VE, HDR-XR520V, HDR-XR550, HDR-XR550E, HDR-XR550V, HDR-XR550VE, NEX-VG10, NEX-VG10E
VSO0032	8718503021584	14.4V	2600mAh	BP-U30	Sony	PMW-EX1, PMW-EX3
VSO0033	8718503021591	14.4V	5200mAh	BP-U60	Sony	PMW-EX1, PMW-EX3
VSO0034	8718503025711	14.4V	5600mAh	BP-U65	Sony	PMW-EX1, PMW-EX3

VSO0035	8718503026527	7.2V	10400mAh	NP-F990	Sony	CCD-RV200, CCD-SC5, CCD-SC5/E, CCD-SC6, CCD-SC65, CCD-SC7, CCD-SC7/E, CCD-SC8/E, CCD-SC9, CCD-TR1, CCD-TR11, CCD-TR1100E, CCD-TR12, CCD-TR18, CCD-TR18E, CCD-TR1E, CCD-TR2, CCD-TR200, CCD-TR205, CCD-TR215, CCD-TR2200E, CCD-TR2300, CCD-TR2300E, CCD-TR280PK, CCD-TR290PK, CCD-TR3, CCD-TR300, CCD-TR3000, CCD-TR3000E, CCD-TR3100E, CCD-TR311E, CCD-TR315, CCD-TR315E, CCD-TR317, CCD-TR3200E, CCD-TR3300, CCD-TR3300E, CCD-TR411E, CCD-TR412E, CCD-TR413, CCD-TR414, CCD-TR415E, CCD-TR416, CCD-TR417, CCD-TR417E, CCD-TR425E, CCD-TR427, CCD-TR427E, CCD-TR500, CCD-TR511E, CCD-TR512E, CCD-TR515E, CCD-TR516, CCD-TR516E, CCD-TR517, CCD-TR57, CCD-TR610, CCD-TR617, CCD-TR617E, CCD-TR618, CCD-TR618E, CCD-TR640E, CCD-TR67, CCD-TR710, CCD-TR713E, CCD-TR716, CCD-TR717, CCD-TR717E, CCD-TR718, CCD-TR718E, CCD-TR728, CCD-TR728E, CCD-TR730E, CCD-TR76, CCD-TR760E, CCD-TR810E, CCD-TR818, CCD-TR840E, CCD-TR845E, CCD-TR87, CCD-TR910, CCD-TR913E, CCD-TR917, CCD-TR918, CCD-TR918E, CCD-TR930, CCD-TR940, CCD-TR950E, CCD-TR97, CCD-TR97, CCD-TRV15, CCD-TRV16, CCD-TRV16E, CCD-TRV201, CCD-TRV215, CCD-TRV25, CCD-TRV26E, CCD-TRV27E, CCD-TRV3000, CCD-TRV315, CCD-TRV35, CCD-TRV36, CCD-TRV36E, CCD-TRV37, CCD-TRV37E, CCD-TRV4, CCD-TRV41, CCD-TRV43, CCD-TRV45K, CCD-TRV46, CCD-TRV46E, CCD-TRV47, CCD-TRV47E, CCD-TRV48, CCD-TRV48E, CCD-TRV49, CCD-TRV51, CCD-TRV517, CCD-TRV54E, CCD-TRV56E, CCD-TRV57, CCD-TRV57E, CCD-TRV58, CCD-TRV59, CCD-TRV59E, CCD-TRV615, CCD-TRV62, CCD-TRV63, CCD-TRV65, CCD-TRV66, CCD-TRV66E, CCD-TRV66K, CCD-TRV67, CCD-TRV67E, CCD-TRV68, CCD-TRV71, CCD-TRV715, CCD-TRV716, CCD-TRV72, CCD-TRV720, CCD-TRV75, CCD-TRV78, CCD-TRV78E, CCD-TRV80PK, CCD-TRV81, CCD-TRV815, CCD-TRV82, CCD-TRV85, CCD-TRV85K, CCD-TRV86PK, CCD-TRV87, CCD-TRV87E, CCD-TRV88, CCD-TRV90, CCD-TRV91, CCD-TRV92, CCD-TRV93, CCD-TRV930, CCD-TRV940, CCD-TRV94E, CCD-TRV95, CCD-TRV95E, CCD-TRV95K, CCD-TRV98, CCD-TRV98E, CCD-TRV99, CVX-V18NS(Nightshot Camers), CVX-V18NSP(Nightshot Camers), DCR-TR7 Series, DCR-TR7000, DCR-TR7000E, DCR-TR7100E, DCR-TR8000, DCR-TR8000E, DCR-TR8100, DCR-TR8100E, DCR-TRU47E, DCR-TRV103, DCR-TRV110, DCR-TRV110E, DCR-TRV110K, DCR-TRV120, DCR-TRV120E, DCR-TRV125, DCR-TRV125E, DCR-TRV130, DCR-TRV130E, DCR-TRV203, DCR-TRV210, DCR-TRV210E, DCR-TRV220K, DCR-TRV310, DCR-TRV310E, DCR-TRV310K, DCR-TRV315, DCR-TRV320, DCR-TRV320E, DCR-TRV420, DCR-TRV420E, DCR-TRV49E, DCR-TRV5, DCR-TRV510, DCR-TRV520, DCR-TRV520E, DCR-TRV525, DCR-TRV58E, DCR-TRV620, DCR-TRV620E, DCR-TRV620K, DCR-TRV7, DCR-TRV720, DCR-TRV720E, DCR-TRV735K, DCR-TRV820, DCR-TRV820E, DCR-TRV820K, DCR-TRV9, DCR-TRV900, DCR-TRV900E, DCR-TRV935K, DCR-TV900, DCR-TV900E, DCR-VX2000, DCR-VX2000E, DCR-VX2001, DCR-VX2100, DCR-VX2100E, DCR-VX9 Series, DCR-VX9000, DSR-200, DSR-DU1(Video Disk Unit), DSR-PD100, DSR-PD100A, DSR-PD100AP, DSR-PD190P, DSR-V10(Video Walkman), DSR-V10P(Video Walkman), GV-A100(Video Walkman), GV-A500, GV-A500E, GV-A700(Video Walkman), GV-D200(Video Walkman), GV-D300(Video Walkman), GV-D800(Video Walkman), GV-D900(Video Walkman), HDR-AX2000, HDR-AX2000E, HDR-FX1, HDR-FX7, HDR-FX7E, HVR-HD1000U, HVR-M10C(videocassette recorder), HVR-M10E(videocassette recorder), HVR-M10N(videocassette recorder), HVR-M10P(videocassette recorder), HVR-M10U(videocassette recorder), HVR-V11, HVR-V1U, HVR-Z1, HVR-Z1C, HVR-Z1E, HVR-Z1J, HVR-Z1N, HVR-Z1P, HVR-Z1U, HVR-Z5J, MVC-FDR1(Digital Mavica), MVC-FDR1E(Digital Mavica), MVC-FDR3(Digital Mavica), MVC-FDR3E(Digital Mavica), HVL-ML20 (Marine Light), EVO-250 (Video Recorder), MPK-DVF4, PBD-D50(DVD Player), PBD-V30(DVD Player), PLM-100(Glasstron), PLM-50(Glasstron), PLM-A35(Glasstron), PLM-A55(Glasstron), Q002-HDR1, UPX-2000(Printer), HVL-20DW (Video Light), HVL-20DW2(Video Light)
VSU0001	8717825941938	3.7V	600mAh	DB-L20	Sanyo	Xacti DMX-C1, Xacti DMX-C4, Xacti DMX-C4(D), Xacti DMX-C4(L), Xacti DMX-C4(N), Xacti DMX-C40, Xacti DMX-C40(S), Xacti DMX-C5, Xacti DMX-C5(S), Xacti DMX-C5(T), Xacti DMX-C5(W), Xacti DMX-C6, Xacti DMX-C6(K), Xacti DMX-C6(R), Xacti DMX-C6(S), Xacti DMX-CA6, Xacti DMX-CA65, Xacti DMX-CG6, Xacti DMX-CG65, Xacti DMX-CG65-G, Xacti DMX-CG65-K, Xacti DMX-CG65-S, Xacti DMX-CG6-L, Xacti DMX-CG6-P, Xacti DMX-CG6-S, Xacti DMX-CG9, Xacti DSC-C4, Xacti DSC-C5, Xacti DSC-E6, Xacti DSC-J4, Xacti E60, Xacti VPC-C1, Xacti VPC-C1EX, Xacti VPC-C4, Xacti VPC-C40, Xacti VPC-C4E, Xacti VPC-C4EX, Xacti VPC-C4GX, Xacti VPC-C4S, Xacti VPC-C5, Xacti VPC-C5E, Xacti VPC-C5EX, Xacti VPC-C5GX, Xacti VPC-C6, Xacti VPC-CG6, Xacti VPC-E6 EX, Xacti VPC-E60, Xacti VPC-E60EX, Xacti VPC-E6U, Xacti VPC-J4, Xatic VPC-CA6, Xatic VPC-E6, Xatic VPC-E7, Xacti DMX-CA8, Xacti DMX-CA9, Xacti E1, Xacti VPC-C1, Xacti VPC-C4, Xacti VPC-C40, Xacti VPC-C5, Xacti VPC-C6, Xacti VPC-CA6 Active, Xacti VPC-CA65, Xacti VPC-CA8, Xacti VPC-CA9, Xacti VPC-CA9EXBK-B, Xacti VPC-CA9EXG-B, Xacti VPC-CA9EXR-B, Xacti VPC-CA9G, Xacti VPC-CA9R, Xacti VPC-CG6, Xacti VPC-CG65, Xacti VPC-CG9, Xacti VPC-CG9BK, Xacti VPC-E2BL, Xacti VPC-E2W, Xacti VPC-E6, Xacti VPC-E60, Xacti VPC-E6U, Xacti VPC-E7, Xacti VPC-J4, Xacti VPC-J4EX
VSU0002	8717825942133	3.7V	1250mAh	DB-L40A	Sanyo	VPC-HD700, Xacti DMX-HD1, Xacti DMX-HD1A, Xacti DMX-HD2, Xacti DMX-HD800, Xacti HD1, Xacti VPC-HD1, Xacti VPC-HD1E, Xacti VPC-HD1EX, Xacti VPC-HD2, Xatic VPC-HD1A
VSU0003	8718226221179	3.7V	1200mAh	DB-L90	Sanyo	Xacti DMX-SH11, Xacti VPC-SH1, Xacti VPC-SH1BK, Xacti VPC-SH1EXBK, Xacti VPC-SH1EXR, Xacti VPC-SH1GX, Xacti VPC-SH1R