

Data Transfer Software 2.0.23 and USB driver 2.8 for Macintosh OS 10.7 Lion / 10.6 Snow Leopard

Thank you for purchasing an L-758 light meter. These instructions explain how to upgrade the application software (“SEKONIC Data Transfer Software” for Macintosh) and the USB driver for the latest versions of the Macintosh operating system: OS 10.7 (Lion) and OS 10.6 (Snow Leopard).

(There is no change to the application software and USB driver for Windows.)

<<Current>>

- Application Software, “Data Transfer Software” for Macintosh•••version 2.0.19
- USB driver for Macintosh•••version 1.02.2 (for OS 10.3 to 10.5)

<<Upgrade>>

- Application Software, “Data Transfer Software” for Macintosh - - - version 2.0.23
 - Bug fix for inputting image(s) manually that do not include the Exif information (for OS 10.4 to 10.7)
- USB driver for Macintosh - - - version 2.8
 - For OS 10.7 (Lion) and 10.6 (Snow Leopard) only.
 - * For OS 10.5 and earlier, use the existing version (1.02.2)

The new application and the USB driver can be downloaded from our website:

<http://www.sekonic.com/Support/Downloads/DTSSoftwareforMACandWindows.aspx>

To see how to install the upgraded application software and USB driver, please see the next section, entitled “How to install and uninstall the application software and USB driver for Macintosh.”

- For customers using Macintosh OS 10.3 to 10.5
 - If you previously installed earlier versions of the application software and USB driver:
Delete the old application software only and install the new application software.
The current USB driver can be used as it is.
 - If you are installing the upgraded software and USB driver for the first time:
Install the new application software and the new USB driver.
- For customers using Macintosh OS 10.6 and 10.7
 - If you previously installed earlier versions of the application software and USB driver:
Uninstall the old USB driver and delete the application software. Then install the new application software and USB driver.
 - If you are installing the upgraded software and USB driver for the first time:
Install the new application software and the new USB driver.

How to install and uninstall the application software and USB driver for Macintosh Computers

These instructions include the following:

1. Uninstalling the earlier version of the USB driver (ver. 1.02.2)
2. Uninstalling the earlier version of the Data Transfer Software (ver. 2.019)
3. Installing the new Data Transfer Software (ver. 20.0.23)
4. Installing the new USB driver (ver. 2.8)
5. Uninstalling the new USB driver (ver. 2.8) when the latest Data Transfer Software is uninstalled and longer used. (**Perform the procedure only if you no longer want the Data Transfer Software installed on your computer*)

■ INPORTANT


- ◆ Uninstall the earlier version of the USB driver before uninstalling the earlier version of the Data Transfer Software. If the software is uninstalled first, the earlier version of the USB driver cannot be uninstalled.
- ◆ After transferring data from the computer to the light meter, first turn OFF the light meter and then CLOSE the Data Transfer Software.

■ Preparation


- ◆ Obtain a copy of the new Data Transfer Software (ver. 2.0.23) from www.sekonic.com
- ◆ Obtain a copy of the new USB driver for Macintosh OSX 10.7 and 10.6 (ver. 2.8)
- ◆ Password for authentication
Ask your computer system administrator.

1. Uninstalling the earlier version of the USB driver (ver. 1.02.2)


- 1) Close all applications currently running on your computer.
- 2) Open "Macintosh HD" and then double-click the "Applications" folder.
- 3) Select the "SEKONIC" folder, and double-click the "SEKONIC Lightmeter Uninstaller" file.

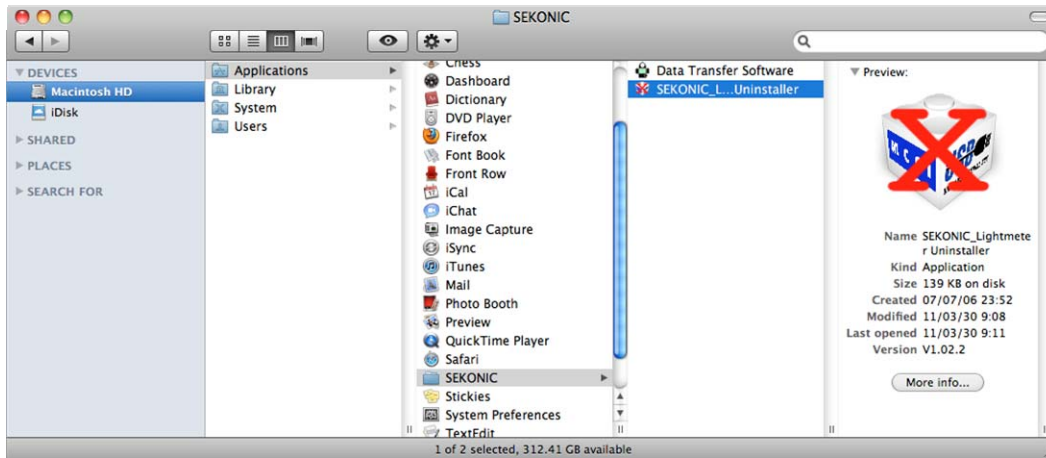

- 4) You are now ready to uninstall the earlier version of the USB driver. To continue, click the [Uninstall] button.

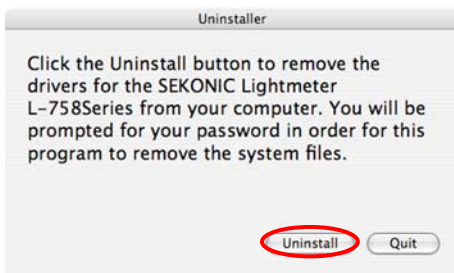

- 5) The uninstall confirmation screen is displayed. To continue, click the [OK] button.

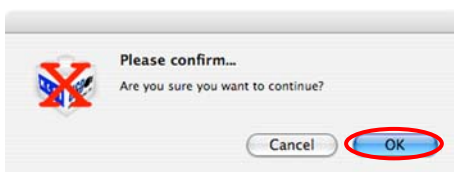

- 6) Authentication is run. Make entries in "Name" and "Password" and click the [OK] button.



7) Uninstalling is now complete. Click the [OK] button.




8) Restart your computer to complete the uninstall process.

2. Uninstalling the earlier version of the Data Transfer Software (ver. 2.0.19)

- 1) Close all applications that are currently running on your computer.
- 2) Open "Macintosh HD" and then double-click the "Applications" folder.
- 3) To remove the application software, follow the instructions below based on your specific OS (choose either 'a' or 'b').
 - a) If you are currently using Macintosh OS 10.3 to 10.5, with current Digital Transfer Software and USB driver:
 - Delete the current Digital Transfer Software only and install the Digital Transfer Software.
 - The current USB driver can be used as it is.


✧ Note

To delete the application software, move the "Data Transfer Software application" in the "SEKONIC" folder to Trash. Leave the USB driver of "SEKONIC Light meter Uninstaller" in place because it will be necessary to uninstall it later.

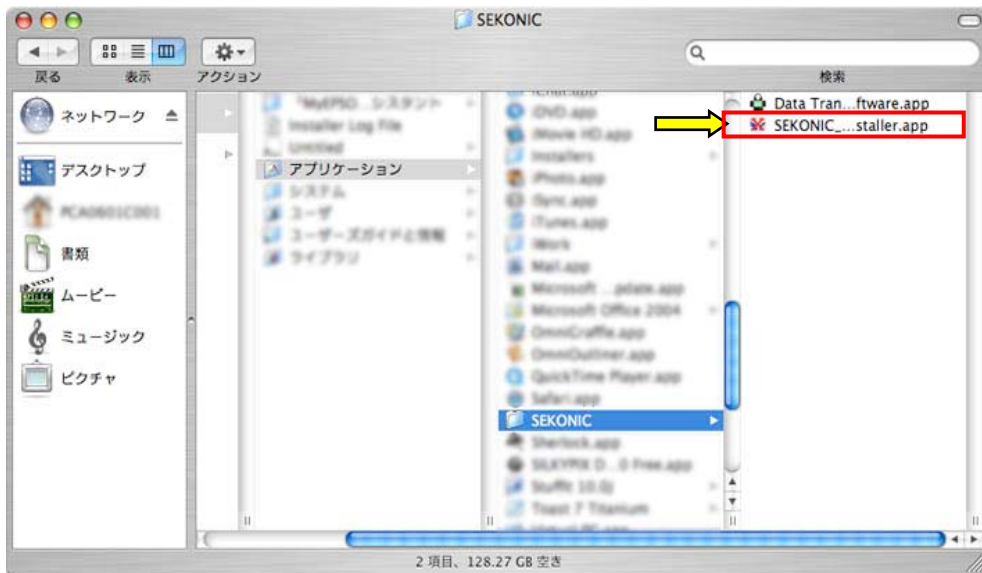

You are required to input the password (same as you did for installation).

- b) If you are currently using Macintosh OS 10.6 or 10.7 with current Digital Transfer Software and USB driver:
- First uninstall the current USB driver. Then move the “SEKONIC” folder, including the Digital Transfer Software, to Trash.

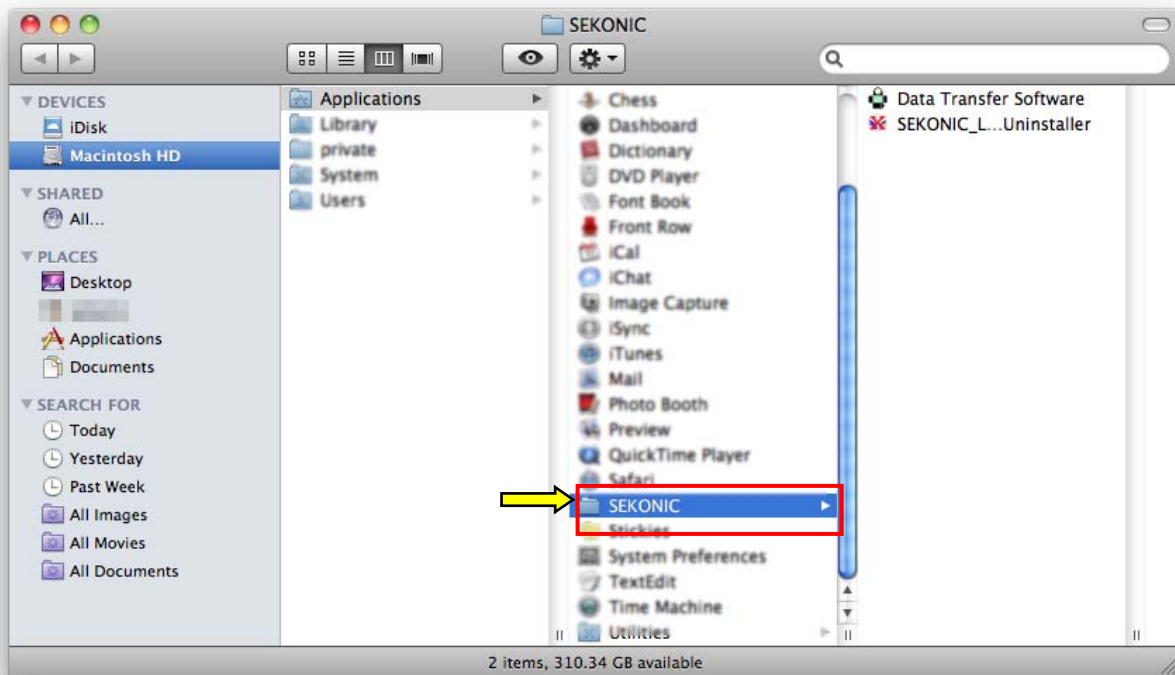

◇ Reference

The profile data will remain after the Digital Transfer Software application has been uninstalled. If you want to completely delete the profile data, select [Delete Profiles] before uninstalling the application. (See Software Guide for Data Transfer Software ver. 2.0)

4) Click on the “Data Transfer Software” icon in the dock and hold it.



5) Select “Remove from dock”




3. Installing the new Data Transfer Software (ver. 2.0.023)

1) Unzip the file (Sekonic USB Driver Installer.mpkg.zip) to see the following file appear.


2) Double-click the file to see the following screen appear.



3) Click the [Continue] button.

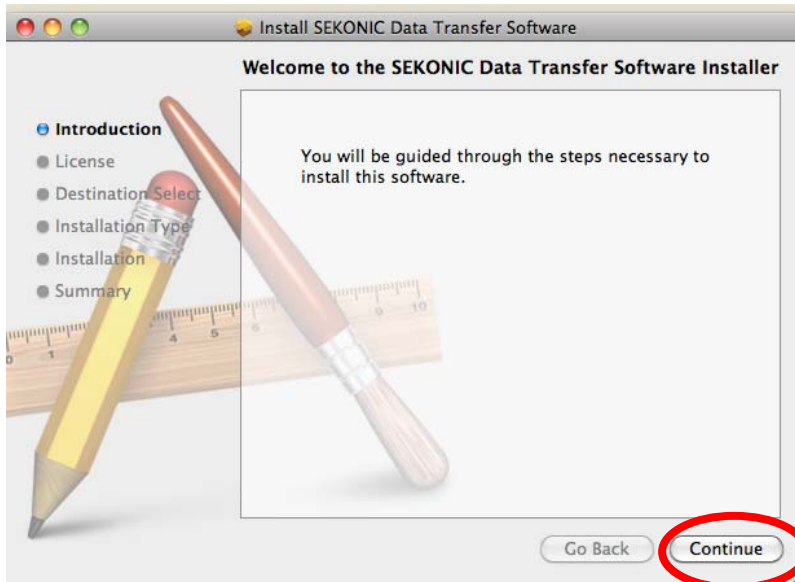


4) Click the [Agree] button if you agree to its terms and conditions.

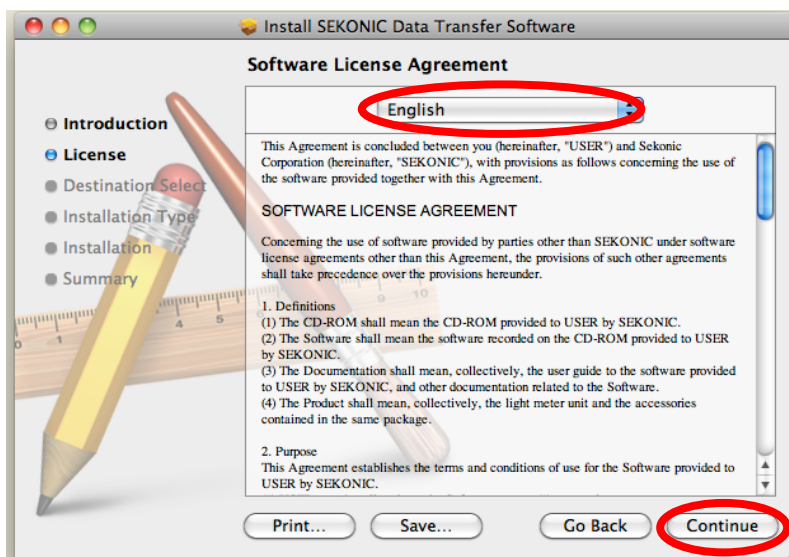


✧ IMPORTANT

- If an earlier version of *Data Transfer Software* is installed, uninstall it, and then install this version of *Data Transfer Software*.
- If you select a language that differs from that of the OS on your computer, *Data Transfer Software* can be installed, but corrupted characters may be displayed.
- If you accidentally install the wrong language version of *Data Transfer Software*, first uninstall it, and then re-install the correct language version. The method for uninstalling the software is same as uninstalling the earlier version of the *Data Transfer Software* (ver. 2.019)


5) Click the [Agree] button if you agree to its terms and conditions.

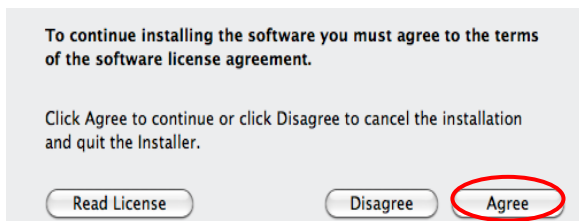


6) Confirm that the installation folder volume is correct, and then click the [Install] button. If you want to install the Digital Transfer Software in a different folder, click the [Change Install Location] button and then select the folder you want.

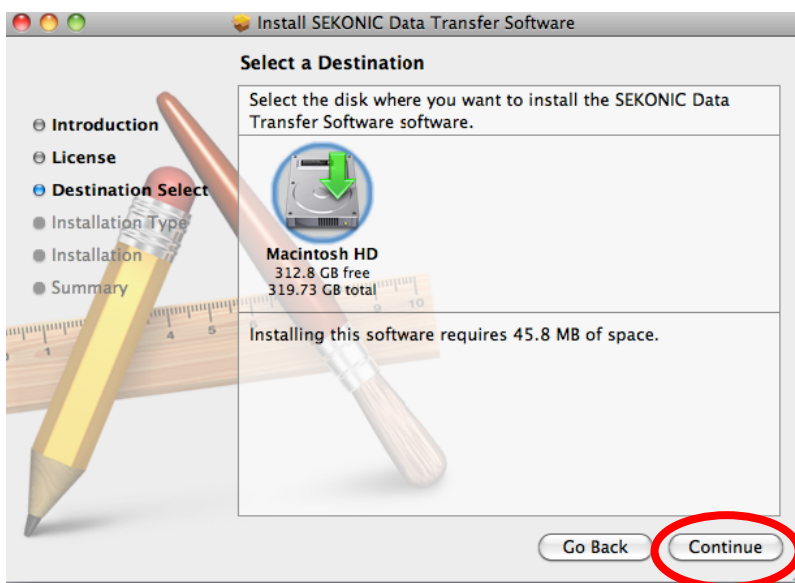


7) To continue installing, click the [Continue installation] button

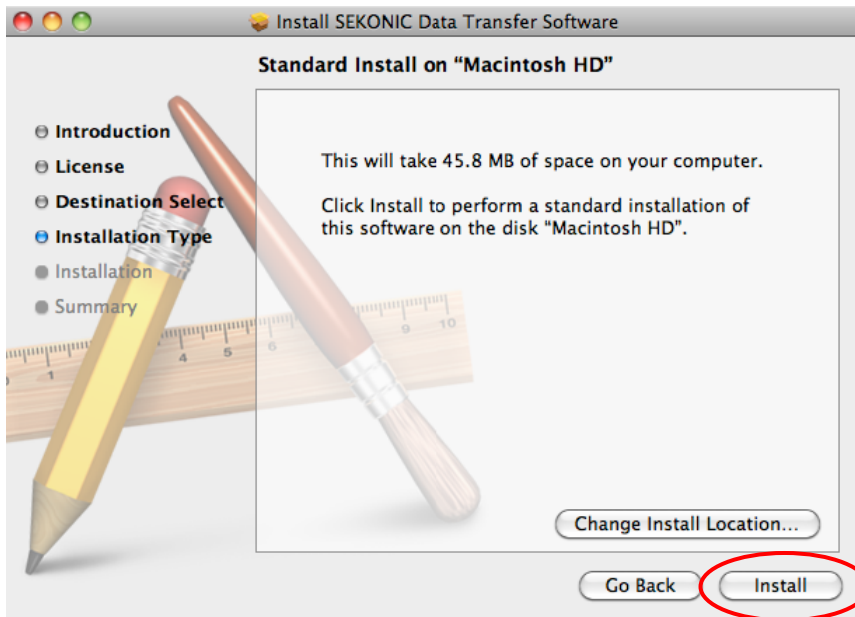

8) Authentication is run. Make entries in "Name" and "Password" and click the [OK] button.

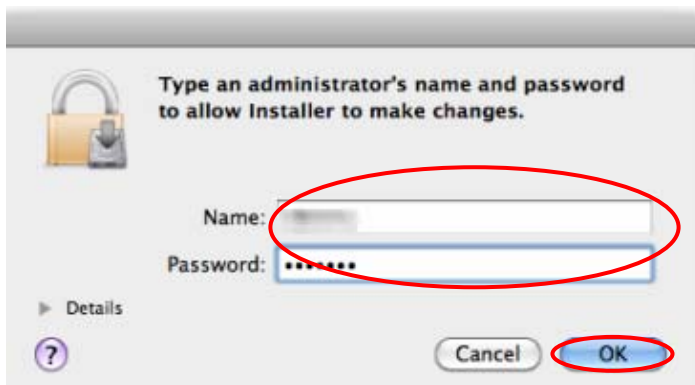

9) Installation of the Digital Transfer Software is now complete. Click [Close] button.

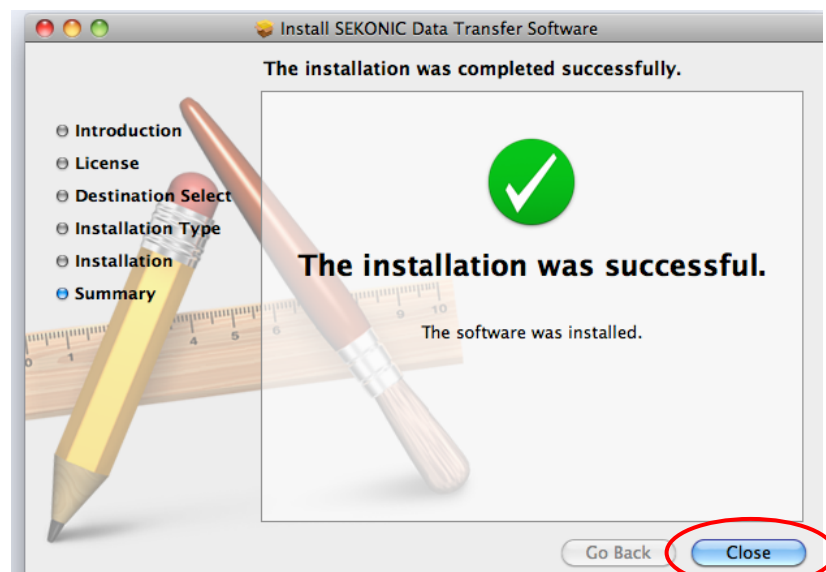


4. Installing the new USB driver (ver. 2.8)


- 1) Unzip the file (Sekonic USB Driver Installer.mpkg.zip) on your computer.
- 2) Double-click the [Sekonic USB Driver Installer.mpkg] icon to see the following screen appear.




- 3) Click [Continue] button

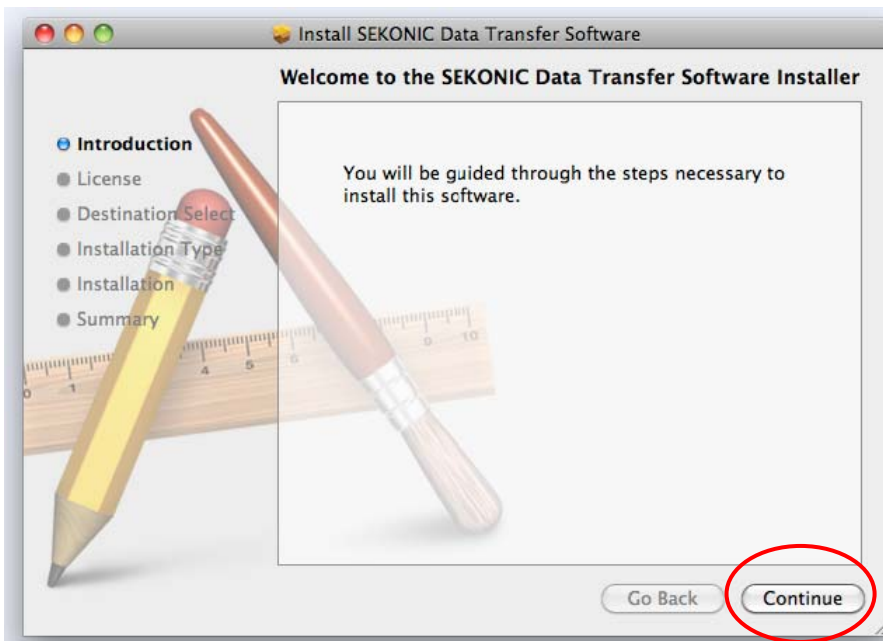


4) The license agreement is displayed. Read the agreement, and click the [Continue] button.

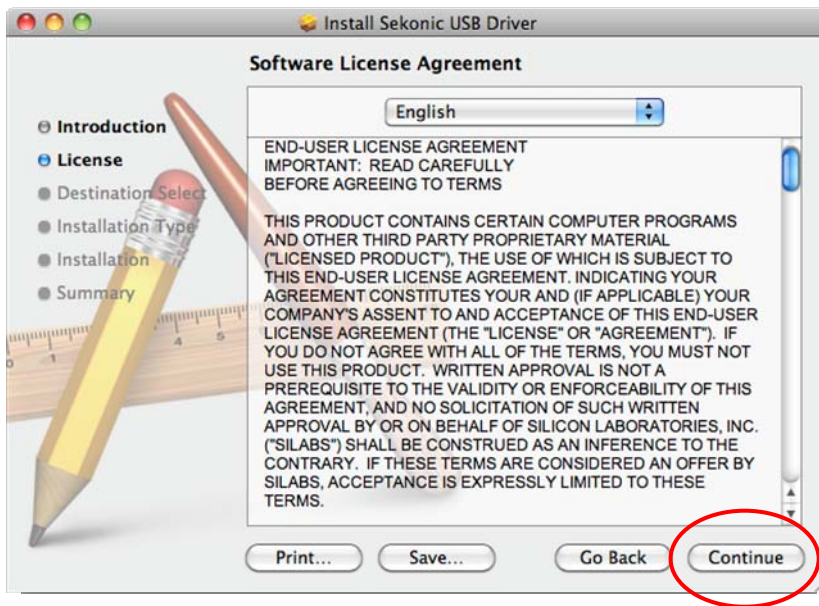


5) Click the [Agree] button if you agree to its terms and conditions.

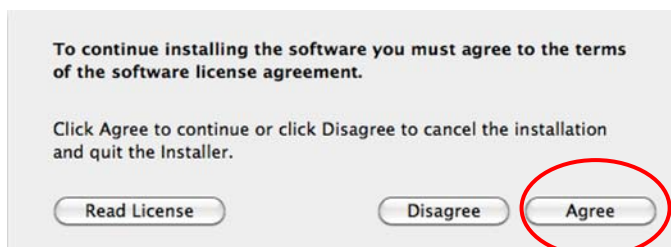


- 6) Confirm that the installation folder volume is correct, and then click the [Install] button. If you want to install in a different folder, click the [Change Install Location] button and then select the folder you want.

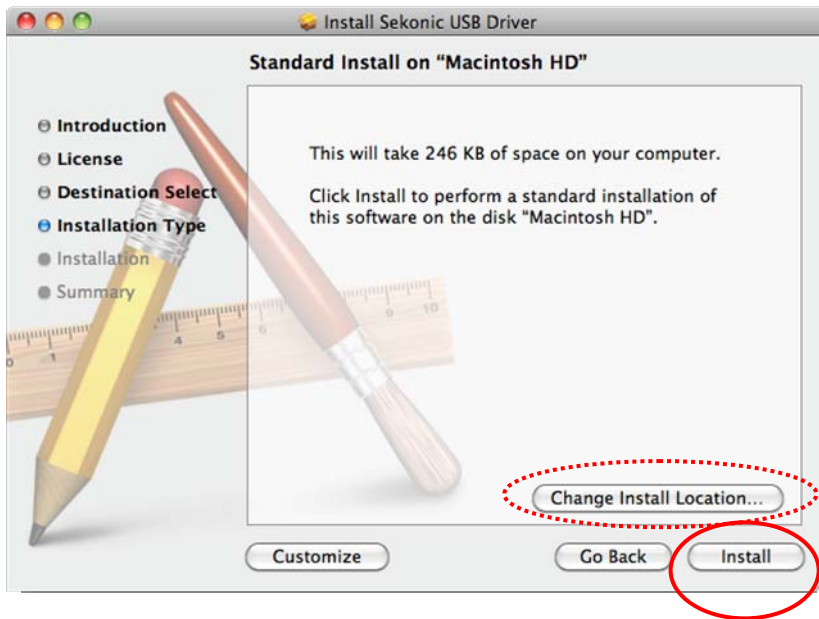


- 7) Authentication is run. Make entries in "Name" and "Password" and click the [OK] button.

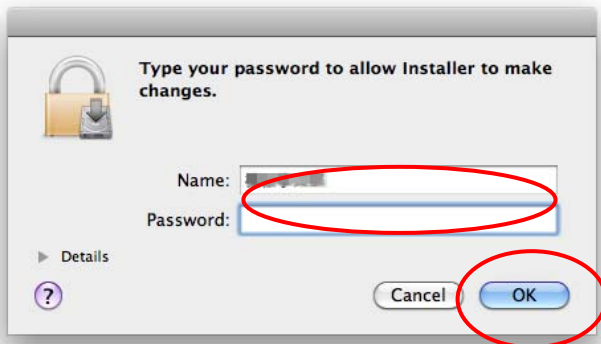

8) To continue installing, click the [Continue installation] button.

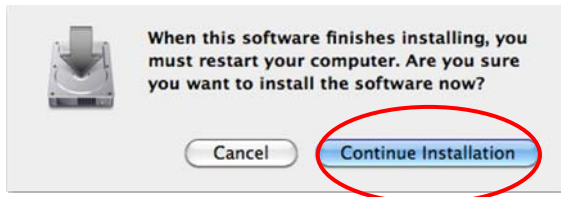

9) Installation is now complete. You must restart your computer after the installation. Click the Restart button to restart the computer.

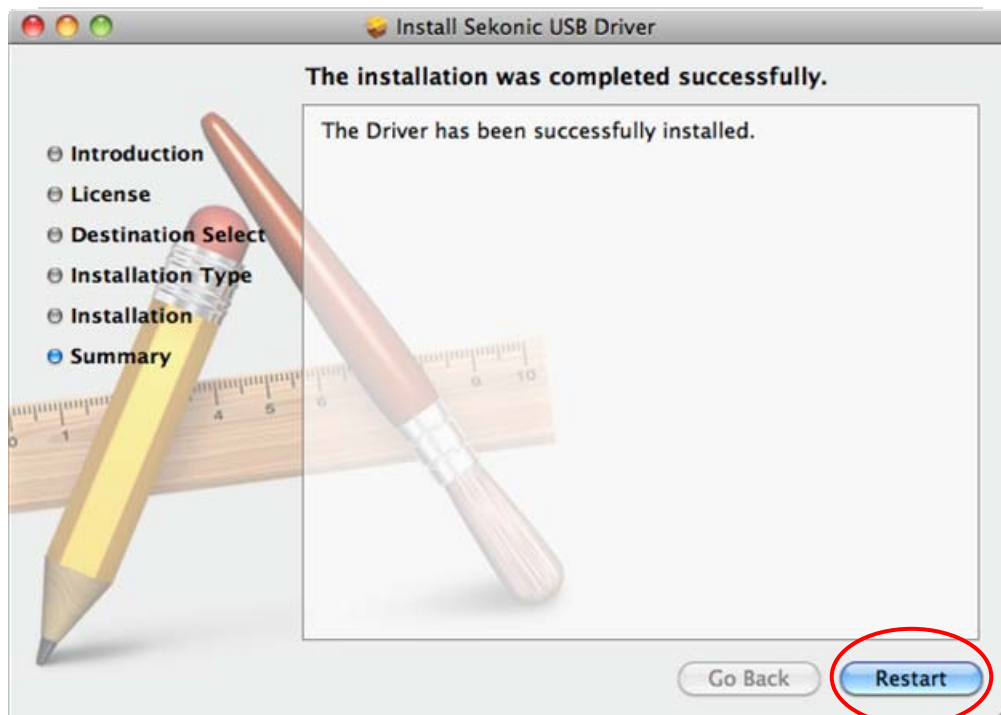


The installation of USB driver is finished.

5. **Uninstalling the new USB driver (ver. 2.8) when latest Data Transfer Software is uninstalled and longer used**

- 1) Close all applications that are currently running on your computer
- 2) Open the folder `"/System/Library/Extensions/"` from the Finder and find the following two files.

SEKONIC_Lightmeter.kext

SEKONIC_Lightmeter64.kext

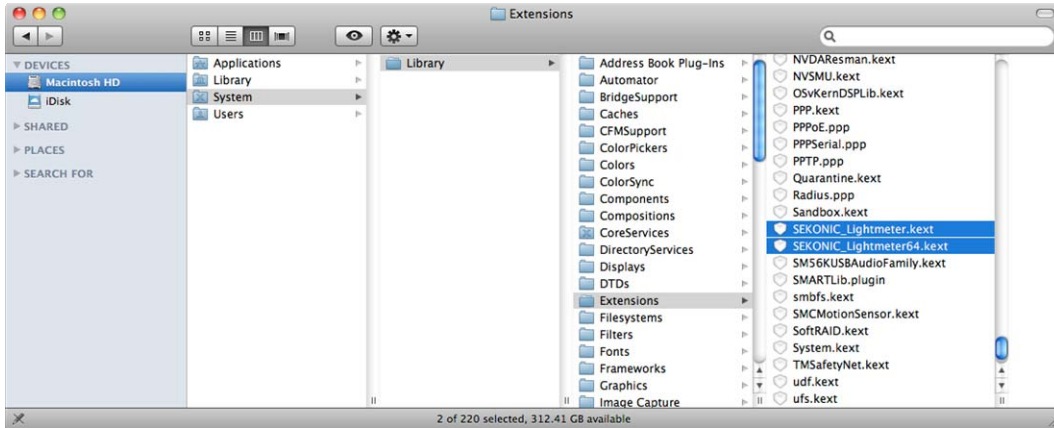

- 3) Move above two files to Trash. You are required to input the password, so input your password (same as you did for installation).

- 4) Uninstalling the USB driver is finished.